
# GuestCall® Paging w/ Coaster Pagers Quick Setup Guide

#### Components

- JTECH Transmitter Applies to models: IQ Base, NEO, IStation
- **Coaster Pagers**
- Coaster Charger





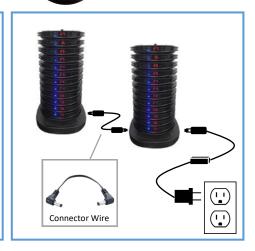

### Step 1

Lock the antenna to the connector on the transmitter by placing the antenna on the connector and twisting left to lock in place.

#### Step 2

Plug the power supply into the transmitter and then into a standard 110-240v outlet. A surge protector is recommended.

#### Step 3


Compile charger bases and connector wires if applicable. Plug charger power supply into charger and then into a standard outlet. Surge protection is recommended for charging bases.





## Step 4

Add pagers to base. You will see a BLUE light on each pager. This light indicates the charging status.

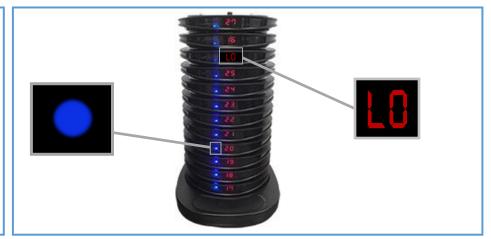

- 'LO' on the number display: Battery is below 20% charged and SHOULD NOT be used.
- Flashing BLUE: Pager is charging and CAN BE used.
- Solid BLUE: Pager is fully charged.
- Allow 4 hours for a complete charge of the pagers.




www.jtech.com | wecare@jtech.com

- 1. Remove a Coaster Pager from the charger.
- 2. The pager will go through a test page.
- 3. Hand the pager to the guest, letting them know the pager will go off when they have been paged.





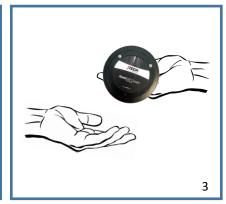

Paging a Guest

- 1. Enter in the 1 to 4-digit pager number into the transmitter and press SEND.
- 2. The pager will alert until it is returned to the charger.







Additional information available at www.jtech.com/support.

