


## Rugged Smart Charger Re-Programming

With the Smart Charger, you can renumber pagers back into sequential order as well as ensure that all pagers have the same configuration.

### Program Pagers - Auto-program Pagers 1-12

The pagers will be set to the programming applied prior to shipping as well as renumbering the pagers into sequential order.

- > First position, indicated by the location with the ☐, will be renumbered to the number shown on the charger's display
- > Pagers will renumber based on their position in the charger, image at right.
- > To activate the programming cycle.
  - PRESS and HOLD the PROG button on the charger for eight (8) seconds.
  - Charger will beep twice indicating that the cycle has begun.
  - You will see the pagers perform several functions as it applies each of the pager configurations. When the process is complete, all pagers will be in sequential order.
- > NOTE: Replacements for lost pages will arrive with the number 888 on the display.

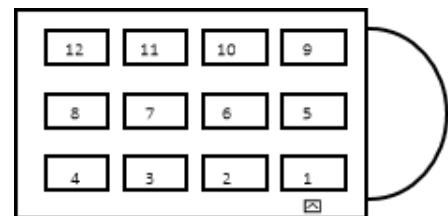

### Replacement of Lost Pagers

Replacements for lost pagers will arrive with the number **888** on the display.

- > Place new pagers into the charger in any location and use the PROG function listed above to have them work with your existing system.

## Program Pagers - With Specific Starting Number (example 13 - 24)

JTECH charging bases with a digital display are programmable; meaning the settings can be altered and applied to the pagers in the base. This includes the 12-slot Rugged charger and the newest version of the 30-slot IQ charger. To change the starting number- which is indicated by the digital display- follow the instructions below. Each step must be completed within 10 seconds. If more than 10 seconds has elapsed- return to step one.

1. Press and hold both the **PROG** and **UP** arrow buttons for 8 seconds until the charger beeps, then release
  
2. “**Stno**” will show on the display
  - **Note:** Stno is the abbreviation for starting number
  
3. Press the **PROG** button once
  
4. Use the **UP** or **DOWN** arrow buttons to adjust the starting number
  
5. When the number has been chosen- press and hold the **PROG** button until the charger beeps and the display shows “**SAVE**”
  
6. Use the **DOWN** arrow to exit
  
7. To apply the changes, press and hold the **PROG** button for 8 seconds until the charger beeps- then release
  - Pagers will go through a programming cycle and all will renumber when complete

**For Assistance Renumbering- Please call JTECH at 800-321-6221**