


Enter Programming Mode

1. Unplug charger power supply.
2. Press and hold the  and  button simultaneously.
3. While holding the 2 buttons, plug in the charger power supply. Charger will display "Prog". Charger is now on programming mode.
4. Press  or  button to scroll to the following menu options.

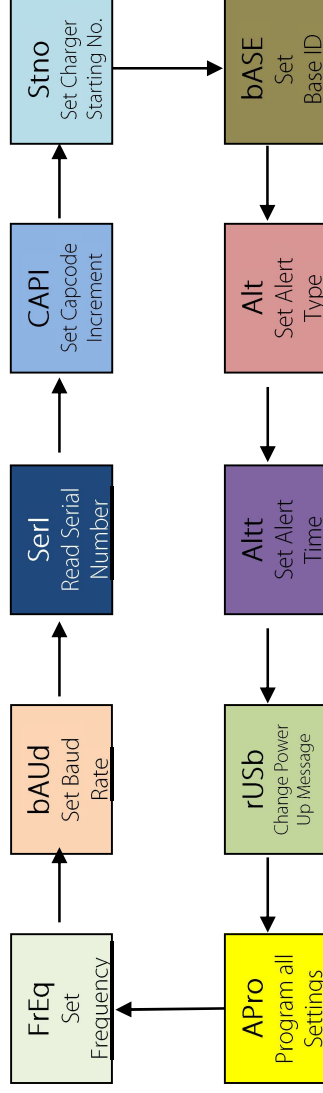

Program Pager Numbers

1. Return all pagers to charging base.
2. Hold down the  button for 10 seconds.
3. The display will read "WRT" and the pagers will flash with a few different displays then begin to renumber with the specified starting number.



Pager Charging Setup

The pager can be charged using the USB to micro USB cable provided or via the 15 slot charging tower. To use the USB charger, see the instructions below:

1. Connect one end of the micro USB cable to the pager.
2. Connect the other end the USB port of the any 5V USB wall plug.
3. Charging light should come on the pager.
4. USB Cable can also be used with a USB port on a PC.



Mar-17 1

To Turn OFF/ON the Pager:

From standby mode, press and hold the side button until pager shows "OFF". To turn on the pager, press and hold the side button.



Micro USB Port

Side Button




LCD Display

Number Display

To Read Received Messages:

The StaffCall Alpha Belt pagers can store up to 20 messages received. The incoming message is automatically stored when received. To read the message received, from standby mode, press the side button once. The last message received will be displayed. Scroll through the messages by pressing the side button.

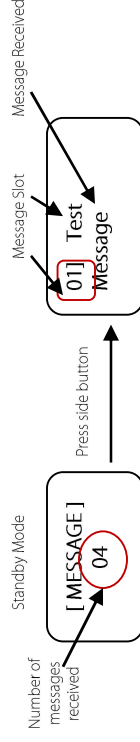


To Delete a Single Message:

Scroll to the message to be deleted by pressing the side button. Press and hold the "side" button and delete menu will appear on the display. Press and hold the "side" button to delete the message.



To Delete All Messages:

Scroll to the first message. Press and hold the "side" button and delete menu will appear on the display. Press the "side" button to select "Delete All". Press and hold the side button to delete all messages in memory.

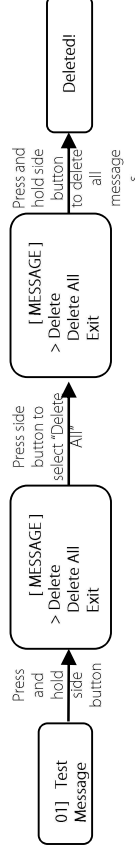

Default settings for StaffCall IQ:

Alert Length: 8 seconds
Alert Type: Vibe only
Backlight: 8 seconds
Out of Range: Off