

PROTECT YOUR BUSINESS WITH

www.AMAROK.com



Gate Auto-Arming



With Gate Auto-Arming you will never forget to arm your perimeter security system again.

Gate Auto-Arming initiates when the gate closes and the contacts connect. A brief siren and an amber strobe indicate that the countdown to arm is active. When the countdown hits zero, a red strobe validates that The Electric Guard Dog Fence™ is live and armed without entering arming codes.



Features

Allows arming of gate zone without code entry

Works with roll, swing, manual or automatic gates

Disarming still requires a code for security

Note: If the gate is opened during countdown, the countdown ends and will restart once the gate is closed again. If the gate is opened after the countdown completes, the system will alarm.

SPEAK TO
an AMAROK security specialist
TODAY.

550 Assembly St., Fifth Floor
Columbia, SC 29201
800-432-6391
sales@amarok.com