Each Growlink TDR Sensor has a serial number (address) located on the body of the probe.

The last digit of the serial number indicates the address of the sensor.

1 = Sensor # 1, 0 = Sensor # 10

Make sure there are no repeating serial/address numbers on one daisy chain/port line. (sequencing of address numbers is not required, but recommended)





