
REUSABLE PALLET WRAP - HOW TO APPLY IT

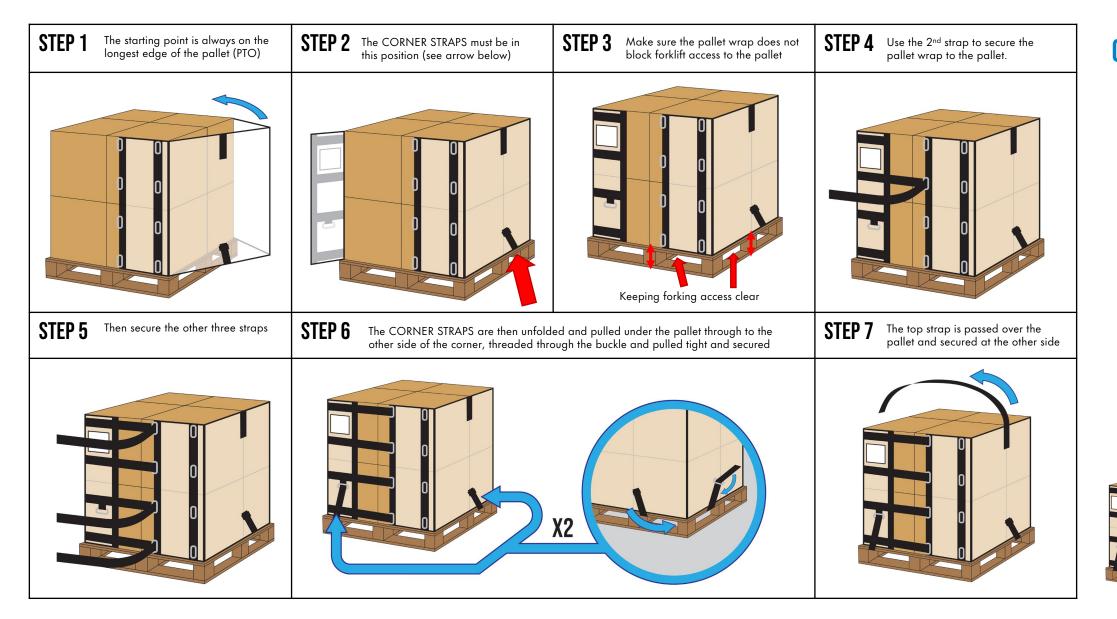



WHERE TO START THE WRAPPING PROCESS


When a reusable pallet-wrap has corner stability straps, these must be in the right place i.e. a corner of the pallet. This is the purpose of these instructions. If your reusable pallet-wrap does NOT have corner stability straps, then these instructions do not apply.

1200mm x 800mm

800mm.

1200mm,

pallet size

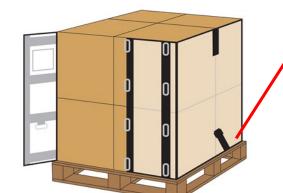

1000 mm.

Make sure the corner strap is positioned on a corner

1200mm x 1000mm pallet size

1200 mm.





Start here