

genuine spare parts

PAGE 1: FLOODLIGHTS
PAGE 2: MAST SECTIONS & ROPES
PAGE 3: BASE STRUCTURE
PAGE 4: CANOPY
PAGE 5: SOLAR PANELS
PAGE 6: ENGINE BAY
PAGE 7: CONTROL PANEL (A)
PAGE 8: CONTROL PANEL (B)
PAGE 9: TRAILER & LIGHTS
PAGE 10: TRIME UK CONTACT LIST

X-SOLAR
HYBRID
4X100W LED




TRIME


Lighting Tower Specialist

Review Date: 31/03/2022


N.	CODE	DESCRIPTION
1	AS000_E006_004	JUNCTION BOX
2	AC000_E018_008	PG11 WIRE HOLDER
3	AC000_E018_002	PG21 WIRE HOLDER
4	LED06_C000_01	CENTRAL SUPPORT
5	AC000_E018_018	CABLE CLAMP
6	AC000_M038_007	CLAMP WITH RUBBER
7	LED04_C000_020	FRONT COVER
8	LED06_C000_09ZN	FLOODLIGHT SUPPORT
9	AS000_M023_001	SPACER
10	AC000_M000_007	HANDLE
11	LED06_C000_07	HANDLE SUPPORT

N.	CODE	DESCRIPTION
12	AC000_E026_043	FLOODLIGHT
13	LED04_C000_034	POWER SUPPLY SUPPORT
14	AC000_E026_049	POWER SUPPLY
15	LED04_C000_021	REAR COVER
16	AC000_E016_005	LIGHT SENSOR
17	LED04_C000_022	JUNCTION BOX COVER
18	AC000_E006_002	ELECTRICAL CLAMP

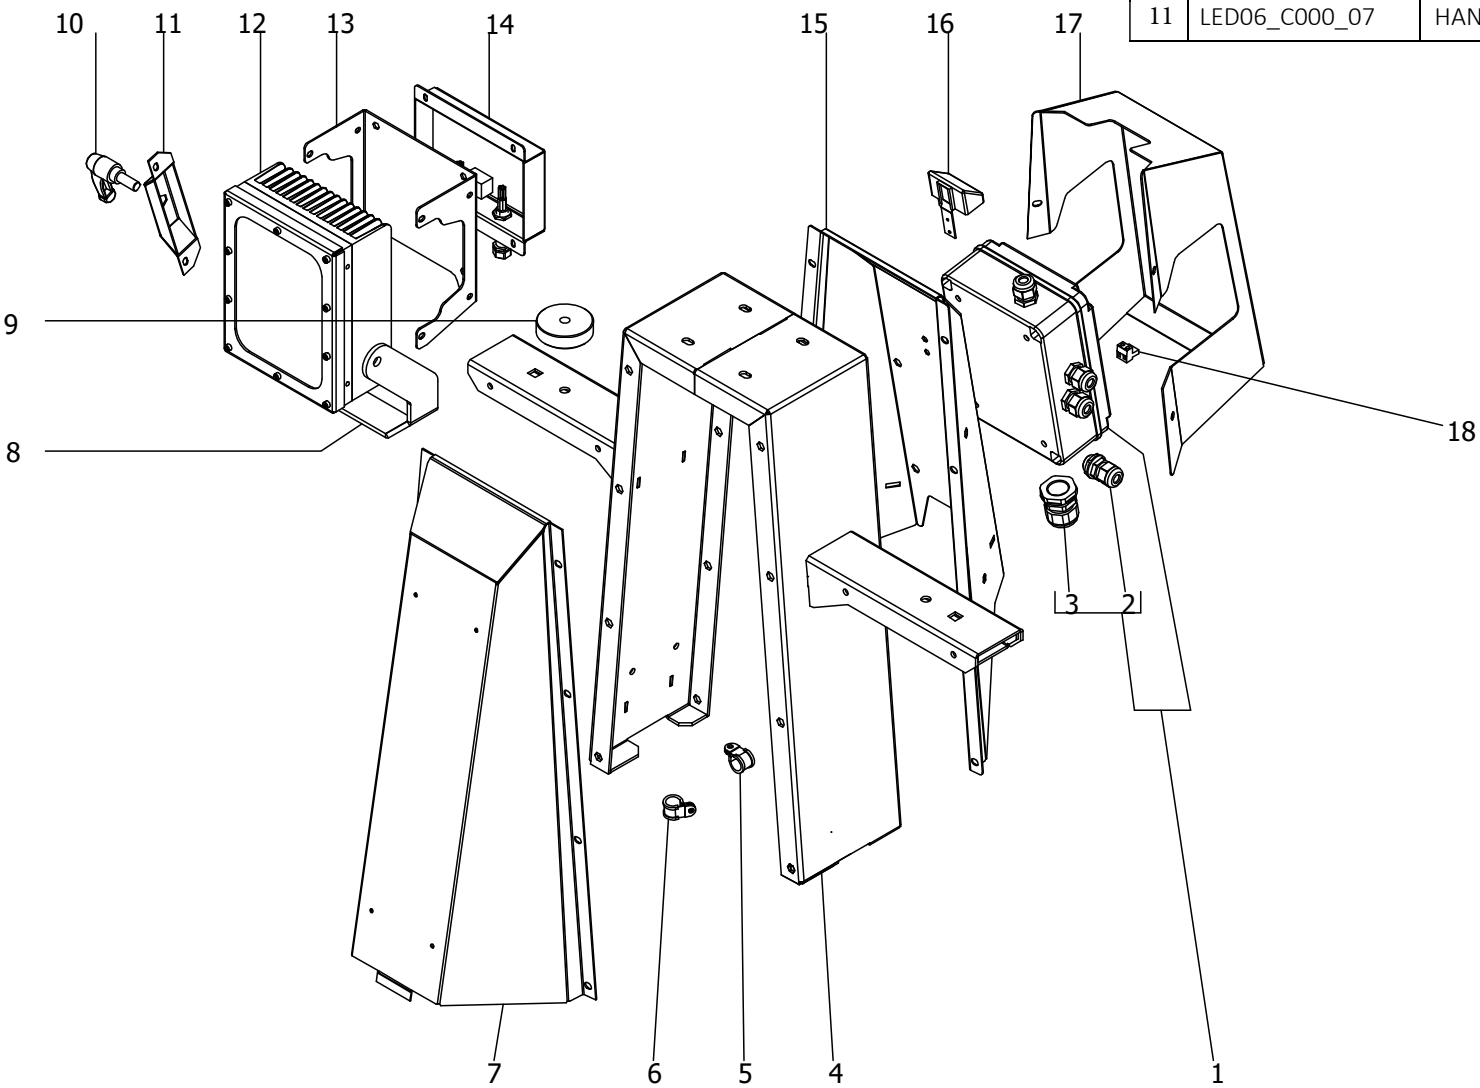


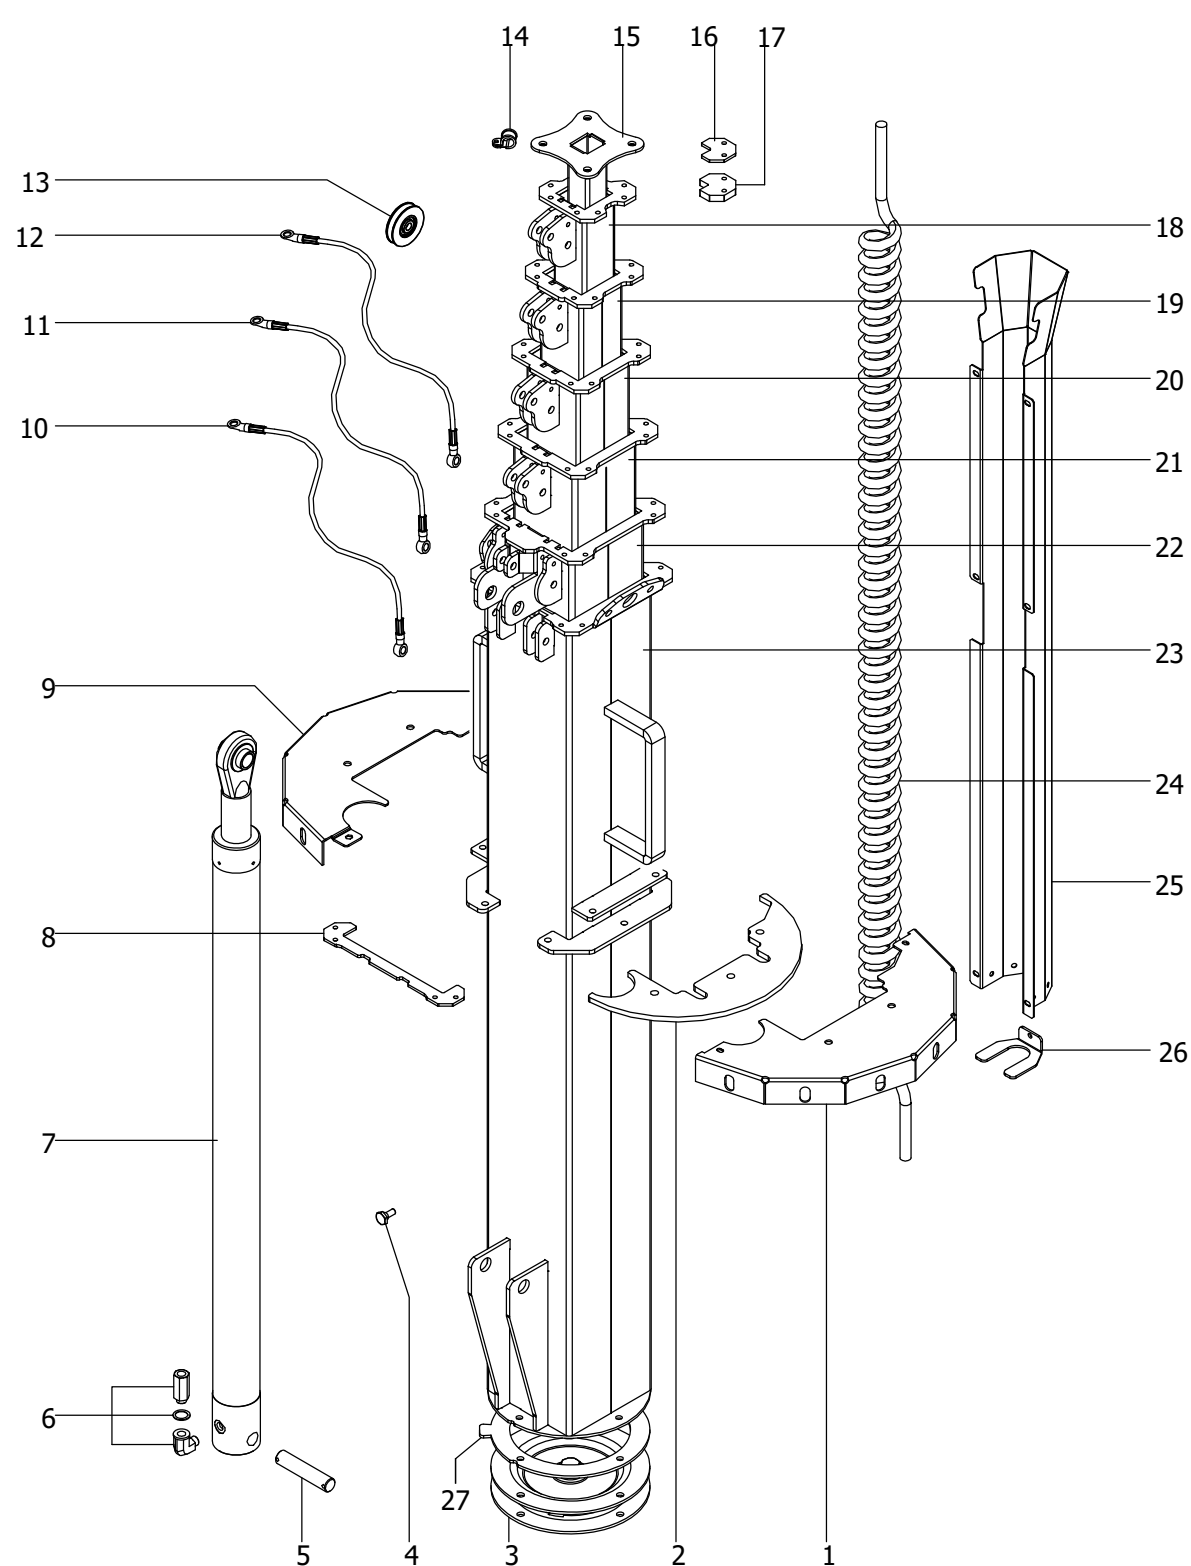

N.	CODE	DESCRIPTION
1	PFI08S_C031_010ZN	MAST POSITIONING PLATE, RIGHT
2	PFI08S_C031_009	DRAG FLANGE
3	PFM08_C031_092	MAST ROTATING SUPPORT
4	AS000_M000_029	SCREW
5	AS000_M023_026ZN	HYDRAULIC CYLINDER PIN
6	AC000_G025_001	HYDRAULIC CYLINDER KIT
7	AS000_I025_001	HYDRAULIC CYLINDER
8	PFI08_C031_024ZN	SPACER
9	PFI08S_C031_011ZN	MAST POSITIONING PLATE, LEFT
10	AC000_M021_036	STEEL ROPE L.1310mm
11	AC000_M021_035	STEEL ROPE L.1300mm
12	AC000_M021_034	STEEL ROPE L.1290mm
13	AC000_M021_008	PULLEY D.63
	AC000_M021_003	PULLEY D.62
14	AC000_M038_007	CLAMP WITH RUBBER
15	PFI08S_C031_007ZN	7° SECTION MAST
16	PFI08_C031_012ZN	MAST ANGLE GUIDE REINFORCEMENT
17	AS000_M000_005	MAST ANGLE GUIDE
18	PFI08S_C031_006ZN	6° SECTION MAST
19	PFI08S_C031_005ZN	5° SECTION MAST
20	PFI08S_C031_004ZN	4° SECTION MAST
21	PFI08S_C031_003ZN	3° SECTION MAST
22	PFI08S_C031_002ZN	2° SECTION MAST
23	PFI08S_C031_001ZN	1° SECTION MAST
24	AC000_E006_016	COILED CABLE
25	PFI08S_C031_008ZN	COILED CABLE PROTECTION
26	PFM08_C000_047	COILED CABLE STOP
27	PFM08_C000_094	MAST ROTATING SUPPORT PLATE

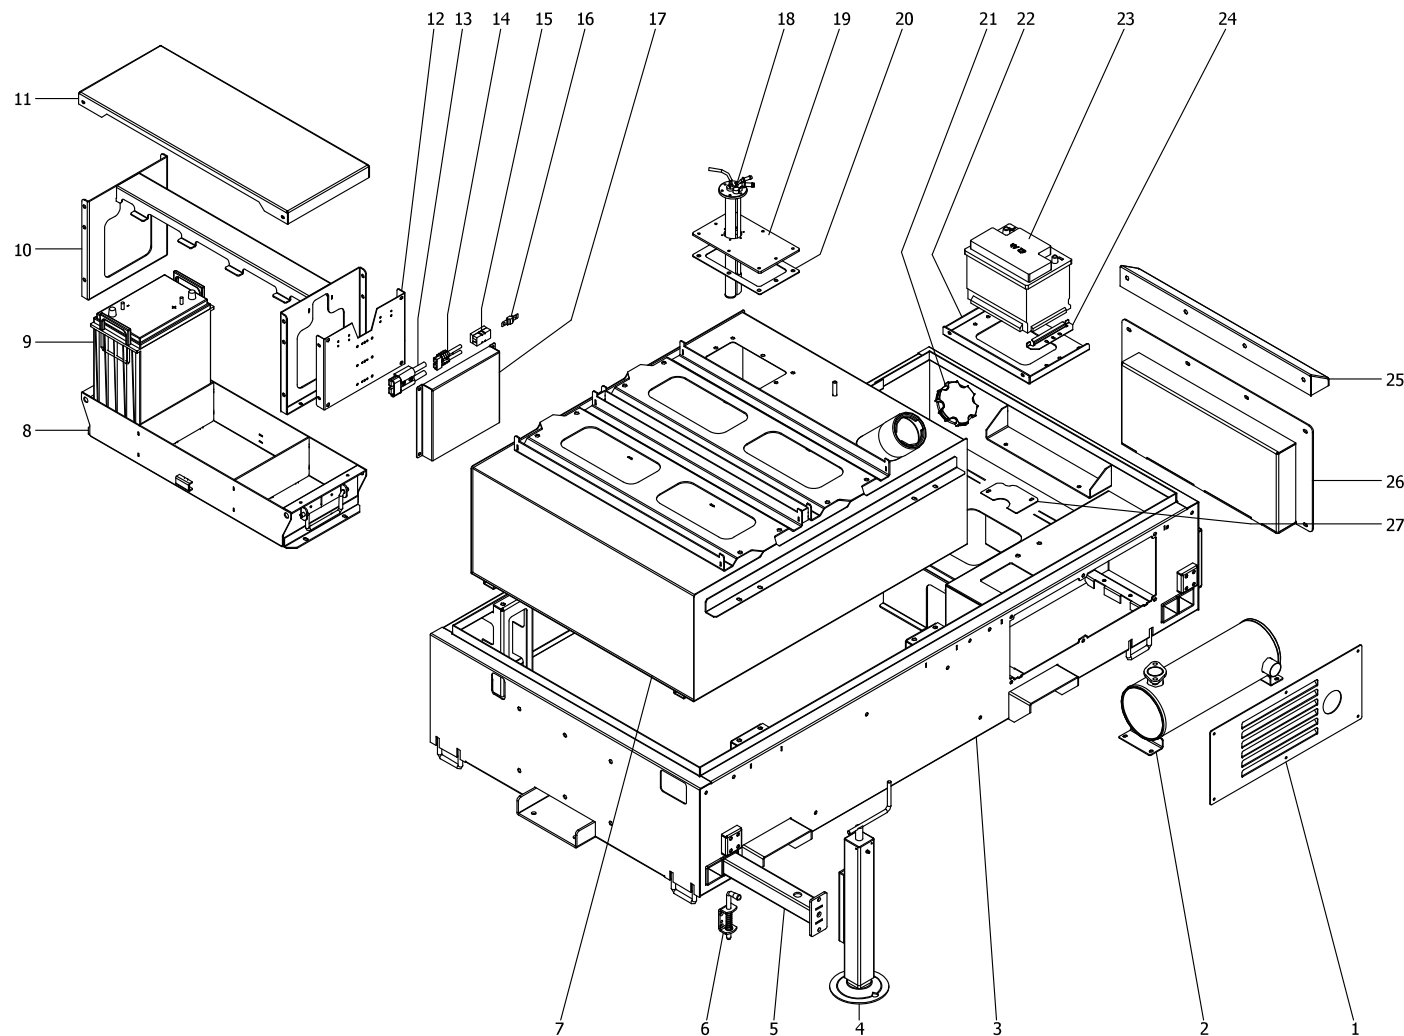



N.	CODE	DESCRIPTION
1	XSOLAR_C008_490	MUFFLER COVER
2	XSOLAR_C035_446	MUFFLER
3	XSOLAR_C004_454	BASEMENT
4	AS000_M000_074ZN	STABILIZER
5	XSOLAR_C000_520ZN	STABILIZER BEAM
6	AC000_M006_086	STABILIZER LOCK
7	XSOLAR_C005_452	FUEL TANK
8	XSOLAR_C006_463	AGM BATTERY TANK
9	AC000_E000_021A	AGM BATTERY
10	XSOLAR_C006_467	AGM BATTERY LOCK PLATE
11	XSOLAR_C006_466	AGM BATTERY TOP COVER
12	XSOLAR_C006_465	CONNECTORS SUPPORT
13	AC000_E011_015	CONNECTOR
14	AC000_E011_019	CONNECTOR
15	AC000_E006_126	FUSE HOLDER
16	AC000_E012_056	FUSE 40A
17	XSOLAR_C006_464	CONNECTORS COVER
18	AC000_E006_025	FUEL LEVEL TRANSMITTER
19	XSOLAR_C005_276	FUEL TANK INSPECTION PLATE
20	XECOK_AS05_009	FUEL TANK INSPECTION PLATE GASKET
21	XSOLAR_C004_510	ENGINE BATTERY SUPPORT
22	AC000_M000_028	FUEL TANK CAP
23	AC000_E000_027	ENGINE BATTERY
24	TF8K1_C000_0014	ENGINE BATTERY LOCK PLATE
25	XSOLAR_C004_655	COUNTERWEIGHT COVER
26	XSOLAR_C004_522	COUNTERWEIGHT
27	XSOLAR_C004_521	SILENCER PLATE

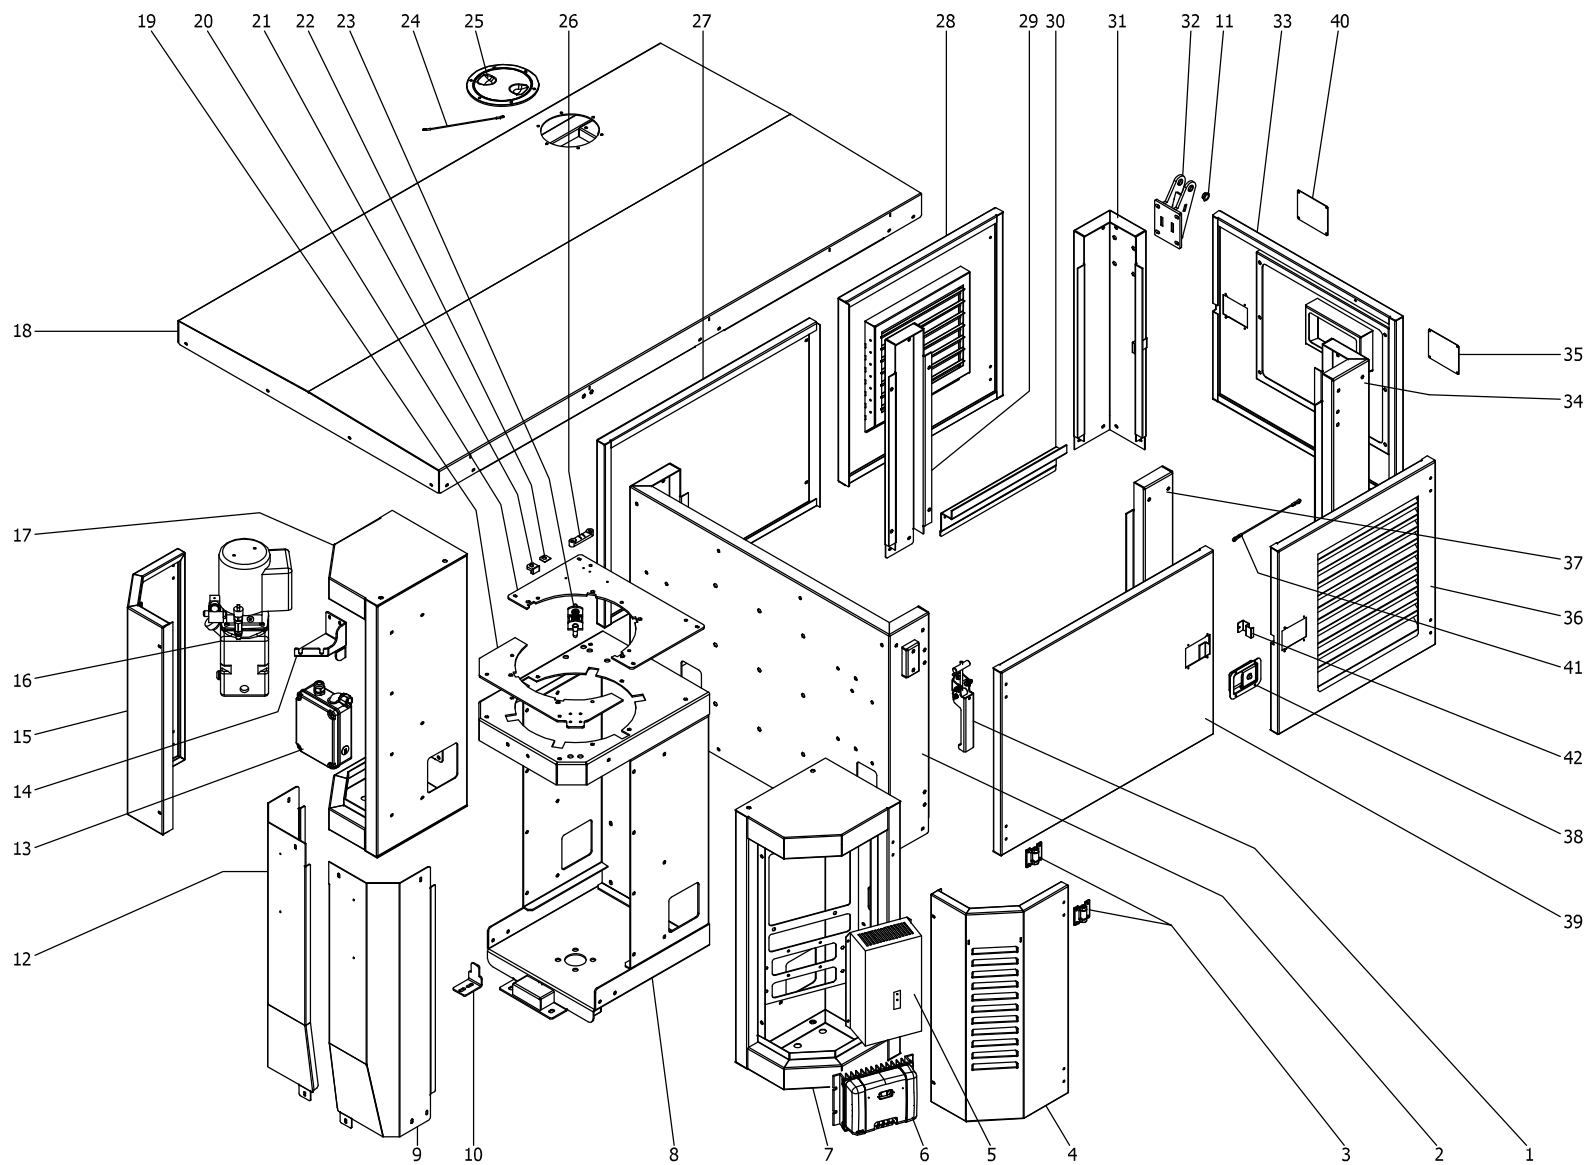

N.	CODE	DESCRIPTION
1	SI000_G000_002	HOOK
2	XSOLAR_C007_455	FRONT PANEL
3	AC000_M000_009	HINGE
4	XSOLAR_C007_478	BATTERY CHARGER COVER
5	AC000_E000_023	BATTERY CHARGER
6	AC000_E000_103	SOLAR BATTERY CHARGER
7	XSOLAR_C007_476	BATTERY CHARGER HOUSING
8	XSOLAR_C004_480	MAST HOUSING
9	XSOLAR_C007_529	FRONT RIGHT COVER
10	XSTART_C004_040	ANTIROTATION PLATE
11	AC000_M000_179	BUSH
12	XSOLAR_C000_530	FRONT LEFT COVER
13	AS000_E006_073	JUNCTION BOX
14	XSOLAR_C007_474	HYDRAULIC UNIT SUPPORT
15	XSOLAR_C007_475	HYDRAULIC UNIT COVER
16	AS000_I000_020	HYDRAULIC UNIT
17	XSOLAR_C007_473	HYDRAULIC UNIT HOUSING
18	XSOLAR_C007_460	TOP COVER
19	XSOLAR_C004_491ZN	MAST FRONT PLATE
20	XSOLAR_C004_492ZN	MAST REAR PLATE
21	PFI08_C031_013	ROTATIONAL SLIDING PLATE
22	PFI08_C031_014ZN	ROTATIONAL SLIDING PLATE REINFORCEMENT
23	AC000_M000_003	MAST CLOSING PIN
24	AS000_M036_083	RADIATOR CAP COVER RETENTION ROPE
25	AC000_M001_035	RADIATOR CAP COVER
26	AC000_M016_002	BUBBLE LEVEL
27	XSOLAR_C008_483	AGM BATTERY PACK DOOR
28	XSOLAR_C008_487	RADIATOR DOOR
29	XSOLAR_C007_457	LEFT JUNCTION
30	XSOLAR_C007_512	RADIATOR DOOR PLATE
31	XSOLAR_C007_459	LEFT REAR ANGLE
32	XSOLAR_C004_498	SOLAR PANEL HINGE
33	XSOLAR_C008_489	CONTROL PANEL / ENGINE INSPECTION DOOR
34	XSOLAR_C007_458	RIGHT REAR ANGLE
35	XSOLAR_S010_412B	DATA PLATE
36	XSOLAR_C008_485	ENGINE INSPECTION DOOR
37	XSOLAR_C007_456	RIGHT JUNCTION
38	AC000_M000_017	DOOR LOCK WITH HANDLE
39	XSOLAR_C008_481	AGM BATTERY PACK DOOR
40	XSOLAR_S010_683B	HOMOLOGATION PLATE
41	AS000_M036_081	DOOR RETENTION ROPE
42	XRENT_C000_040	LOCK CONTRAST


N.	CODE	DESCRIPTION
1	XSOLAR_C004_499	SOLAR PANEL FRAME
2	AC000_M000_005	HANDLE
3	XSOLAR_C004_503ZN	GAS LIFT BRACKET
4	AC000_M000_167	GAS LIFT
5	XSOLAR_C004_426	SOLAR PANEL SUPPORT PLATE
6	XSOLAR_C004_505ZN	GAS LIFT BRACKET
7	XSOLAR_C004_500	FRAME FIXING PLATE
8	AC000_M024_084	BUMPER
9	XSOLAR_C004_501ZN	HOOK SUPPORT
10	XSOLAR_C004_502ZN	HOOK
11	XSOLAR_C004_417	SOLAR PANEL FIXING FRAME
12	AC000_E000_101	SOLAR PANEL
13	XSOLAR_C004_497ZN	SOLAR PANEL LEFT HINGE
14	XSOLAR_C004_407ZN	SOLAR PANEL HINGE PIN
15	XSOLAR_C004_496ZN	SOLAR PANEL RIGHT HINGE

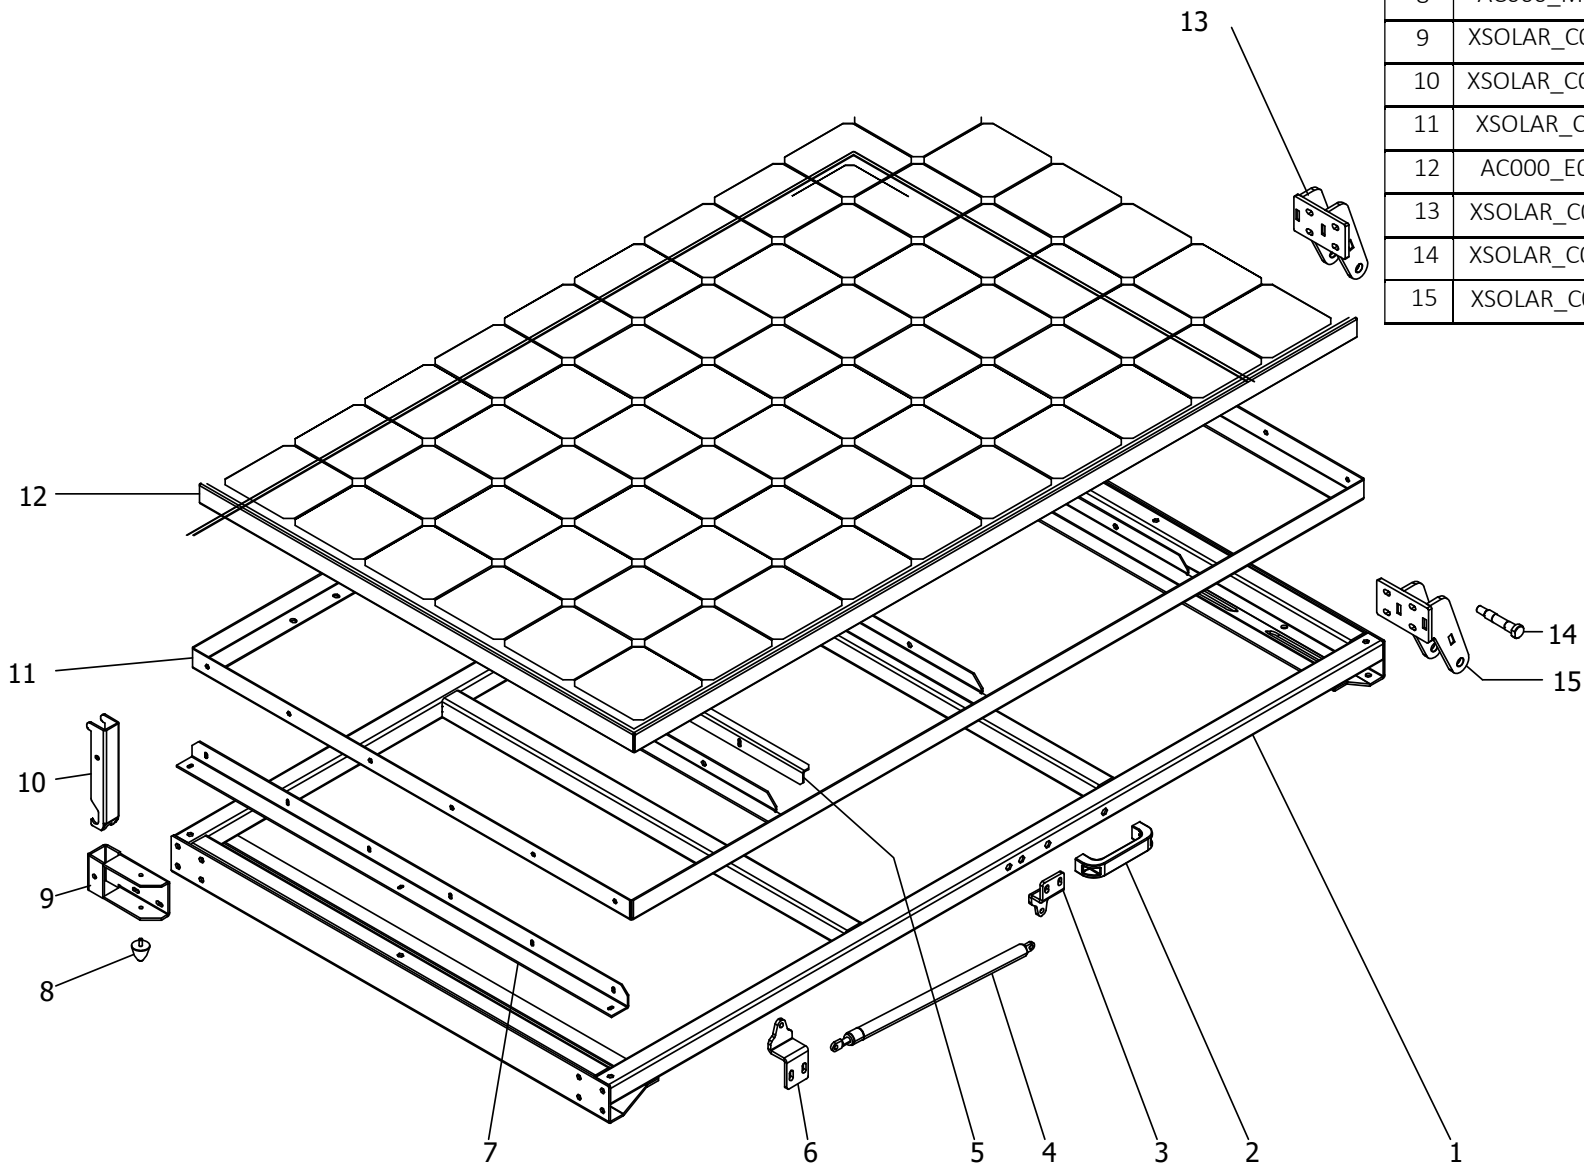

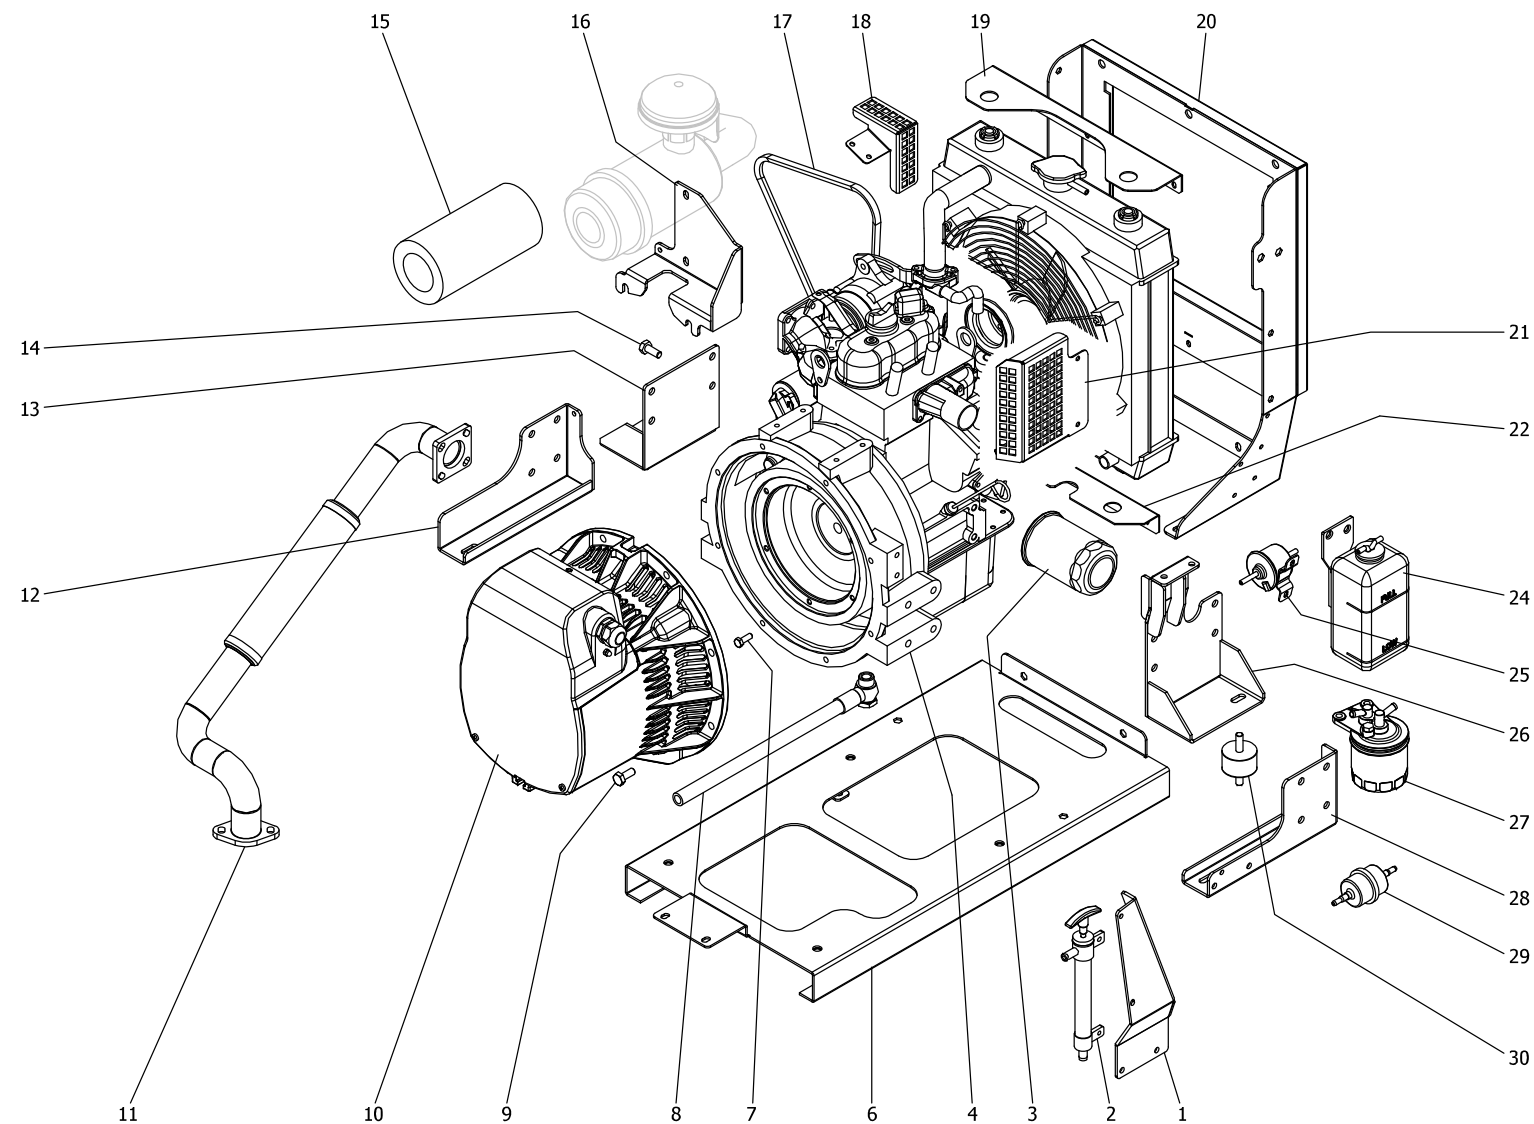


N.	CODE	DESCRIPTION
1	XBOX_C001_111	OIL DRAIN MANUAL PUMP SUPPORT
2	AS000_M000_060	OIL DRAIN MANUAL PUMP
3	- **	OIL FILTER
4	AC000_M033_024	ENGINE
6	XSOLAR_C001_447	ENGINE / ALTERNATOR SUPPORT
7	AC000_M038_013	ENGINE FIXING SCREW
8	AC000_G001_001	OIL DRAIN PIPE
9	AC000_M038_014	ALTERNATOR FIXING SCREW
10	AC000_E034_007	LINZ ALTERNATOR
	AC000_E034_001	MECC ALTE ALTERNATOR
11	XSOLAR_C035_511	MUFFLER EXTENSION
12	XECOK2_C001_007	ENGINE FRONT LEFT SUPPORT
13	XECOK2_C001_005	ENGINE REAR LEFT SUPPORT
14	AC000_M038_015	ENGINE SUPPORTS FIXING SCREW
15	- **	AIR FILTER ELEMENT
16	XECOK2_C001_458	AIR FILTER SUPPORT
17	K_1980572530	ENGINE BELT
18	B_BO_C001_120	BELT PROTECTION
19	XE48_C001_005	RADIATOR UPPER SUPPORT
20	XECOK2_C001_224	ENGINE FRAME
21	X_RA_C001_019	FAN PROTECTION
22	XECOK2_C001_236	RADIATOR LOWER SUPPORT
24	K_1553172402	RADIATOR RECOVERY TANK
25	K_R140151352	AC PUMP
26	XECOK2_C001_006	ENGINE REAR RIGHT SUPPORT
27	- **	FUEL FILTER
28	XECOK2_C001_008	ENGINE FRONT RIGHT SUPPORT
29	**	FUEL PRE FILTER
30	AC000_M024_054	SCHOCK ABSORBER


**	X-ECOSERVKITZ482E	SERVICE KIT Z482-E
**	X-ECOSERVKITZ482S5	SERVICE KIT Z482 STAGE 5

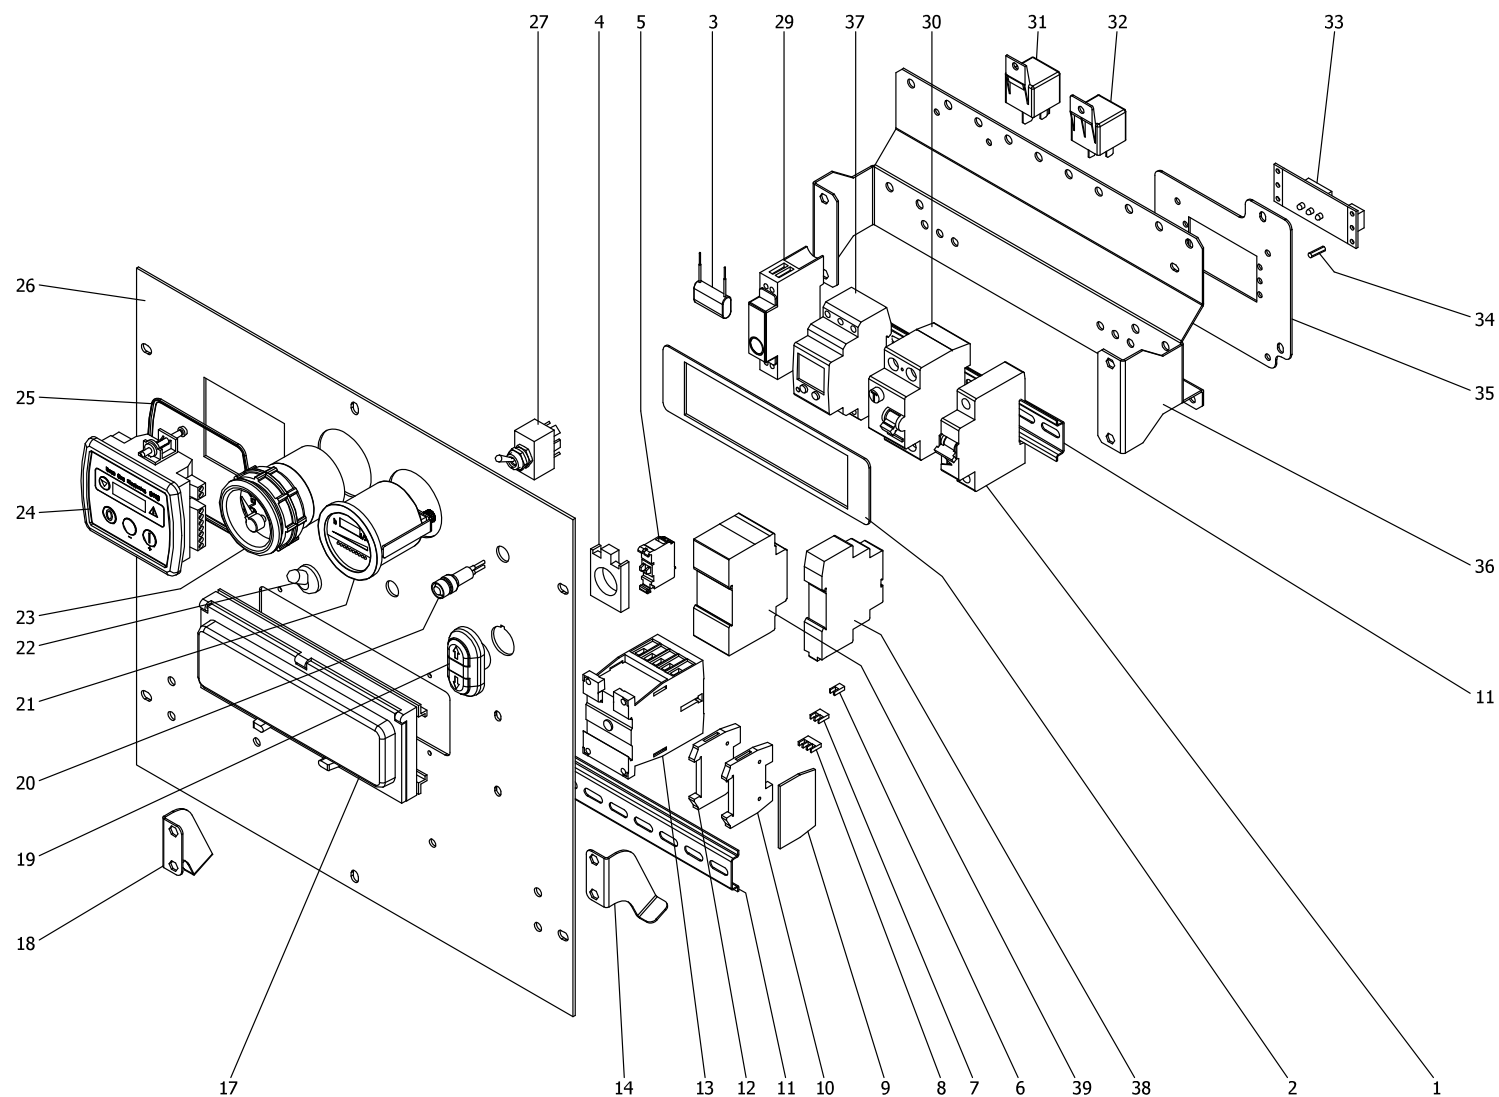

N.	CODE	DESCRIPTION
1	AC000_E012_027	LAMP SWITCH
2	XBHY_C006_048	CIRCUIT BREAKER FRAME
3	AC000_E000_070	LIGHT SENSOR CAPACITOR
4	AC000_E006_042	MAST BUTTONS CONTACT
5	AC000_E006_043	CONTACTS SUPPORT
6	AC000_E006_023	2 PIN BRIDGE
7	AC000_E006_062	3 PIN BRIDGE
8	AC000_E006_063	4 PIN BRIDGE
9	AC000_E006_024	CLAMP TERMINAL
10	AC000_E006_022	FINAL CLAMP
11	AC000_M038_037	L200 DIN BAR
12	AC000_E006_021	CLAMP
13	AC000_E006_054	CONTACTOR SWITCH
14	XECOK2_C019_232	RIGHT STOP
17	AC000_E000_020	CIRCUIT BREAKERS COVER
18	XECOK2_C019_233	LEFT STOP
19	AC000_E006_044	MAST BUTTONS
20	AC000_E015_026	GREEN LAMP
21	AC000_E006_076	AGM BATTERIES CHARGE INDICATOR
22	AC000_E000_019	SWITCH COVER
23	AC000_E015_005	FUEL LEVEL GAUGE
24	AC000_E014_001	DSE 3110 CONTROLLER
25	AC000_E006_001	DSE 3110 CONTROLLER GASKET
26	XSOLAR_S010_451B	INSTRUMENTS PLATE
27	AC000_E000_016	2 POLES SWITCH
29	AC000_E016_005	LIGHT SENSOR
30	AC000_E012_028	RCBO 13A
31	AC000_E000_041	12V 70A RELAY
32	AC000_E000_040	12V 40A RELAY
33	AC000_E006_111	VOLTMETRIC RELAY
34	AC000_M038_060	SPACER
35	XHY_C006_161	VOLTMETRIC RELAY SUPPORT
36	XHY_C006_162	CIRCUIT BREAKERS SUPPORT
37	AC000_E006_060	TIMER
38	AC000_E006_056	CONTACTOR
39	AC000_E006_049	CONTACTOR 25A

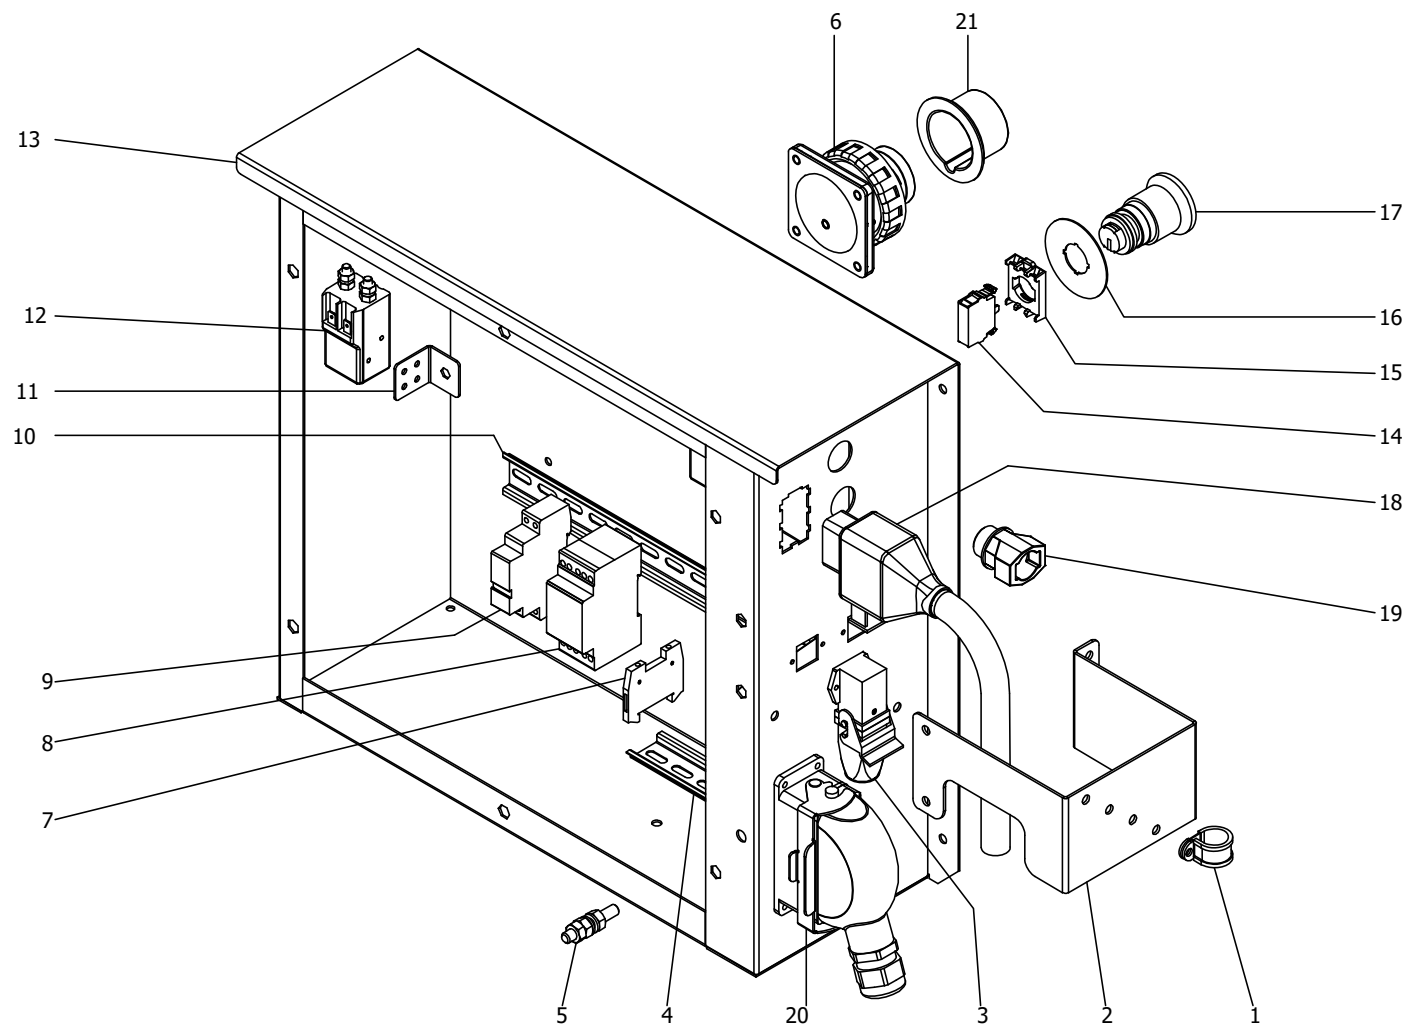


N.	CODE	DESCRIPTION
1	AC000_M038_007	CLAMP WITH RUBBER
2	XBHY_C006_025	CABLES SUPPORT
3	AC000_E000_071	5 POLES CONNECTOR
4	AC000_M038_057	L150 DIN BAR
5	AC000_M038_035	EARTHING TERMINAL
6	AC000_E011_041	INLET SOCKET 230V 16A
7	AC000_E006_021	CLAMP
8	AC000_E006_049	CONTACTOR
9	AC000_E006_056	CONTACTOR
10	AC000_M038_062	L325 DIN BAR
11	XHY_C006_136	CONTACTOR SWITCH SUPPORT
12	AC000_E006_097	CONTACTOR SWITCH
13	XSOLAR_C019_450	CONTROL PANEL BOX
14	AC000_E006_052	STOP BUTTON CONTACT
15	AC000_E006_043	CONTACTS SUPPORT
16	AC000_E006_053	STOP BUTTON RATING PLATE
17	AC000_E006_051	STOP BUTTON
18	AC000_G006_003	ENGINE CONNECTOR
19	AC000_E018_019	CONNECTOR
20	AC000_G006_004	10 POLES CONNECTOR
21	AC000_E011_042	INLET SOCKET 230V 16A COVER

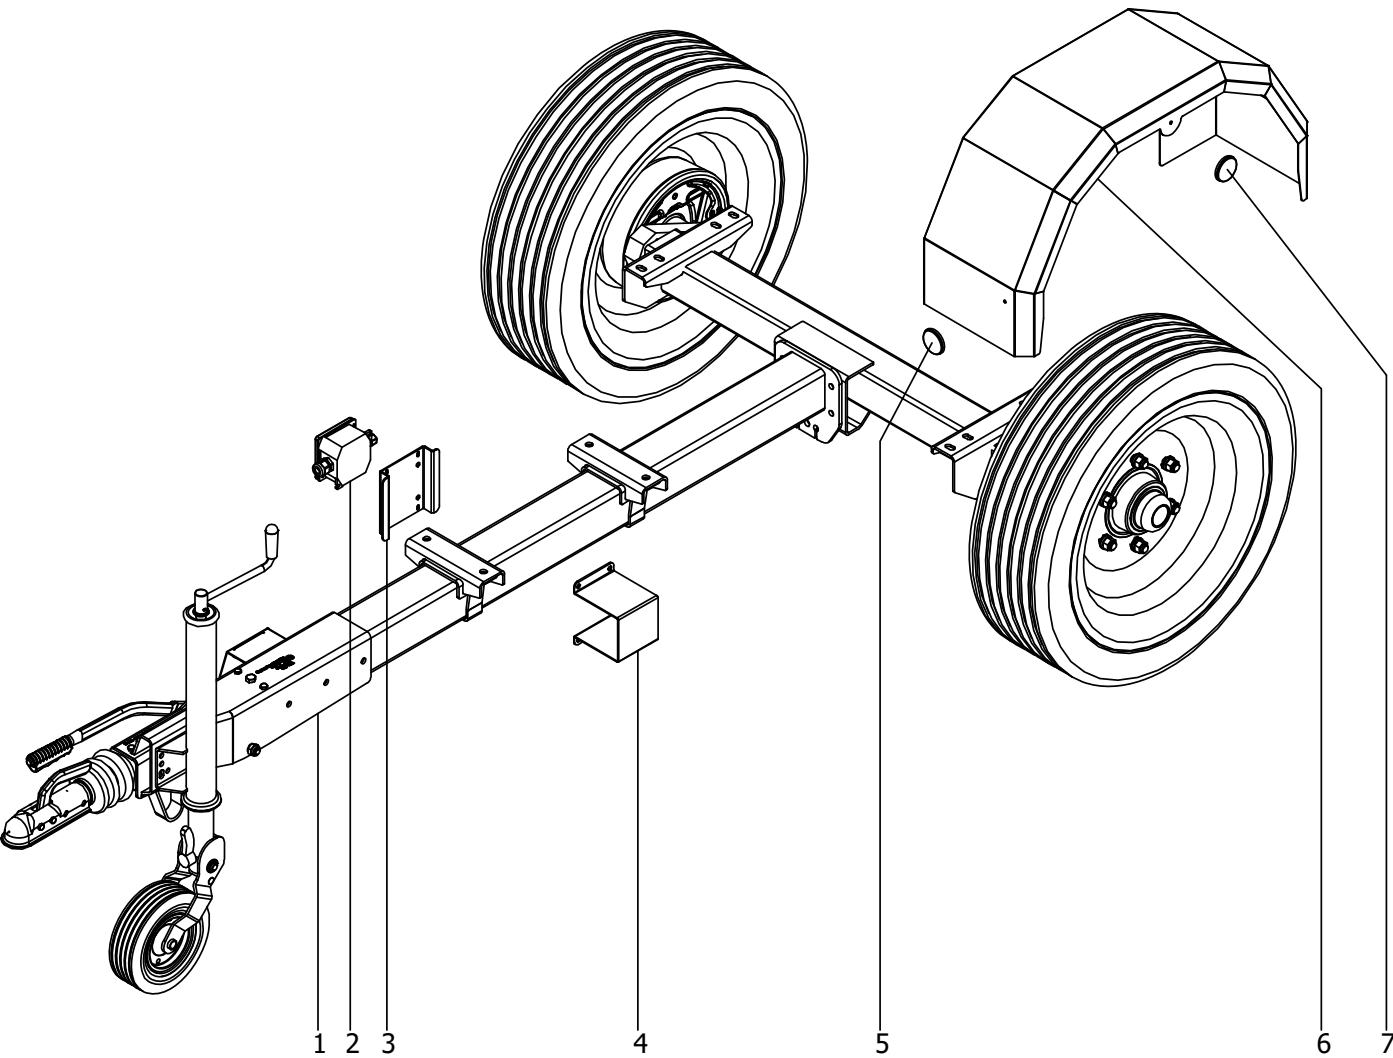

N.	CODE	DESCRIPTION
1	AC000_T003_038	COMPLETE TRAILER
2	AC000_G006_001	BOX
3	XSOLAR_C006_518	BOX SUPPORT
4	XSOLAR_C006_519	TRAILER BRACKET
5	AC000_T013_001	WHITE REFLECTER
6	XSOLAR_C004_568	FENDER
7	AC000_T013_002	ORANGE REFLECTER

N.	CODE	DESCRIPTION
11	XSOLAR_C013_494	LIGHTS BAR LEFT SUPPORT
12	XMINE_C000_058	LIGHTS BAR
13	AC000_E013_008	LEFT LIGHT
14	XSOLAR_C013_495	LIGHTS BAR RIGHT SUPPORT
15	AC000_E013_007	RIGHT LIGHT

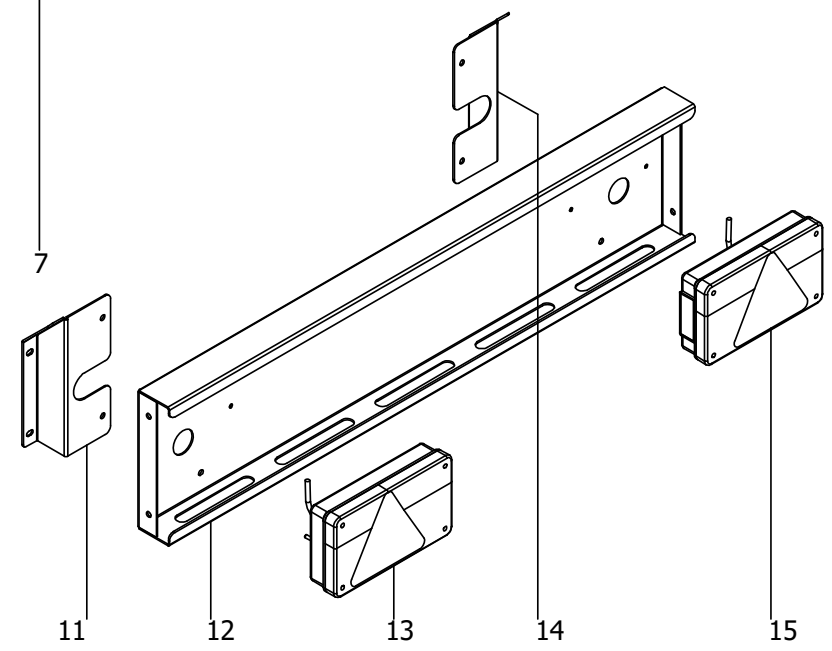



SPARE PARTS TEAM



Norman Pipe
Operations/Spares Manager
tel. 01480 220 500
mob. 07495 670269
normanpipe@trimeuk.com



Marcus Wilson
Spares Part Sales
tel. 01480 220 500
marcuswilson@trimeuk.com



Wayne Brennan
Technical Support Manager
tel. 01480 220 500
mob. 07494 654373
waynebrennan@trimeuk.com



Sally Gunn
Accounts Administrator
tel. 01480 220 500
mob. 07494 654373
admin@trimeuk.com

SALES TEAM



Emma Cohen
Sales Assistant
tel. 01480 220 500
marketing@trimeuk.com



Mark Taylor
Sales Manager
tel. 01480 220 500
mob. 07539528017
marktaylor@trimeuk.com



Andrew Owen
Sales Manager
tel. 01480 220 500
mob. 07983871870
andrewowen@trimeuk.com



Paul Hay
Managing Director
tel. 01480 220 500
mob. 07836 522223
paulhay@trimeuk.com



Ray Caulfield
CEO
tel. 01480 220 500
mob. 07970140680
raycaulfield@trimeuk.com

