

A WORD OF WELCOME

We are pleased that you have chosen a Bertram, and know that her unique design will give you outstanding performance and many years of boating pleasure.

Your Bertram is built of the finest, most modern materials and is manufactured under rigid quality controls. Her hull is of high-impact, multi-laminate fiberglass. High pressure laminates and vinyl throughout further reduce maintenance. She comes to you as the most thoroughly tested and trouble-free boat on the market today.

As durable as her construction is, your Bertram will benefit by reasonable care. And, as is always true with things mechanical, maintenance, adjustments, or repairs may be required from time to time for certain components. Thus, this Owner's Manual, containing a wealth of detailed information, has been specially prepared for your particular model to guide you in keeping her in yacht condition.

To fully enjoy your Bertram, you should understand her completely. To this end, we suggest that you read this manual thoroughly. If any points arise that you do not completely understand, your Bertram dealer will be glad to assist you.

When your boat requires service, contact your Bertram dealer. He is anxious to help you.

We wish you many years of pleasurable yachting on your new Bertram.

DATA SHEET

NAME OF BOAT

OWNER'S NAME AND ADDRESS

HAILING PORT

HULL NUMBER

REGISTRATION NUMBER

HEIGHT ABOVE
WATERLINE

BEAM

DRAFT

LENGTH
OVER ALL

FUEL CAPACITY

IGNITION KEY NUMBER

TECHNICAL DATA

HULL NO. _____

ENGINE

Manufacturer _____

Outdrive Manufacturer _____

Model _____

Outdrive Model _____

Type Fuel Filter:

Gear Ratio _____

1. _____

Type Spark Plugs _____

Type Oil Filter:

Gear Serial No. _____

Engine Serial No. _____

BATTERY

Manufacturer _____

Type _____

PROPELLER

Manufacturer _____

Style _____

Diameter _____

Pitch _____

No. of Blades _____

Material _____

TABLE OF CONTENTS

	<u>PAGE</u>
Welcome	
Data Sheet	
Technical Data	
INITIAL CHECKLIST	1
Master Switch	1
Master Fuses	1
Optional D. C. System	1
CONTROLS AND INSTRUMENTS	2
The Importance of Instruments	2
Ignition and Starter Switch	2
Accessory Switches	2
Gauges	2
Power Trim Switch	2
Ammeter	3
Fuel Gauge	3
Lube Oil Pressure Gauge	3
Water Temperature Gauge	3
Tachometer	3
CONTROLS	4
Control Console	4
Engine and Reverse Gear Control	4
Power Trim Control Switch	4
Steering System	4
POWER PLANT	5
Engine	5

<u>TABLE OF CONTENTS (CONT'D)</u>	<u>PAGE</u>
Reverse Gear	5
Propellers	5
Installation of Propeller	5
<u>BOAT SPEED</u>	6
Engine Efficiency	6
Atmospheric Conditions	6
Personal Equipment & Accessories	6
Marine Growth	6
Water in the Bilge	7
Damaged Underwater Equipment	7
<u>ELECTRICAL</u>	8
General	8
Battery	8
Ground and Bonding Systems	8
<u>FUEL</u>	13
Fueling Instructions	13
Fuel System	13
Fuel	14
<u>ELECTRICAL ACCESSORIES</u>	18
Bilge Pump	18
Engine Compartment Blower	18
Electric Horn	18
Power Trim Switch	18
Windshield Wiper	18

TABLE OF CONTENTSPAGE

Monomatic or Conventional Toilet	19
COMMANDING YOUR BERTRAM	20
Pre-Starting Instructions	20
Starting Instructions	20
Stopping Engines	20
Maneuvering	20
Cruising Speeds	21
Cruising	22
Calling at Ports Away From Home	22
Leaving Your Bertram	23
Pop Top Operation	24
MAINTENANCE	26
Periodic Maintenance	26
Daily	26
Every 100 Hours or 60 Days	26
Exterior	26
Interior	27
Engine Compartment	27
As Required	28
STORING YOUR BERTRAM	29
Dry Storage	29
Wet Storage	30
Fitting Out	30
Pre-Launch and Post-Launch Checks	30
Pre-Launch	30

TABLE OF CONTENTS (CONT'D)

PAGE

After Launch	31
Electrical System Check	31
Engine Check	31
Controls Check	31
 MAINTAINING YOUR BERTRAM	 32
Care of Fiberglass Construction	32
Seasonal Care	32
Loss of Gloss	32
Stains	33
Scratches and Abrasions	33
Painting Fiberglass Surfaces	34

ILLUSTRATIONS

	<u>PAGE</u>
ELECTRICAL	
24' Camper Wiring Diagram	9
24' Moppie II Wiring Diagram	10
24' Camper Wiring Diagram Distribution	11
24' Moppie II Wiring Diagram Distribution	12
FUEL	
Fuel System	15
Monomatic toilet w/dockside & overbard discharge, plumbing system	16
Monomatic toilet w/dockside discharge	17
OPERATION	
Pop Top Instructions	24
MAINTENANCE	
Docking Plan	35

INITIAL CHECKLIST

Upon boarding his Bertram 24' for the first time, the wise owner will want to familiarize himself with the total operation of the various systems.

- I. Location and function of all 12 V DC electrical switches and fuses.
 - a. Master Switch, located on battery box. The only circuit excluded from this master switch control is the Bilge Pump Circuit. This circuit operates at all times and is protected by a fuse. This fuse is located behind the instrument panel.
 - b. Master Fuses are grouped on a fuse block and numbered, with a plaque that identifies each circuit with the corresponding number attached nearby. The fuse block is located behind the instrument panel.
 - c. Optional DC System: The radio, if installed is powered by the installed battery and the fuse for this circuit is mounted in the engine compartment.
- II. Location, description and operation of mechanical systems such as valves, fuel system, etc., are described in the sections which follow and their accompanying diagrams.

CONTROLS AND INSTRUMENTS

THE IMPORTANCE OF INSTRUMENTS

To avoid mechanical damage, become accustomed to checking your instruments frequently when running and particularly when first starting the engine.

IGNITION AND STARTER SWITCH

After inserting the ignition key, turn key all the way to the right. This will energize the starter motor. As soon as the engine starts, release key and it will automatically return to the ignition position. To stop motor, turn the key to the left as far as it will go. The starter should not be operated for prolonged periods. This may result in overheating the starter motor or draining the battery or both.

ACCESSORY SWITCHES

Each of these toggle switches operates lights or electrical accessories as marked and they all operate from the engine starting battery. Excessive use of accessories when engine is not charging the battery could make engine starting difficult.

GAUGES

Gauges are as follows: Tachometer, Oil Pressure, Fuel, Ammeter, and Water Temperature. All these instruments operate on the boat's 12 volt, D.C. system. During boat's running, these gauges should be checked periodically.

POWER TRIM SWITCH

This is a switch by which you can control the trim of your boat. Read the MerCruiser Operator's Manual for the best operation of this advantage offered by MerCruiser.

AMMETER

This is an indicator that measures the rate of electrical current going to the battery from the alternator to maintain its full charge. The ability of the alternator to maintain a charge depends on the ratio of current generated and the rate of consumption by the electrical units. A low charging rate normally indicates that the battery is fully charged.

FUEL GAUGE

The electric fuel gauge is standard equipment and is located on the instrument panel.

LUBE OIL PRESSURE GAUGE

Almost all serious engine trouble will be reflected on the oil pressure gauge. Therefore, if any radical change in oil pressure should occur turn off the engine immediately. During operation, there may be some slight fluctuation in gauge readings. This is normal due to the variation in the temperature of the lube oil. Consult your engine manual for operating procedure.

WATER TEMPERATURE GAUGE

The water temperature gauge records the water temperature circulating through the engine. This temperature is controlled by a thermostat installed in the engine. The temperature and oil pressure gauges should be observed simultaneously as most malfunctions will be reflected in these gauges.

TACHOMETER

This instrument registers the revolutions per minute in increments of 100 of the engine. There is no correlation of RPM's to speed of the boat due to propeller slippage, condition of bottom and load factor.

CONTROLS

CONTROL CONSOLE

The control console controls all controls, gauges, and switches necessary for the operation of the boat. Included on the console are, Engine Control, Clutch Control, Power Trim Switch, Navigation Light Switch, Fuel Gauge, Horn Switch (opt.), and Wiper Switch (opt.).

ENGINE & REVERSE GEAR CONTROL

The Reverse Gear and Throttle Control is a single lever control, located within easy reach of the helmsman. The controls are the push/pull type. To work the throttle lever independently, push the button in the center of the control hub with the lever in the neutral position and push lever forward to open throttle of engine. The control head is marked Forward, Neutral and Reverse.

POWER TRIM CONTROL SWITCH

This control is located within easy reach of the helmsman and is operated by the engine starting battery. See your Engine Operator's Manual to be informed how to take advantage of this feature of the MerCruiser Outdrive.

STEERING SYSTEM

Steering on your Bertram is cable controlled of the "push-pull" type, the cable runs through a flexible watertight conduit. The cable acts alternately in tension and compression.

POWER PLANT

ENGINE

All necessary data and information about the engine is contained in the enclosed Engine Operator's Manual so they will not be repeated here. It is suggested that you read the manual thoroughly, and if you have any questions, ask your dealer for the information you desire. Just a reminder, the life and performance of the engine is dependent on the care given to it. It is suggested that you follow the manufacturer's recommendations and watch the instruments carefully to obtain many hours of pleasurable boating.

REVERSE GEAR

This gear is housed in the outdrive and controlled by a cable of the push-pull type. Information and maintenance procedure can be found in the Engine Manual.

PROPELLERS

Information on the propeller for your boat will be found on the Ship's Information Page of this book. The propeller recommended is the one that your type of boat has been tested with. If weight has been added or the operating characteristics have been changed due to addition of special equipment, it may be necessary to change the pitch of the propeller to suit the existing conditions.

INSTALLATION OF PROPELLERS

Instructions for removing and installing propellers will be found in the Engine Operator's Manual.

BOAT SPEED

Boat speed is dependent on many variable factors, so no catalogue or advertised speed can be guaranteed. A short discussion of some of the more important factors affecting boat speed are presented below.

ENGINE EFFICIENCY

With normal care and maintenance the engines will maintain peak efficiency; however, if they are neglected, the power will fall off and expensive repairs could become necessary. Take care of the engine!

ATMOSPHERIC CONDITIONS

Engines will develop more power when ambient air and water temperatures are cool, in fact the power variations due to temperature can be as much as ten percent. For this reason greater speeds are generally obtained in the spring and fall, rather than in the summer.

PERSONAL EQUIPMENT AND ACCESSORIES

All personal equipment and accessories added to the boat will tend to decrease the speed, just as adding passengers will. Often the effect of this added weight is not taken into consideration on the performance of the boat.

MARINE GROWTH

In order to obtain maximum speed, the bottom of the boat must be kept free of marine growth including moss. Any growth on the boat's bottom will increase the resistance of the boat as it moves through the water, thus decreasing speed.

WATER IN THE BILGE

Since a barrel of water weighs over 400 lbs., the bilges must be kept pumped dry in order to keep excess weight down. As mentioned before, added weight will reduce boat speed.

DAMAGED UNDERWATER EQUIPMENT

Loss of speed and excessive vibration can result from damaged propellers.

ELECTRICAL

GENERAL

The Bertram 24' has a 12 volt D. C. electrical system. This system obtains its power from the installed battery. The electrical circuits are protected by fuses, grouped on a fuse block under the instrument panel.


BATTERY

There is a heavy duty battery installed in your boat. The battery is located in the engine compartment behind covering boards on all models. Water in the battery is to be kept at approximately 1/4" above the plates to insure maximum service.


GROUND AND BONDING SYSTEM

All Bertrams are fitted with a bonding system to minimize electrolysis. This system consists of a copper strip running fore and aft, on or near the keel. All underwater fittings and hardware are bonded into this system.

REFERENCES	
NO.	DESCRIPTION
1	MERC ENGINE REF 1
2	MERC ENGINE REF 2
3	MERC ENGINE REF 3
4	MERC ENGINE REF 4
5	MERC ENGINE REF 5
6	MERC ENGINE REF 6
7	MERC ENGINE REF 7
8	MERC ENGINE REF 8
9	MERC ENGINE REF 9
10	MERC ENGINE REF 10
11	MERC ENGINE REF 11
12	MERC ENGINE REF 12
13	MERC ENGINE REF 13
14	MERC ENGINE REF 14
15	MERC ENGINE REF 15
16	MERC ENGINE REF 16
17	MERC ENGINE REF 17
18	MERC ENGINE REF 18
19	MERC ENGINE REF 19
20	MERC ENGINE REF 20
21	MERC ENGINE REF 21
22	MERC ENGINE REF 22
23	MERC ENGINE REF 23
24	MERC ENGINE REF 24
25	MERC ENGINE REF 25
26	MERC ENGINE REF 26
27	MERC ENGINE REF 27
28	MERC ENGINE REF 28
29	MERC ENGINE REF 29
30	MERC ENGINE REF 30
31	MERC ENGINE REF 31
32	MERC ENGINE REF 32
33	MERC ENGINE REF 33
34	MERC ENGINE REF 34
35	MERC ENGINE REF 35
36	MERC ENGINE REF 36
37	MERC ENGINE REF 37
38	MERC ENGINE REF 38
39	MERC ENGINE REF 39
40	MERC ENGINE REF 40
41	MERC ENGINE REF 41
42	MERC ENGINE REF 42
43	MERC ENGINE REF 43
44	MERC ENGINE REF 44
45	MERC ENGINE REF 45
46	MERC ENGINE REF 46
47	MERC ENGINE REF 47
48	MERC ENGINE REF 48
49	MERC ENGINE REF 49
50	MERC ENGINE REF 50
51	MERC ENGINE REF 51
52	MERC ENGINE REF 52
53	MERC ENGINE REF 53
54	MERC ENGINE REF 54
55	MERC ENGINE REF 55
56	MERC ENGINE REF 56
57	MERC ENGINE REF 57
58	MERC ENGINE REF 58
59	MERC ENGINE REF 59
60	MERC ENGINE REF 60
61	MERC ENGINE REF 61
62	MERC ENGINE REF 62
63	MERC ENGINE REF 63
64	MERC ENGINE REF 64
65	MERC ENGINE REF 65
66	MERC ENGINE REF 66
67	MERC ENGINE REF 67
68	MERC ENGINE REF 68
69	MERC ENGINE REF 69
70	MERC ENGINE REF 70
71	MERC ENGINE REF 71
72	MERC ENGINE REF 72
73	MERC ENGINE REF 73
74	MERC ENGINE REF 74
75	MERC ENGINE REF 75
76	MERC ENGINE REF 76
77	MERC ENGINE REF 77
78	MERC ENGINE REF 78
79	MERC ENGINE REF 79
80	MERC ENGINE REF 80
81	MERC ENGINE REF 81
82	MERC ENGINE REF 82
83	MERC ENGINE REF 83
84	MERC ENGINE REF 84
85	MERC ENGINE REF 85
86	MERC ENGINE REF 86
87	MERC ENGINE REF 87
88	MERC ENGINE REF 88
89	MERC ENGINE REF 89
90	MERC ENGINE REF 90
91	MERC ENGINE REF 91
92	MERC ENGINE REF 92
93	MERC ENGINE REF 93
94	MERC ENGINE REF 94
95	MERC ENGINE REF 95
96	MERC ENGINE REF 96
97	MERC ENGINE REF 97
98	MERC ENGINE REF 98
99	MERC ENGINE REF 99
100	MERC ENGINE REF 100

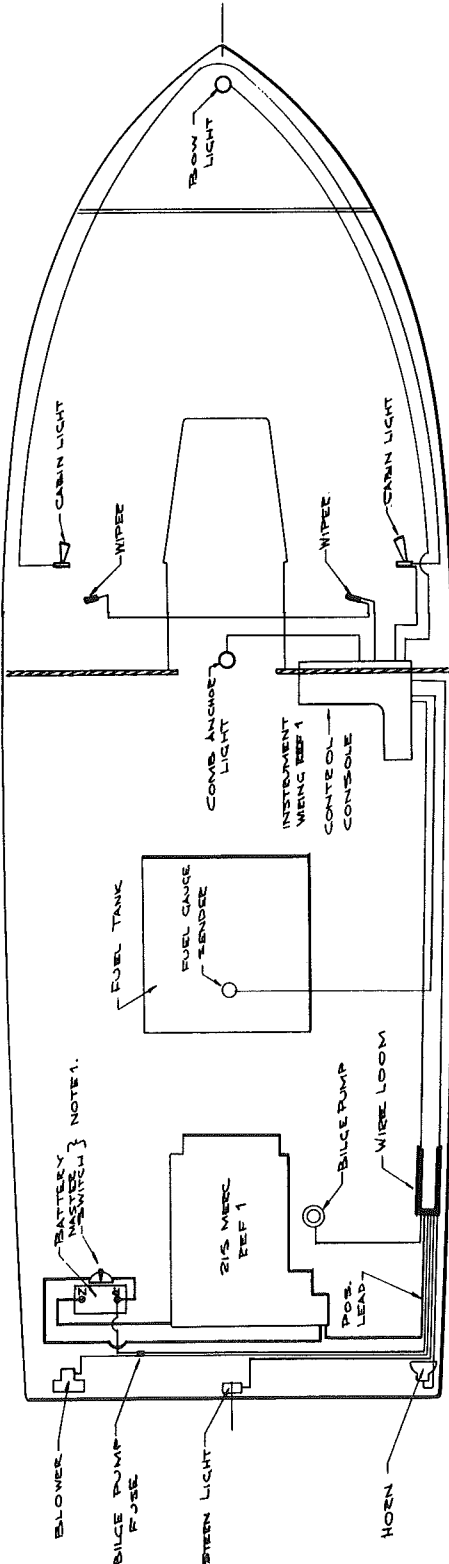

SINGLE ENGINE INSTALLATION

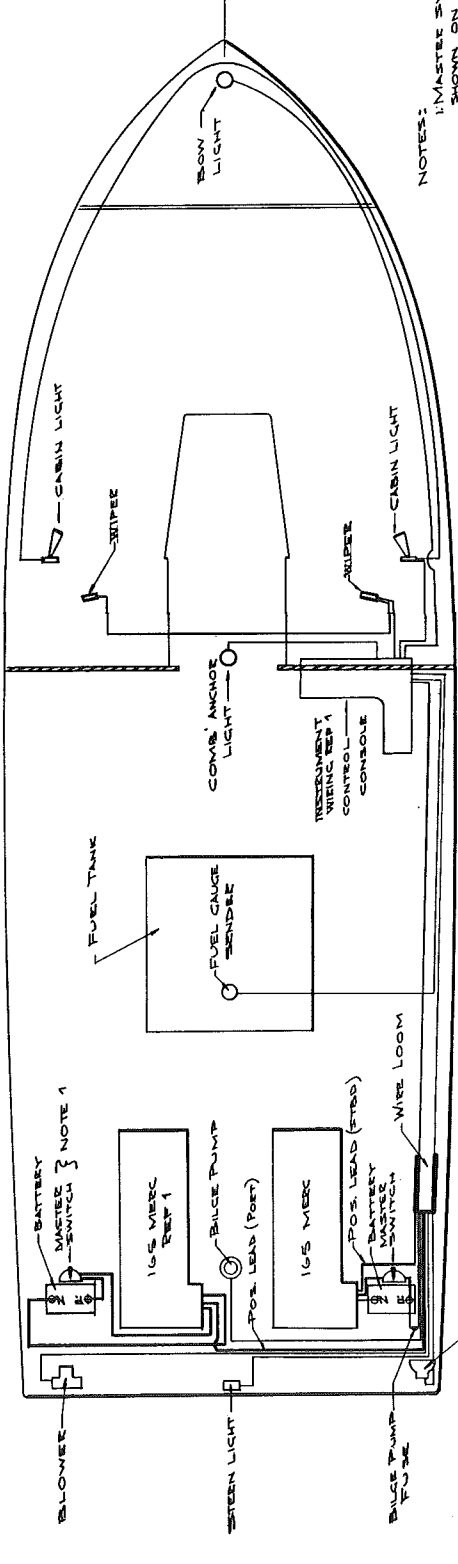


TWIN ENGINE INSTALLATION

NOTES:
 1. MASTER SWITCH NOT SHOWN ON MERC. ENG. WIRING DIAGRAM.

REV.	DESCRIPTION	DATE	APP.
1	REVISIONS		
2	REVISIONS		
3	REVISIONS		
4	REVISIONS		
5	REVISIONS		
6	REVISIONS		
7	REVISIONS		
8	REVISIONS		
9	REVISIONS		
10	REVISIONS		
11	REVISIONS		
12	REVISIONS		
13	REVISIONS		
14	REVISIONS		
15	REVISIONS		
16	REVISIONS		
17	REVISIONS		
18	REVISIONS		
19	REVISIONS		
20	REVISIONS		
21	REVISIONS		
22	REVISIONS		
23	REVISIONS		
24	REVISIONS		
25	REVISIONS		
26	REVISIONS		
27	REVISIONS		
28	REVISIONS		
29	REVISIONS		
30	REVISIONS		
31	REVISIONS		
32	REVISIONS		
33	REVISIONS		
34	REVISIONS		
35	REVISIONS		
36	REVISIONS		
37	REVISIONS		
38	REVISIONS		
39	REVISIONS		
40	REVISIONS		
41	REVISIONS		
42	REVISIONS		
43	REVISIONS		
44	REVISIONS		
45	REVISIONS		
46	REVISIONS		
47	REVISIONS		
48	REVISIONS		
49	REVISIONS		
50	REVISIONS		
51	REVISIONS		
52	REVISIONS		
53	REVISIONS		
54	REVISIONS		
55	REVISIONS		
56	REVISIONS		
57	REVISIONS		
58	REVISIONS		
59	REVISIONS		
60	REVISIONS		
61	REVISIONS		
62	REVISIONS		
63	REVISIONS		
64	REVISIONS		
65	REVISIONS		
66	REVISIONS		
67	REVISIONS		
68	REVISIONS		
69	REVISIONS		
70	REVISIONS		
71	REVISIONS		
72	REVISIONS		
73	REVISIONS		
74	REVISIONS		
75	REVISIONS		
76	REVISIONS		
77	REVISIONS		
78	REVISIONS		
79	REVISIONS		
80	REVISIONS		
81	REVISIONS		
82	REVISIONS		
83	REVISIONS		
84	REVISIONS		
85	REVISIONS		
86	REVISIONS		
87	REVISIONS		
88	REVISIONS		
89	REVISIONS		
90	REVISIONS		
91	REVISIONS		
92	REVISIONS		
93	REVISIONS		
94	REVISIONS		
95	REVISIONS		
96	REVISIONS		
97	REVISIONS		
98	REVISIONS		
99	REVISIONS		
100	REVISIONS		

BERTRAM YACHT
 MIAMI, FLORIDA, U.S.A.
 A DIVISION OF BERTRAM CORPORATION
 WIRE DIAGRAM
 DATE: 2/6/62
 DRAWN BY: [Signature]
 CHECKED BY: [Signature]

REFERENCES	
NO	DESCRIPTION
1	MERC ENGINE REF ENG WIRING DIAGRAM MANUAL
2	WIRING DIAGRAM DISTRIBUTION SYSTEM YACHT






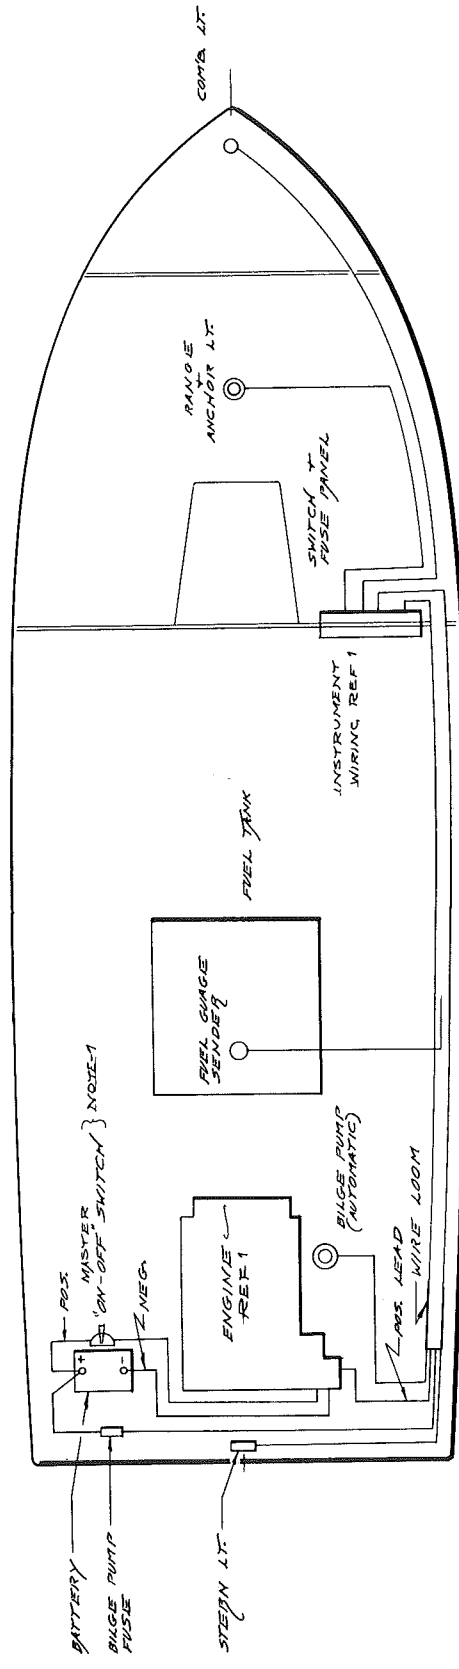


NOTE
 MASTER SWITCH NOT SHOWN ON MERC. ENGINE WIRING DIAGRAM



DATE	REVISIONS	BY	UNIT
BETRAM YACHT PALM BEACH, FLORIDA, U.S.A. A MEMBER OF THE YACHTS CORPORATION MODEL 22 / HULL NO. 311			
TITLE: WIRE DIAGRAM			
SCALE	DATE	BY	CHK

REFERENCES

NO	DESCRIPTION	DWG NO.
1	MERC. ENGINE WIRING DIAGRAM	SEE ENG MANUAL
2	WIRING DIAGRAM BERTRAM YACHT	D-2642

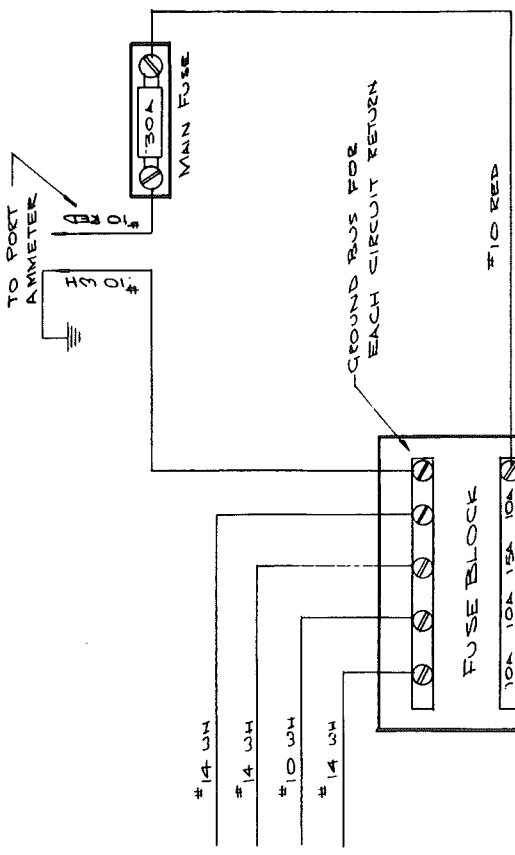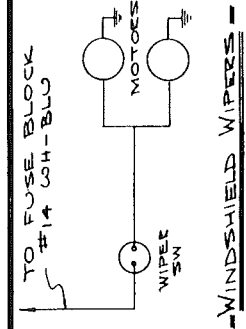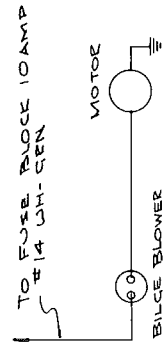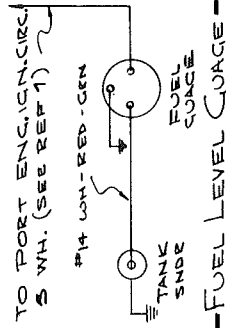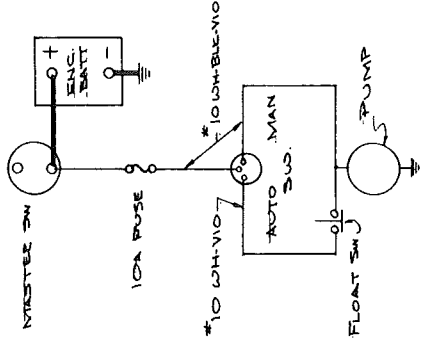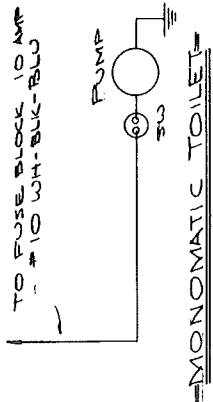

= 12 VOLT DISTRIBUTION =

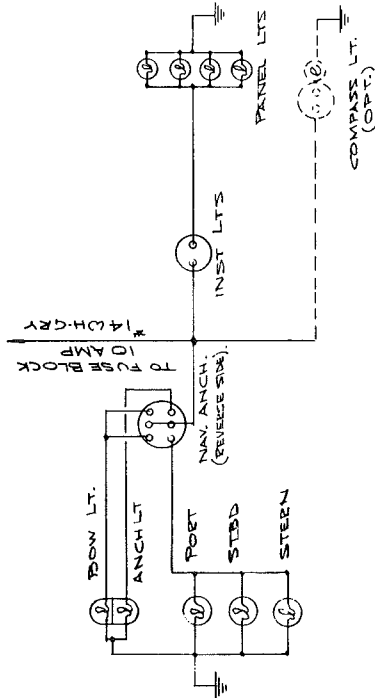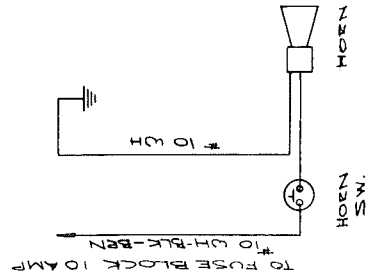

= NAVIGATION LIGHT CIRCUIT =

LET.	DESCRIPTION	BY	DATE	APP.
	REVISIONS			







BERTRAM YACHT
 MIAMI, FLORIDA, U.S.A.
 A SUBSIDIARY OF WHITTAKER CORPORATION

MODEL **24' CAMPERS**
 TITLE **WIRING DIAGRAM DISTRIBUTION**

SCALE: NONE
 PLAN NO. _____
 REV. _____

APPROVED: _____
 DATE: 5/5/71
 C 2807
 FILE: 512C

REFERENCES.	
NO	DESCRIPTION DWG. NO.
1	MERC ENGINE WIRING DIAGRAM SEE ENG MANUEL
2	WIRING DIAGRAM BERTRAM YACHT D-2641

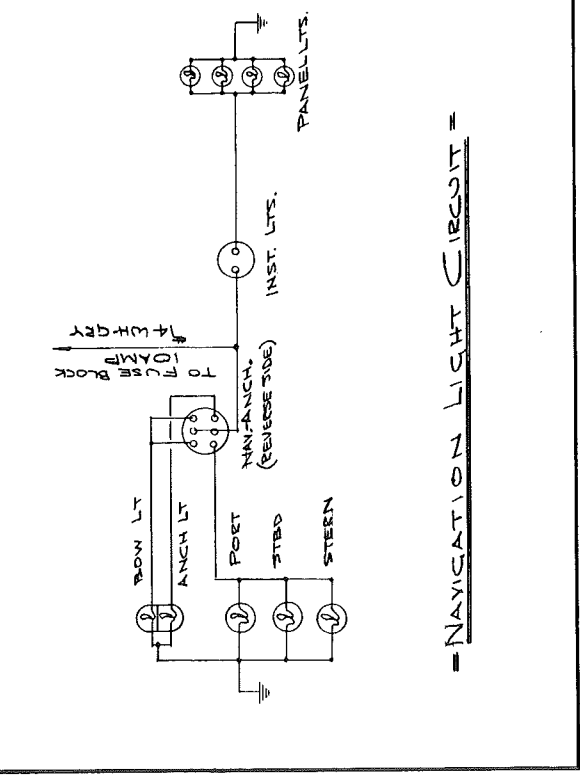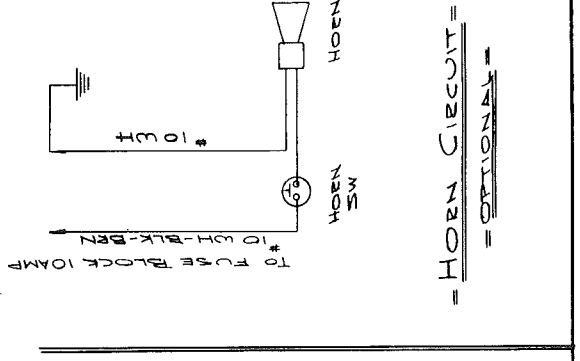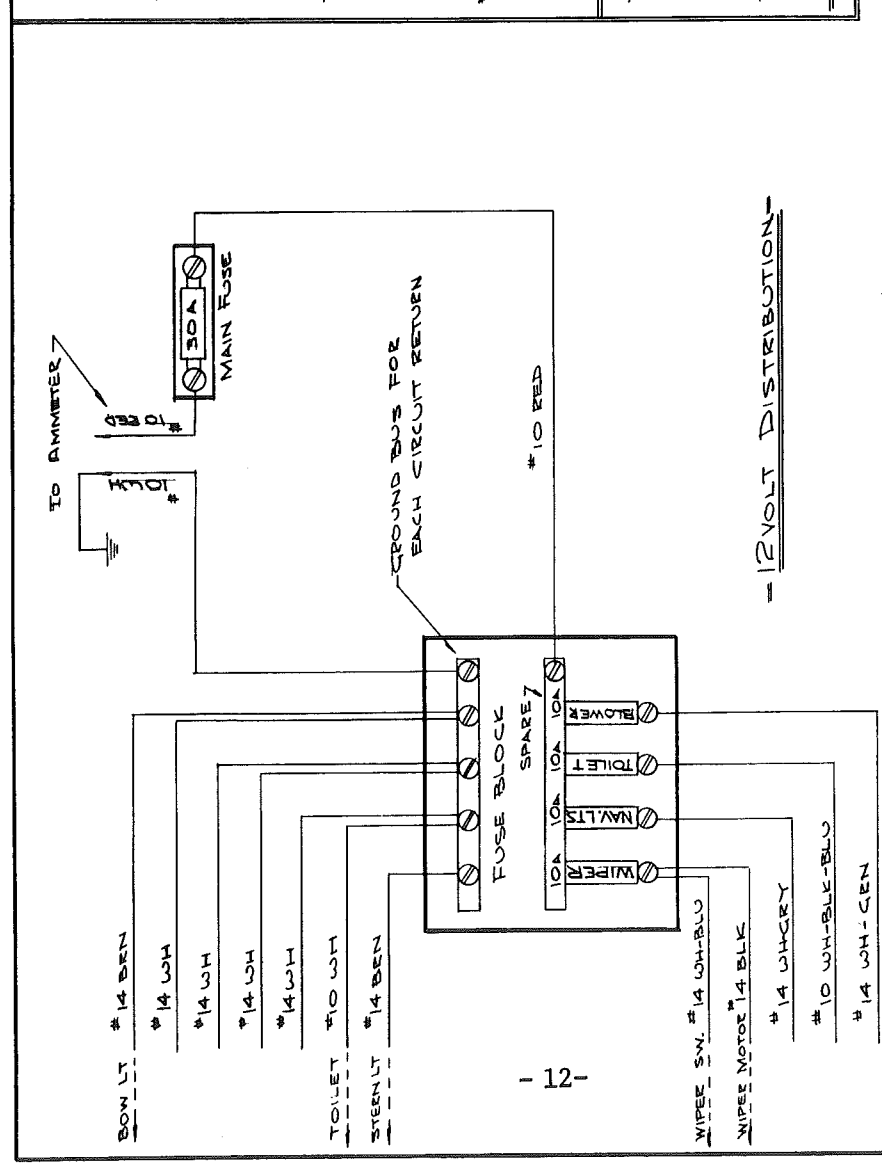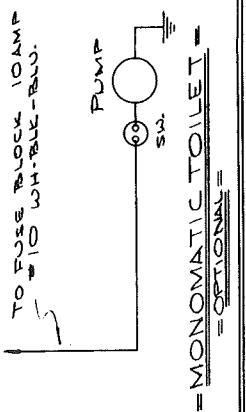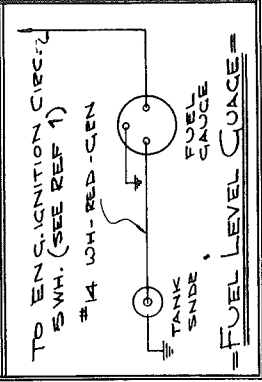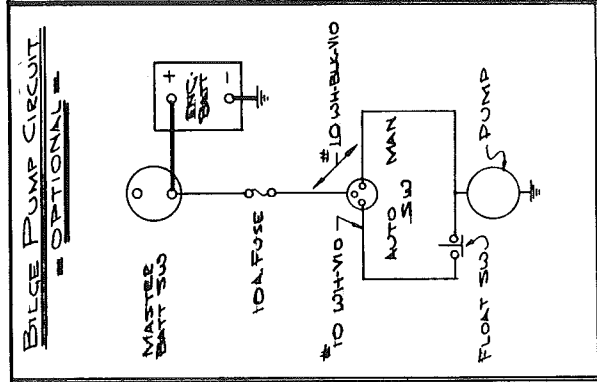

LET.	DESCRIPTION	REVISIONS	BY	DATE	APP.
	BERTRAM YACHT MIAMI, FLORIDA, U.S.A. A SUBSIDIARY OF WHITTAKER CORPORATION				
	MODEL 24 MOORE II				
	TITLE WIRING DIAGRAM DISTRIBUTION				
	SCALE NONE				
	BY WHITTAKER APPRO. DATE 1/5/71				
	PLAN NO. C 2815				
	REV.				
	FILE ENG.				

FUEL SYSTEM

FUELING INSTRUCTIONS

These steps should be followed in this order each time you fuel your Bertram:

- 1) Close windows, doors, hatches and engine hatch.
- 2) Do not operate any equipment: This means engine, or bilge blower and close service valve on fuel line.
- 3) Make sure the filling hose nozzle is touching the yacht's fill pipe fitting before any fuel is pumped.
- 4) Top the tank until fuel overflows through the vent fitting on hull side below fill pipe.
- 5) Open hatches and engine hatch. Then visually and by smell check to make sure there are no fuel leaks or fuel fumes present. At the same time, open the fuel feed line located close to the tank and inspect all fuel lines and fittings.
- 6) Operate the bilge blower and leave it running until you start the engine. Start engine after a minimum of five minutes of operating the blower.
- 7) Close engine hatch and other hatches after main engine has been running for some time.

FUEL SYSTEM


The Bertram 24' has a molded fiberglass fuel tank with a capacity of 100 gallons for twin engine installation with exception of the Moppie II which has a 50 gallon capacity for single engine installation. The tank is made of fire retardant resins. The fuel tank is not an integral part of the

hull. The gauge sender is located at the rear of the tank. There are two shutoff valves in all fuel feed lines; a service valve at fuel filter, and another at the tank for each engine. The fuel filling connection is located on the starboard side amidship. The tank vent is a thru hull fitting just below the filling connection.


FUEL

Use only the fuel recommended by the engine manufacturer. Should you be forced to use lower than specified octane in gasoline engines, do not exceed 2700 RPM under any conditions as severe internal damage to the engines could result at a faster RPM. See the Engine Operator's Manual for more information.

REV.	DESCRIPTION	DATE	BY
1	REVISIONS		
BERTRAM YACHT MIAMI, FLORIDA, U.S.A. A DIVISION OF BERTRAM CORPORATION 24 CANAL STREET, MIAMI, FLORIDA, U.S.A.			
BERTRAM YACHT MIAMI, FLORIDA, U.S.A. 24 CANAL STREET, MIAMI, FLORIDA, U.S.A.			
NO.	DATE	BY	
0	2/77		

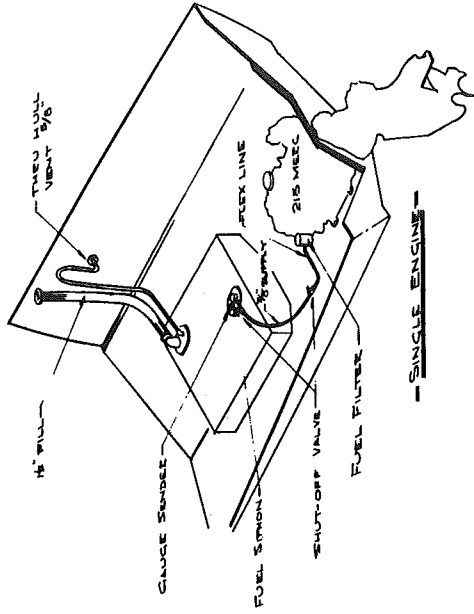


- SINGLE ENGINE -

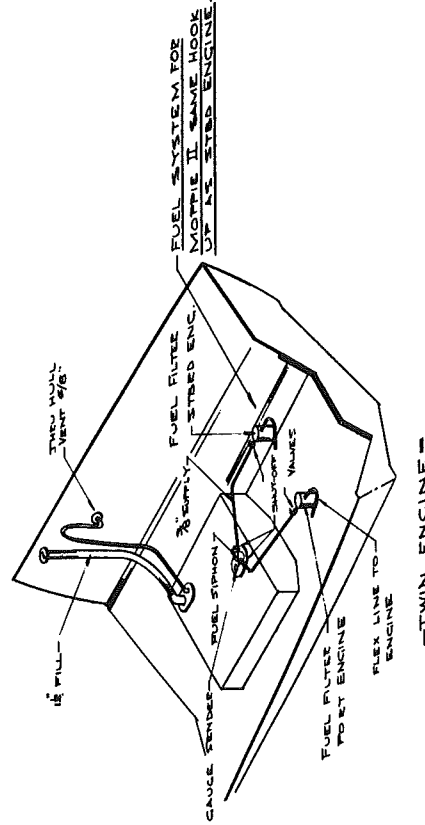


- TWIN ENGINE -

FUEL SYSTEM FOR
 MOTOR II SAME HOOD
 OF 15-150 ENGINE

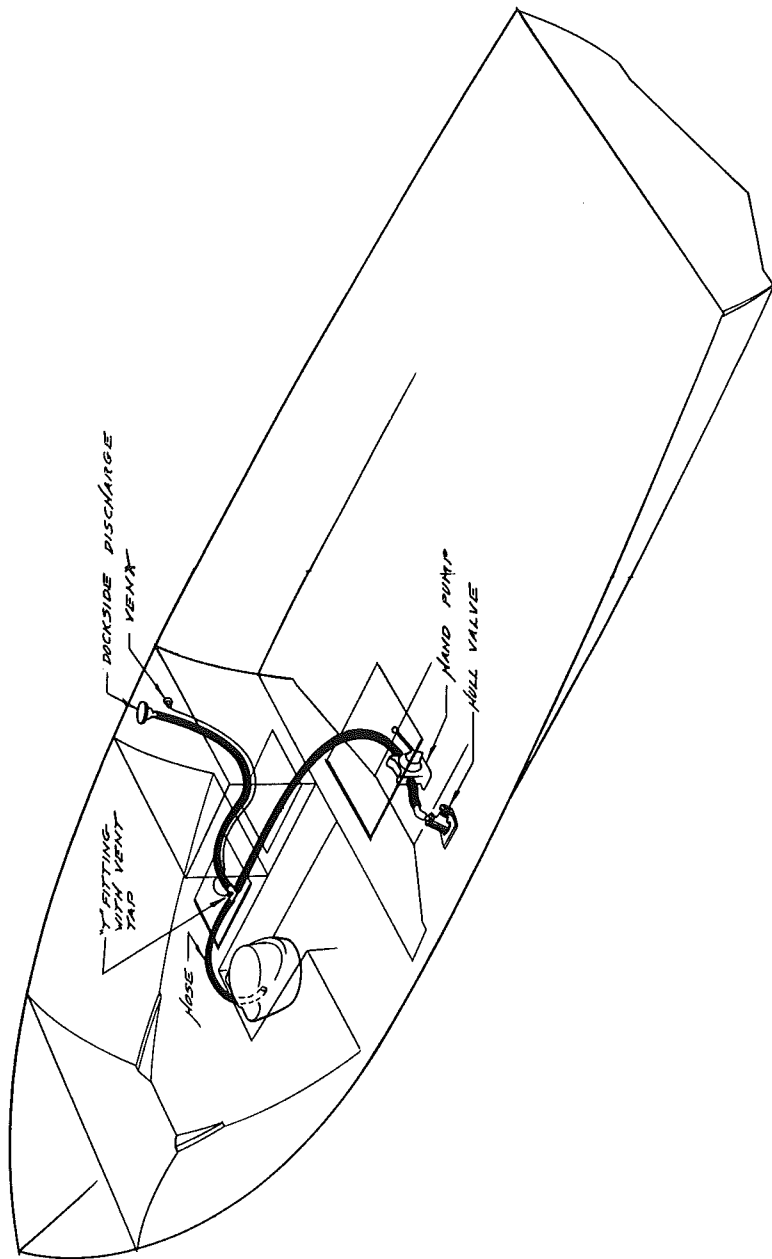

UNIT	DESCRIPTION	DATE	TYPE
	REVISIONS		
	BERTRAM YACHT		
	M. M. FLORIDA, INC.		
	A DIVISION OF BERTHOLD COMPANY		
	MODEL 24		
	FILE TO BE PLANNING		
	NO. 1, DOCK		
	NO. 2, DOCK		
	NO. 3, DOCK		
	NO. 4, DOCK		
	NO. 5, DOCK		
	NO. 6, DOCK		
	NO. 7, DOCK		
	NO. 8, DOCK		
	NO. 9, DOCK		
	NO. 10, DOCK		
	NO. 11, DOCK		
	NO. 12, DOCK		
	NO. 13, DOCK		
	NO. 14, DOCK		
	NO. 15, DOCK		
	NO. 16, DOCK		
	NO. 17, DOCK		
	NO. 18, DOCK		
	NO. 19, DOCK		
	NO. 20, DOCK		
	NO. 21, DOCK		
	NO. 22, DOCK		
	NO. 23, DOCK		
	NO. 24, DOCK		
	NO. 25, DOCK		
	NO. 26, DOCK		
	NO. 27, DOCK		
	NO. 28, DOCK		
	NO. 29, DOCK		
	NO. 30, DOCK		
	NO. 31, DOCK		
	NO. 32, DOCK		
	NO. 33, DOCK		
	NO. 34, DOCK		
	NO. 35, DOCK		
	NO. 36, DOCK		
	NO. 37, DOCK		
	NO. 38, DOCK		
	NO. 39, DOCK		
	NO. 40, DOCK		
	NO. 41, DOCK		
	NO. 42, DOCK		
	NO. 43, DOCK		
	NO. 44, DOCK		
	NO. 45, DOCK		
	NO. 46, DOCK		
	NO. 47, DOCK		
	NO. 48, DOCK		
	NO. 49, DOCK		
	NO. 50, DOCK		
	NO. 51, DOCK		
	NO. 52, DOCK		
	NO. 53, DOCK		
	NO. 54, DOCK		
	NO. 55, DOCK		
	NO. 56, DOCK		
	NO. 57, DOCK		
	NO. 58, DOCK		
	NO. 59, DOCK		
	NO. 60, DOCK		
	NO. 61, DOCK		
	NO. 62, DOCK		
	NO. 63, DOCK		
	NO. 64, DOCK		
	NO. 65, DOCK		
	NO. 66, DOCK		
	NO. 67, DOCK		
	NO. 68, DOCK		
	NO. 69, DOCK		
	NO. 70, DOCK		
	NO. 71, DOCK		
	NO. 72, DOCK		
	NO. 73, DOCK		
	NO. 74, DOCK		
	NO. 75, DOCK		
	NO. 76, DOCK		
	NO. 77, DOCK		
	NO. 78, DOCK		
	NO. 79, DOCK		
	NO. 80, DOCK		
	NO. 81, DOCK		
	NO. 82, DOCK		
	NO. 83, DOCK		
	NO. 84, DOCK		
	NO. 85, DOCK		
	NO. 86, DOCK		
	NO. 87, DOCK		
	NO. 88, DOCK		
	NO. 89, DOCK		
	NO. 90, DOCK		
	NO. 91, DOCK		
	NO. 92, DOCK		
	NO. 93, DOCK		
	NO. 94, DOCK		
	NO. 95, DOCK		
	NO. 96, DOCK		
	NO. 97, DOCK		
	NO. 98, DOCK		
	NO. 99, DOCK		
	NO. 100, DOCK		

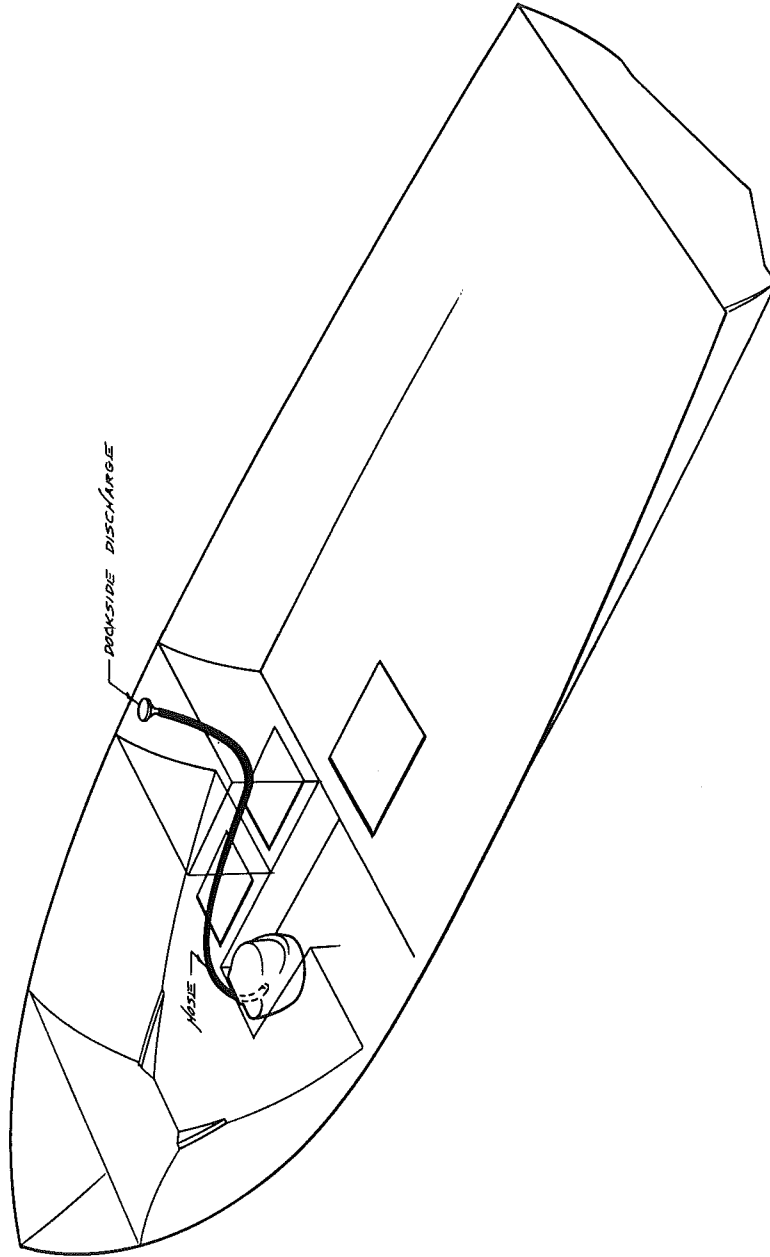

MONOMATIC WITH DOCKSIDE DISCHARGE

REV.	DESCRIPTION	BY	DATE	CHK.
REVISIONS				
BERTRAM YACHT MIAMI, FLORIDA, U.S.A. A SUBSIDIARY OF BERTRAM CORPORATION				
MODEL 24 CLASSIC - MONOMATIC DE				
DRAWING NO. 24-1000-01-01-01				
SCALE 1/4" = 1'-0"				
DATE 10/15/71				
DRAWN BY J. J. BROWN				
CHECKED BY J. J. BROWN				
APPROVED BY J. J. BROWN				
PROJECT NO. 2639				
SHEET NO. 17				

ELECTRICAL ACCESSORIES

BILGE PUMP (OPTIONAL) MOPPIE II, STANDARD CAMPER

The bilge pump is installed in the engine compartment and is wired on an independent circuit. The bilge pump circuit bypasses the master switch and is controlled by a toggle switch on the console. The fuse for this circuit is located under the instrument panel and is clearly marked.

ENGINE COMPARTMENT BLOWER

The engine compartment blower is mounted on the transom and has a flexible suction hose leading to the lowest point in the bilge; it exhausts through one of the clamshell ventilators. The switch for the blower is mounted on the instrument panel and the circuit is protected by a fuse on the main fuse block.

ELECTRIC HORN

The electric horn is mounted under the deck and is actuated by a toggle switch on the instrument panel. This circuit is protected by a fuse on the main fuse block and the instrument panel.

POWER TRIM SWITCH

The power trim is the mechanism that raises the outdrive. It is controlled by a three button switch on the dash inside a shielded housing. To trim out, simply press the "UP-OUT" button. To trailer or raise completely out of water, press the "UP" button and to lower the drive, press the "IN" button.

WINDSHIELD WIPER

The windshield wiper is operated by a toggle switch located on the control panel and fuses on the main fuse block.

MONOMATIC OR CONVENTIONAL TOILET

This head is controlled by depressing the button at the forward port corner of the unit. Fuses located in the main fuse block.

MONOMATIC TOILET (OPTIONAL)

The monomatic is a combination recirculating and holding tank type toilet. It has a capacity of six gallons or 20-25 uses. The toilet is installed with a choice of two discharge systems.

- 1) Dockside discharge only to comply with regulations that allow only discharge at land base pumping stations.
- 2) Combination dockside and overboard discharge.

Both systems are provided with a fresh water fill system from the boat's water pressure system. When using overboard discharge system, discharge through hull valve must be kept closed, except when discharging. Power for the toilet is from the 12 volt section of the distribution panel. Read instructions provided by toilet manufacturer carefully before attempting to use.

COMMANDING YOUR BERTRAM

PRESTARTING INSTRUCTIONS

The following are routine procedures that should be followed each time you take your Bertram out.

- 1) Always check your fuel and see to it that the fuel valve is open.
- 2) If equipped with a bilge blower, run blower for at least five (5) minutes. If not, open engine hatch and check for gasoline fumes.
- 3) Check engine lube oil level.

STARTING INSTRUCTIONS

- 1) Be sure Master Battery Switch is in "on" position.
- 2) Check gear shift lever to be sure it is in Neutral position.
- 3) Disengage throttle and advance throttle about (1) one inch.
- 4) Insert key in ignition switch and turn to right as far as it will go. When engine starts, release key and it will automatically return to ignition position. Adjust throttle to idling speed.

STOPPING ENGINES

To stop the engine, simply turn the key to the left as far as it will go.

MANEUVERING

In docking approach the dock at a slow speed at about a 30° angle.

When your bow is about five feet from the dock, put the shift lever in reverse and turn the wheel toward the dock. This will reduce your forward movement and bring your stern in toward the dock.

CRUISING SPEEDS

As you increase speed, your Bertram will increase her angle of trim. That is, the bow rises. From a maximum angle, she will start to level off, and assume a planing attitude. Do not stay at the maximum angle, or "on the hump" any longer than necessary. Take note of your engine RPM's on the hump. Then cruise either under that speed or over it. Best cruising speed depends on the type of engine and the weight load of your Bertram. But as a rule, top cruising speed RPM should be 10% to 15% less than the top RPM. (Consult your engine manual).

Some additional considerations: Engine performance will be affected to a slight degree by atmospheric conditions. You will find your engines develop less power in warm air temperatures. Similarly, dry air reduces power, as will high altitudes. If you are cruising regularly in waters well above sea level, you will want to change carburetor adjustments to get a better air fuel mixture.

The famous Bertram V-hull cushions pounding by slicing rather than slapping waves. You'll be able to go out in weather that keeps ordinary boats at their moorings. But even Bertrams can encounter extreme conditions that call for sensible seamanship. While your Bertram will withstand far greater punishment than you will probably ever subject her to, speed should be reduced under severe conditions in the interest of your comfort, and to reduce needless strain on the engines.

CRUISING

In order to avoid going aground or damaging underwater gear, it is important to know the draft of your Bertram, or the amount of water you must have under you at all times. Draft will vary depending on how many people and how much equipment or personal effects you are carrying. What's more, your draft will be somewhat less in salt water than in fresh water.

You can determine maximum draft by measuring the freeboard from the sheer to the water line at the center of the transom. Subtract this freeboard from the hull depth at the transom (see docking plan in this manual) to get the hull draft at the transom. Add depth of underwater gear as indicated in docking plan, and you have the maximum draft. Record the figure where you can refer to it quickly.

If you plan to travel waterways crossed by bridges, you'll want to know the height of your Bertram from the waterline. Take your measurement when your Bertram is lightened of its fuel, passengers and equipment. This will give you a small safety factor when boat is loaded.

For the best results, try to maintain the original trim of the boat. You can do this by noticing her trim carefully when she is first launched, before extra equipment has gone aboard. Of course, all gear and equipment should be properly stored while cruising. To maintain proper trim on your boat, there is a switch on the console which controls the angle of the outdrive from the transom, and by moving this outdrive you can change the trim of your boat. See MerCruiser Operator's Manual.

CALLING AT PORTS AWAY FROM HOME

When cruising abroad, try to purchase fuel equal to American standards.

(See fuel systems section for requirements in your engine). Carry extra fuel filters with you, since replacement may be necessary.

LEAVING YOUR BERTRAM


The following are procedures to follow when leaving your boat overnight, or for a short period of time.

- 1) Lock all ignition or engine circuits.
- 2) Make sure mooring lines are well secured with adequate allowance for tide.
- 3) Bumper and spring lines set.
- 4) Optional automatic bilge pump should be left on "auto" position.

If for some reason your boat is taking on water, the battery should be checked frequently. The following steps should be followed when leaving your boat for longer periods of time, such as a week or more.


- 1) Follow all of the above steps.
- 2) Turn master battery switch to OFF position.
- 3) Turn off fuel valve.

BERTRAM 24' POP TOP INSTRUCTIONS

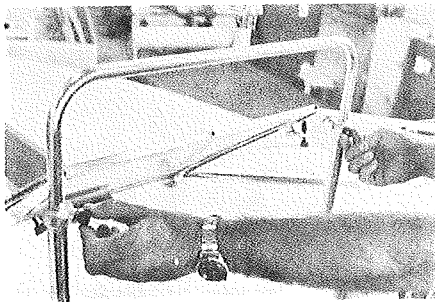


(1) Loosen the two adjusting screws on either side of the telescoping anchor light.

(2) Raise telescoping anchor light to a height of about six feet from the deck and tighten both adjusting screws in proper holes. Note: For 20' white light to be legal, it must be in the up position.

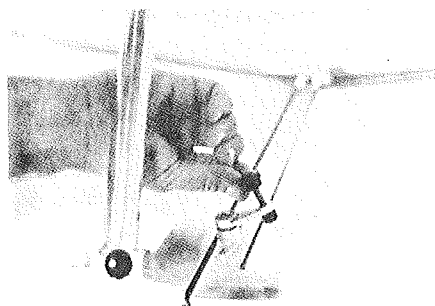


(3) Loosen adjusting screws located on either side of the walkthrough windshield.


(4) Loosen keeper screw locks and turn toward the inside of the walkthrough windshield.

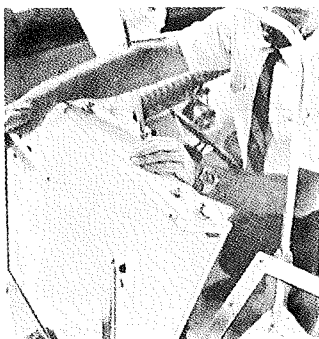


(5) Raise hatch cover, and center section of the walkthrough windshield, simultaneously.

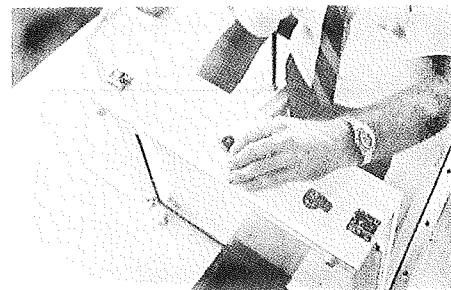

(6) Secure walkthrough windshield to hatch cover by tightening adjusting screw located on the foldaway section of the hatch cover.

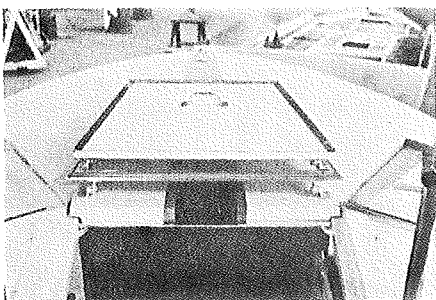


(7) Fold combined windshield and hatch cover onto foredeck.

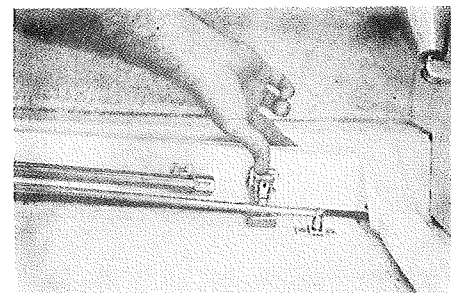

(8) Release latches located on either side of the pop top deck inside forward cabin.


BERTRAM POP TOP INSTRUCTIONS

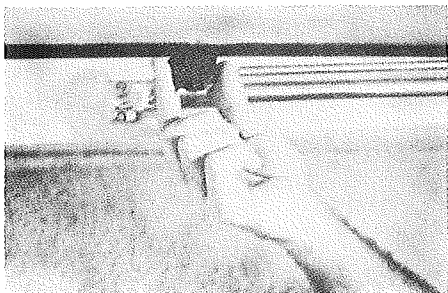


(9) Loosen adjusting knobs on pop top slider bar.



(10) Raise pop top with both hands.

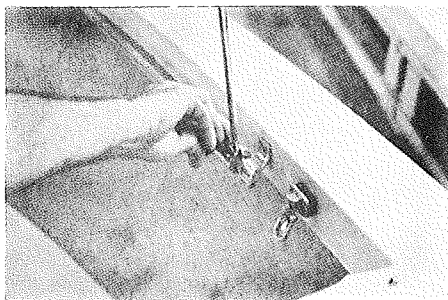

(11) Continue to hold pop top in upright position with one hand, while sliding adjusters to the farthest extent of their travel aft on the slider bars. Then, tighten adjuster knobs.

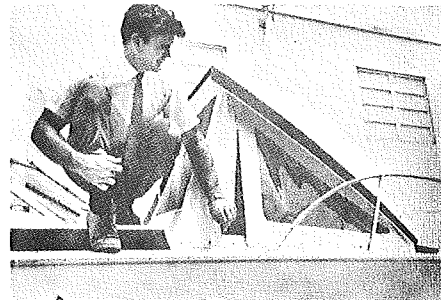

(12) Unfold canvas from underside of pop top and snap around perimeter base of pop top.



(13) Your Bertram 24' is ready for camping.

NOTE: When closing pop top, reverse this procedure. Be sure you are prepared for the weight of the top when slider bars are released.

MAINTENANCE

PERIODIC MAINTENANCE

The maintenance the Bertram 24' requires during the boating season depends to a great extent on the conditions under which the boat is used. Adequate ventilation of the boat during periods of non-use will reduce the interior maintenance, and keeping the exterior waxed will minimize the exterior maintenance.

In this section, a suggested preventive maintenance program is set forth for the boat under "average" conditions, and if this program is to be used, it should be used in conjunction with the periodic maintenance recommended in the respective operating manuals for the engines and generator.

DAILY

- 1) Pump bilges as required.
- 2) Ventilate engine compartment.
- 3) Check engine lubricating oil levels.
- 4) Check fuel, water, and oil systems for leaks.
- 5) With engines running, check engine circulating water by observing engine exhausts. Water should be exhausting along with the gases.
- 6) Top off fuel tanks at end of day's operation.
- 7) Wash down boat with fresh water.

EVERY 100 HOURS OR 60 DAYS (WHICHEVER COMES FIRST)

EXTERIOR

- 1) Visually inspect exterior fiberglass finish, clean and wax.
- 2) Inspect all hardware and apply protective polish. Tighten any loose fittings.

- 3) Inspect all exterior seat cushions. If wet, remove covers and air dry in sunlight all polyfoam and covers. Clean covers with mild soap solution or light Clorox solution. Wash any cleaning materials off with fresh water.

INTERIOR

- 1) Completely air out the boat.
- 2) Inspect all life jackets.
- 3) If any mildew is found, thoroughly wash down area with Clorox solution.
- 4) Lubricate dog threads with Vaseline.
- 5) Check all fire extinguishers for full charge.
- 6) Check operation of lights.
- 7) Check bow hatch for operation and watertight fit.

ENGINE COMPARTMENT

- 1) Follow periodic preventive maintenance for engines and marine gears as specified in engine manual.
- 2) Inspect exhaust hoses and hose clamps.
- 3) Check engine mounting bolts to see that they are tight. If bolts are found to be loose, realign engine.
- 4) Check all hoses on engines, and hose clamps. Inspect for leaks.
- 5) Check fuel lines, flare nuts, and valves for leaks.
- 6) Check control cable brackets for tightness.
- 7) Check electrical connections and clean if corroded.
- 8) Check exhaust blower for operation and hose for leaks.
- 9) Check all wiring to see that it is not rubbing or insulation worn off.

- 10) Check all gauge senders.
- 11) Check studs for ground plates.
- 12) Check all battery cells with hydrometer. They should be between 1.250 and 1.265. Add water to cells as necessary.
- 13) Clean battery terminals, scrape and pack with Vaseline.
- 14) Clean out stringer limber holes.
- 15) Remove and clean screen on bilge pump pick up and check operation of pump.
- 16) Lubricate control heads and cables with Vaseline.
- 17) Lubricate working parts of pop top.

AS REQUIRED

- 1) Pull boat out of water; scrub if necessary.

NOTE: The mold release that is used to lay up the hull at the factory has a certain amount of wax which makes it difficult to get good adherence of the anti-fouling fiberglass bottom paint during the first several months of operation.

STORING YOUR BERTRAM

DRY STORAGE

1) Indoor storage is generally preferred, if there is good ventilation, and if the location is otherwise safe and dry. However, outdoor storage may be all that is available, or economically practical.

2) For any special instructions for covering the Bertram 24' for outdoor storage, refer to docking plan.

3) To keep bilge dry, remove bilge drain plug and open all valves and/or seacocks.

4) Drain all tanks, water lines and pumps of water to prevent damage from freezing. Add anti-freeze to any low position lines that can't be drained. In warm climates, draining will prevent water stagnation.

5) Open hatches sufficiently to allow air to circulate. Also, leave locker doors open.

6) If possible, remove cushions, clean and store in a dry place. If they must be left aboard, prop up on one edge for maximum ventilation.

7) Synthetic material lines need only proper handling and occasional cleaning. Natural fiber lines should be dried and kept in a well ventilated place.

CAUTION

Do not oil any rubber or leather parts.

8) To protect chrome, stainless, or aluminum deck hardware, first remove any salt deposits with fresh water, then clean with a good quality non-abrasive type metal cleaner. Finally give items a light coat of wax or other protective coating.

9) Check propellers for nicks, dents, and bent blades. Any replacement or repairs should be made at this time instead of during the Spring rush.

10) Be sure all linkages of steering, engine and other controls are free and well lubricated.

11) Remove battery and make arrangements for storage and period recharging.

WET STORAGE

All the above applies, except of course, valves and thru hull fittings should remain closed, and the electrical master switch placed in the OFF position.

FITTING OUT

In order to ensure maximum pleasure and enjoyment from your Bertram 24' after an extended lay up, a thorough check of the boat and equipment is necessary with maintenance being done as indicated. The following list should serve as a guide for the more important items to be accomplished.

PRE-LAUNCH AND POST-LAUNCH CHECKS

In all likelihood, your Bertram has been delivered to you in the water, with these checks already made by your Bertram dealer. However, when she has been hauled, and you are fitting out for a new season, be sure these checks are made.

PRE-LAUNCH

1) Bilge drain plug should be in place and secure.

AFTER LAUNCH

- 1) Supply and discharge lines are secure.
- 2) Fittings are all tight.
- 3) Bilge pumps working.
- 4) Bilge blower working.

ELECTRICAL SYSTEM CHECK

1) Battery is properly charged at 1.260 sg. If below 1.220 sg., have charged.

2) Engine wire looms secure, away from exhaust manifold, connections tight.

3) Check the following standard and optional electrically operated equipment to make sure each is working properly.

Navigation Lights

Radio

Horn

Wipers

ENGINE CHECK

- 1) Fuel lines and cooling lines secure and tight fittings.
- 2) Exhaust fittings secure and tight.
- 3) Engine mount fastening tight, locked.
- 4) See engine manual for service.

CONTROLS CHECK

- 1) Clutch adjusted, fittings secured.
- 2) Throttle adjusted, fittings secured.
- 3) Steering is positive, linkage secure.
- 4) All gauges, water temperature, oil pressure, tachometer, ammeter, are properly operating (after starting engines).

MAINTAINING YOUR BERTRAM

CARE OF FIBERGLASS CONSTRUCTION

The fiberglass construction which makes up the entire hull and most of the superstructure, consists of several parts. The exterior layer gelcoat is a special polyester resin into which coloring pigments have been incorporated to give built-in color. Just beneath the gelcoat, is a series of glass fabric laminations bonded together with polyester resin. The complete lamination and gelcoat are bonded together by a chemical action, and the part is a one-piece unit. The outside gelcoat -- approximately 0.015 inch depth -- gives the fiberglass part its glossy finish. The following recommendations will help you keep this unique material in the same condition it was when it left the factory.

SEASONAL CARE (AT FITTING OUT TIME)

- 1) Clean surface with soap and water.
- 2) Treat with an automotive type rubbing compound. Use lightly.
- 3) Wax and polish the surface with an automotive type wax.

Some modern products give you rubbing and waxing action in one. These are also acceptable.

LOSS OF GLOSS

To restore the glossy appearance of the gelcoat surfaces, a light buffing may be advisable. For hand buffing, use a slightly abrasive rubbing compound similar to Dupont No. 7. If a powder buffer is used, Mirro-Glaze No. 1 or similar product is recommended. After buffing, the surface should be waxed and polished as described above for seasonal care.

STAINS

The fiberglass gelcoat surface is non-porous and therefore highly resistant to stains. Most can be removed easily with household detergent. Crayon, lipstick or shoe polish can be removed with plain alcohol. Ink spots will come off with Ajax or a similar detergent. While penetrating stains are very uncommon, some products with unusual chemical contents may go too deep for ordinary methods of removal. In such cases, weak solutions of acids or alkalies, such as hydrochloric acid or ammonia can be tried. These may, however, produce a slight discoloration in the gelcoat. If none of the above methods are successful, it may be necessary to sand down through the gelcoat to remove the stain. This will require refinishing (see below).

SCRATCHES AND ABRASIONS

Those that do not penetrate the full thickness of the gelcoat can be treated by lightly sanding and buffing the area. Larger scratches that penetrate the gelcoat, but do not go deeply into the fiberglass or weaken the structure, can also be repaired as follows:

- 1) Clean damaged area, first with mineral spirits or turpentine to remove dirt and wax. Follow with detergent and rinse. Allow to dry completely.
- 2) Secure a small amount of pigmented gelcoat resin matching the color of the area to be repaired. This is available from your Bertram dealer.
- 3) Add two drops of catalyst per cubic inch of gelcoat, and mix thoroughly. The mixture will gel in 15 minutes.
- 4) Fill scratch with the mixture before it hardens, and round off about 1/16" to 1/8" above surrounding surface.

5) Lay a piece of wax paper or cellophane on top of the patch and press lightly to remove air. Take off wax paper after 20 minutes, and allow patch to cure overnight.

6) Sand down patch with 600 grit wet sandpaper. Finish by rubbing and buffing with regular buffing compound.

Any repairs to fiberglass that are more extensive than those described here should be made only with the help and advice of your Bertram dealer.


PAINTING FIBERGLASS SURFACES

1) Thoroughly clean fiberglass part to be painted, removing any wax with mineral spirits, turpentine or other commercial solvents. Then wash with detergent and rinse.

2) After surface is dry, sand lightly with garnet, fine oxide or #220 sandpaper. Wipe clean of all dust.

3) Apply two thin coats of primer as recommended by marine paint manufacturer.

4) Apply regular or epoxy paint of good quality as manufacturer directs. While the fiberglass bottom of your Bertram is inherently anti-fouling, you may find your cruising waters make an anti-fouling paint application worthwhile. Follow the above directions (and those of the manufacturer) in applying such a paint to your hull.

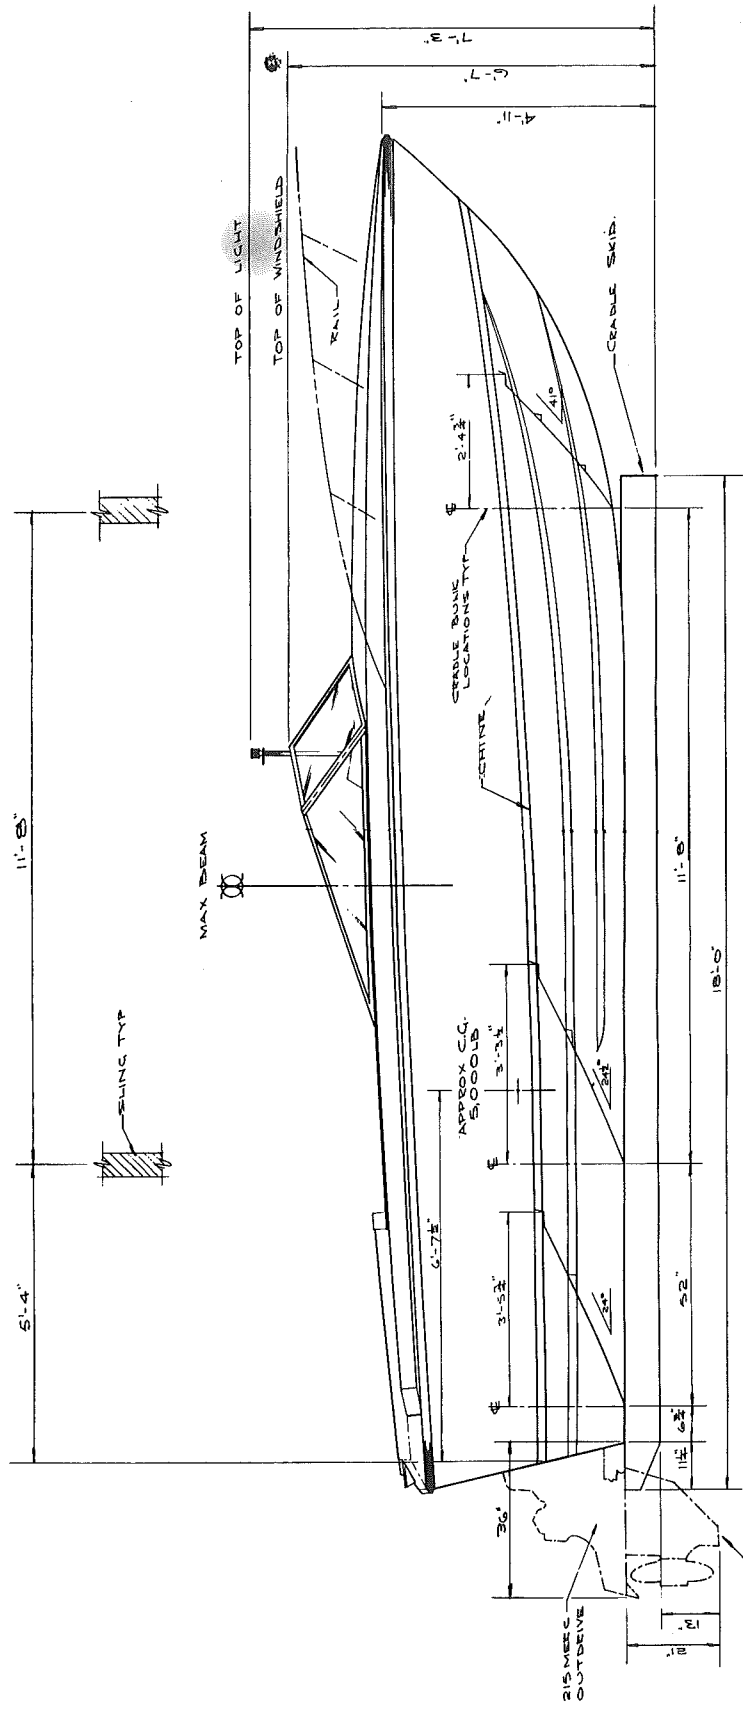

ADDITIONAL BLOCKING MUST BE ADDED TO MAKE CLEARANCE FOR OUTDRIVE

LOA. 24'-0" } MOLDED.
BEAM 8'-0" }

REV.	DESCRIPTION	BY	DATE	APP.
1	DOCKING PLAN			
2				
3				
4				
5				
6				
7				
8				
9				
10				
11				
12				
13				
14				
15				
16				
17				
18				
19				
20				
21				
22				
23				
24				
25				
26				
27				
28				
29				
30				
31				
32				
33				
34				
35				
36				
37				
38				
39				
40				
41				
42				
43				
44				
45				
46				
47				
48				
49				
50				

BERTRAM YACHT
MIAMI, FLORIDA, U.S.A.
A MEMBER OF BERTRAM CORPORATION
1000 EAST CAWTHRAE BLVD. MIAMI, FLORIDA 33134
PHONE 305-371-1111
FAX 305-371-1112
WWW.BERTRAMYACHT.COM