

Whiz New Features

SW 1.16 Version
Release Note

THANK YOU FOR USING OUR AI
CLEANING COBOT WHIZ. BRAIN OS
(VER1.16.24) INCLUDES UPDATES AS
FOLLOWS:



NEW FUNCTIONS

- LTE Signal Display has been updated. It is possible to check the current LTE status by the following steps
SETTINGS → ABOUT Wireless, Signal Strength. The signal strength bars shown on the status bar at the top of the screen is deleted.
- Various UI updates to improve user experience, e.g. an update of the language setting display UI.



LTE Signal Display Update

LTE Signal Display has been updated. It is possible to check the current LTE status by the following steps SETTINGS → ABOUT Wireless, Signal Strength. The signal strength bars shown on the status bar at the top of the screen is deleted.

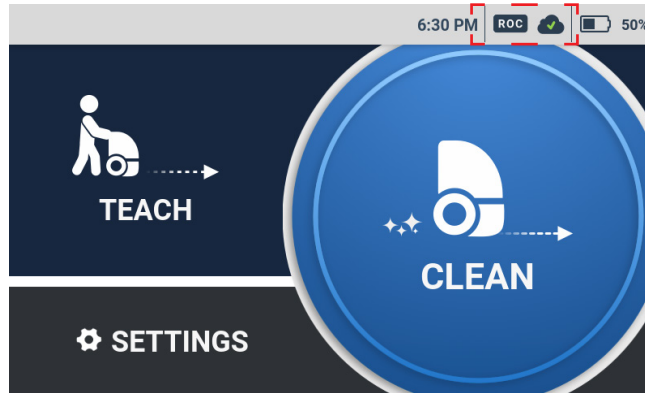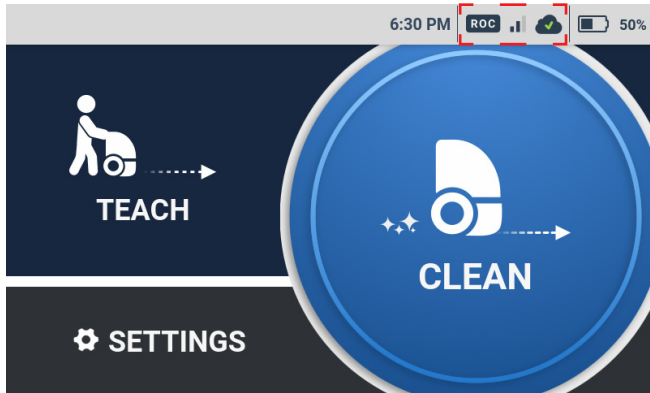

Wireless: Connected to LTE 接続済/
Not connected to LTE

Signal Strength: xx dBm

How to Update

1. Press the main power switch (I/O) to turn the Machine on (I).
2. When the Machine is connected to the Robot Operations Center (ROC), the download will start automatically. Please wait for download complete without turning the power off.
The download will take approximately one hour. The download may take several hours depending on the internet connection.
The Machine can be used during the download.
3. Turn the power off, then reboot.
Whiz may take up to a minute longer to reboot whilst the update installs.
4. Check whether the software version has been updated to "1.16.24" by tapping the "**About**" tab on the "**Settings**" menu.