


Template for BD1000 Series Barn Door Locks

For installing lock on left jamb of doorway (see other side for right jamb installation)

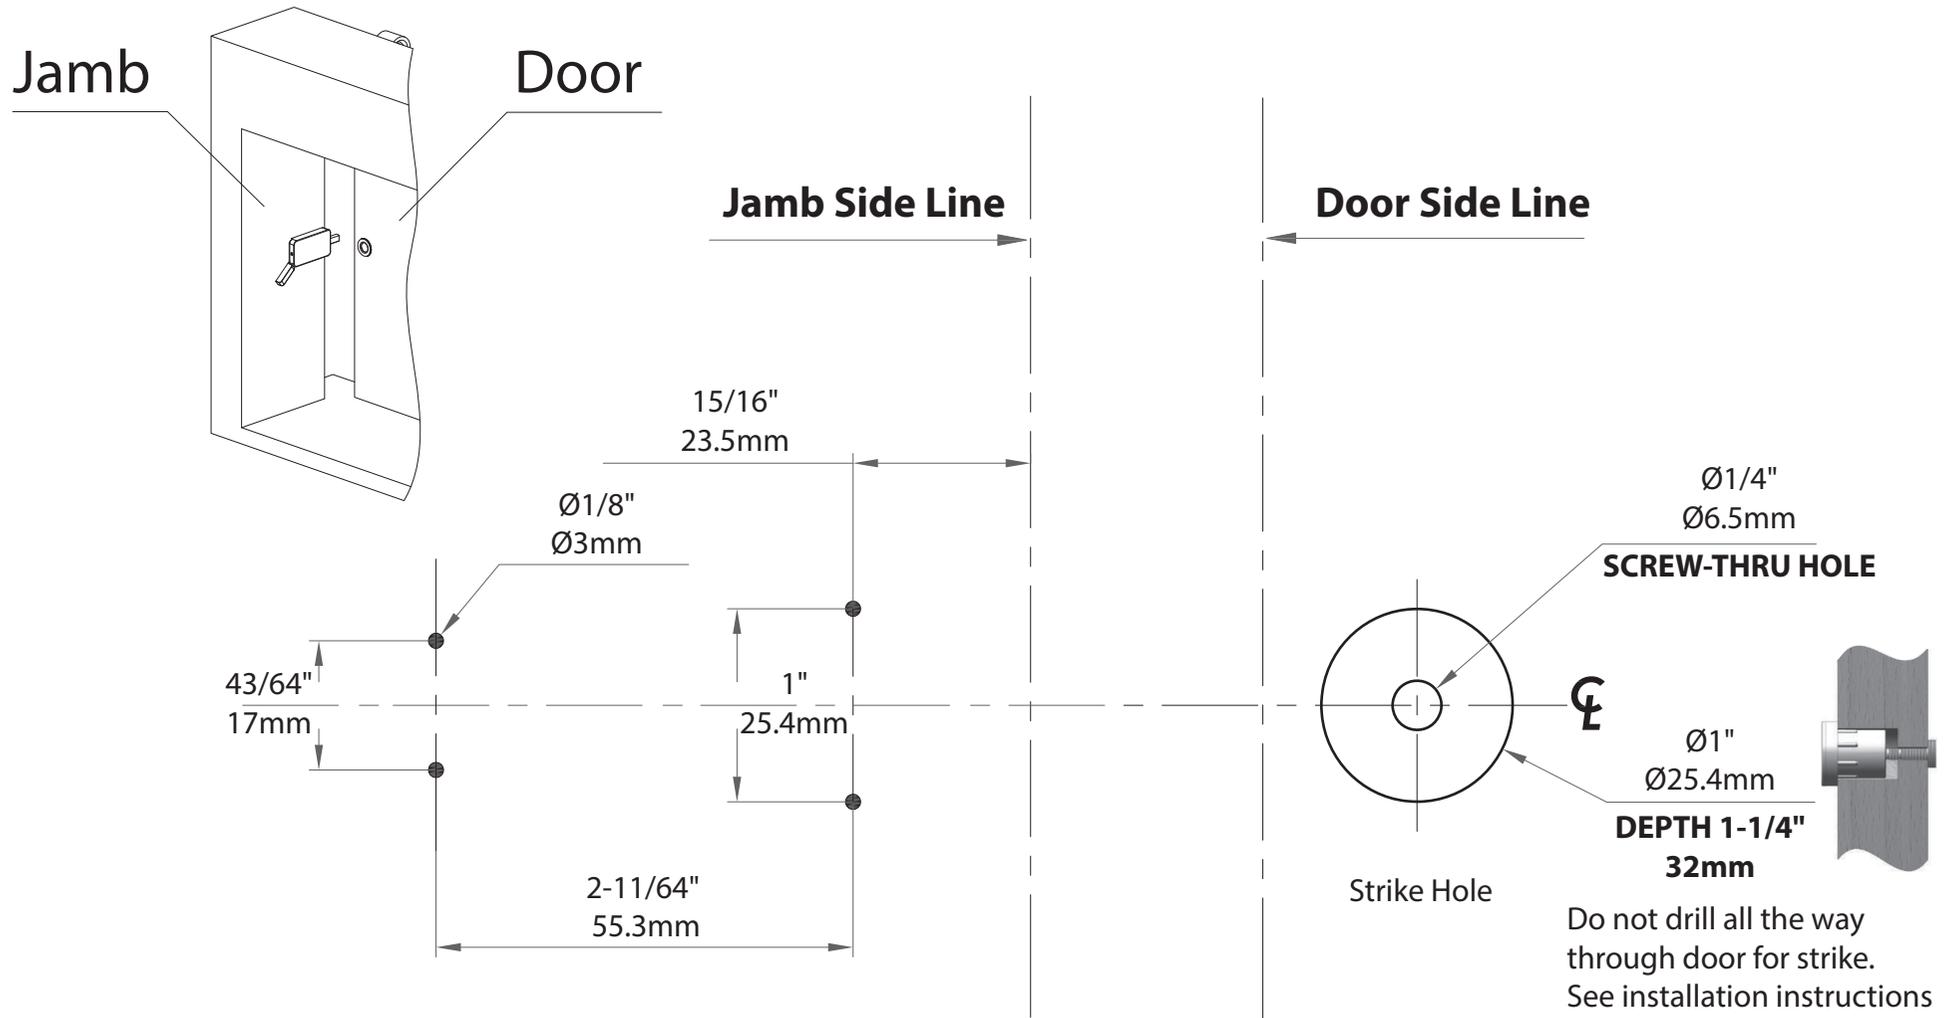


** For ADA compliance, install no more than 41" from floor.

PATENTED

Template for BD1000 Series Barn Door Locks

For installing lock on right jamb of doorway (see other side for left jamb installation)

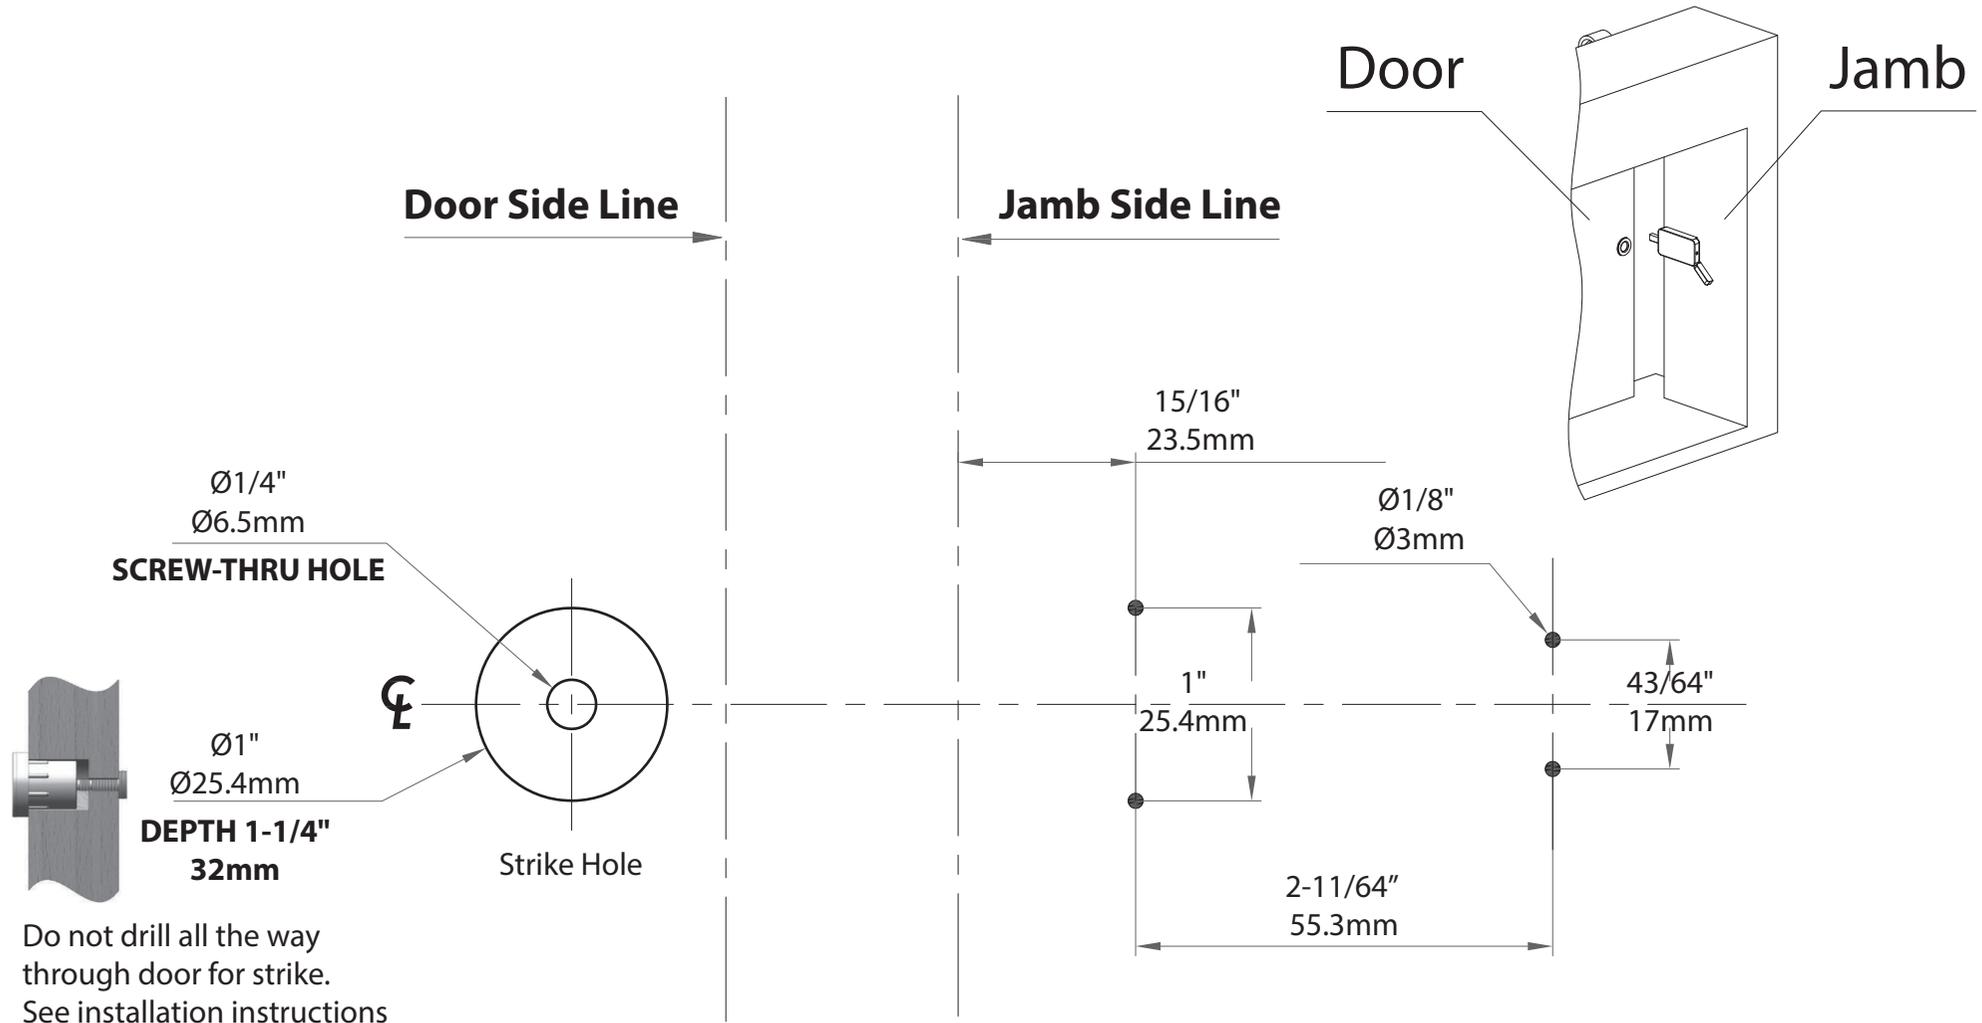

** For ADA compliance, install no more than 41" from floor.

PATENTED