


Template For PD5000 (2" Backset) Mortise Locks with FH22&23/FH22CF&23CF Flush Pulls for Pocket Doors

Case Size: 2-29/32" x 4-3/32" x 11/16"(74mm x 104mm x 17mm)

Backset: 2"(50.8mm)

Lock Front: 1" x 5-1/2" x 15/64"(25.4mm x 140mm x 6mm) Cylinder to Thumb Turn: 1-3/16"(30mm)

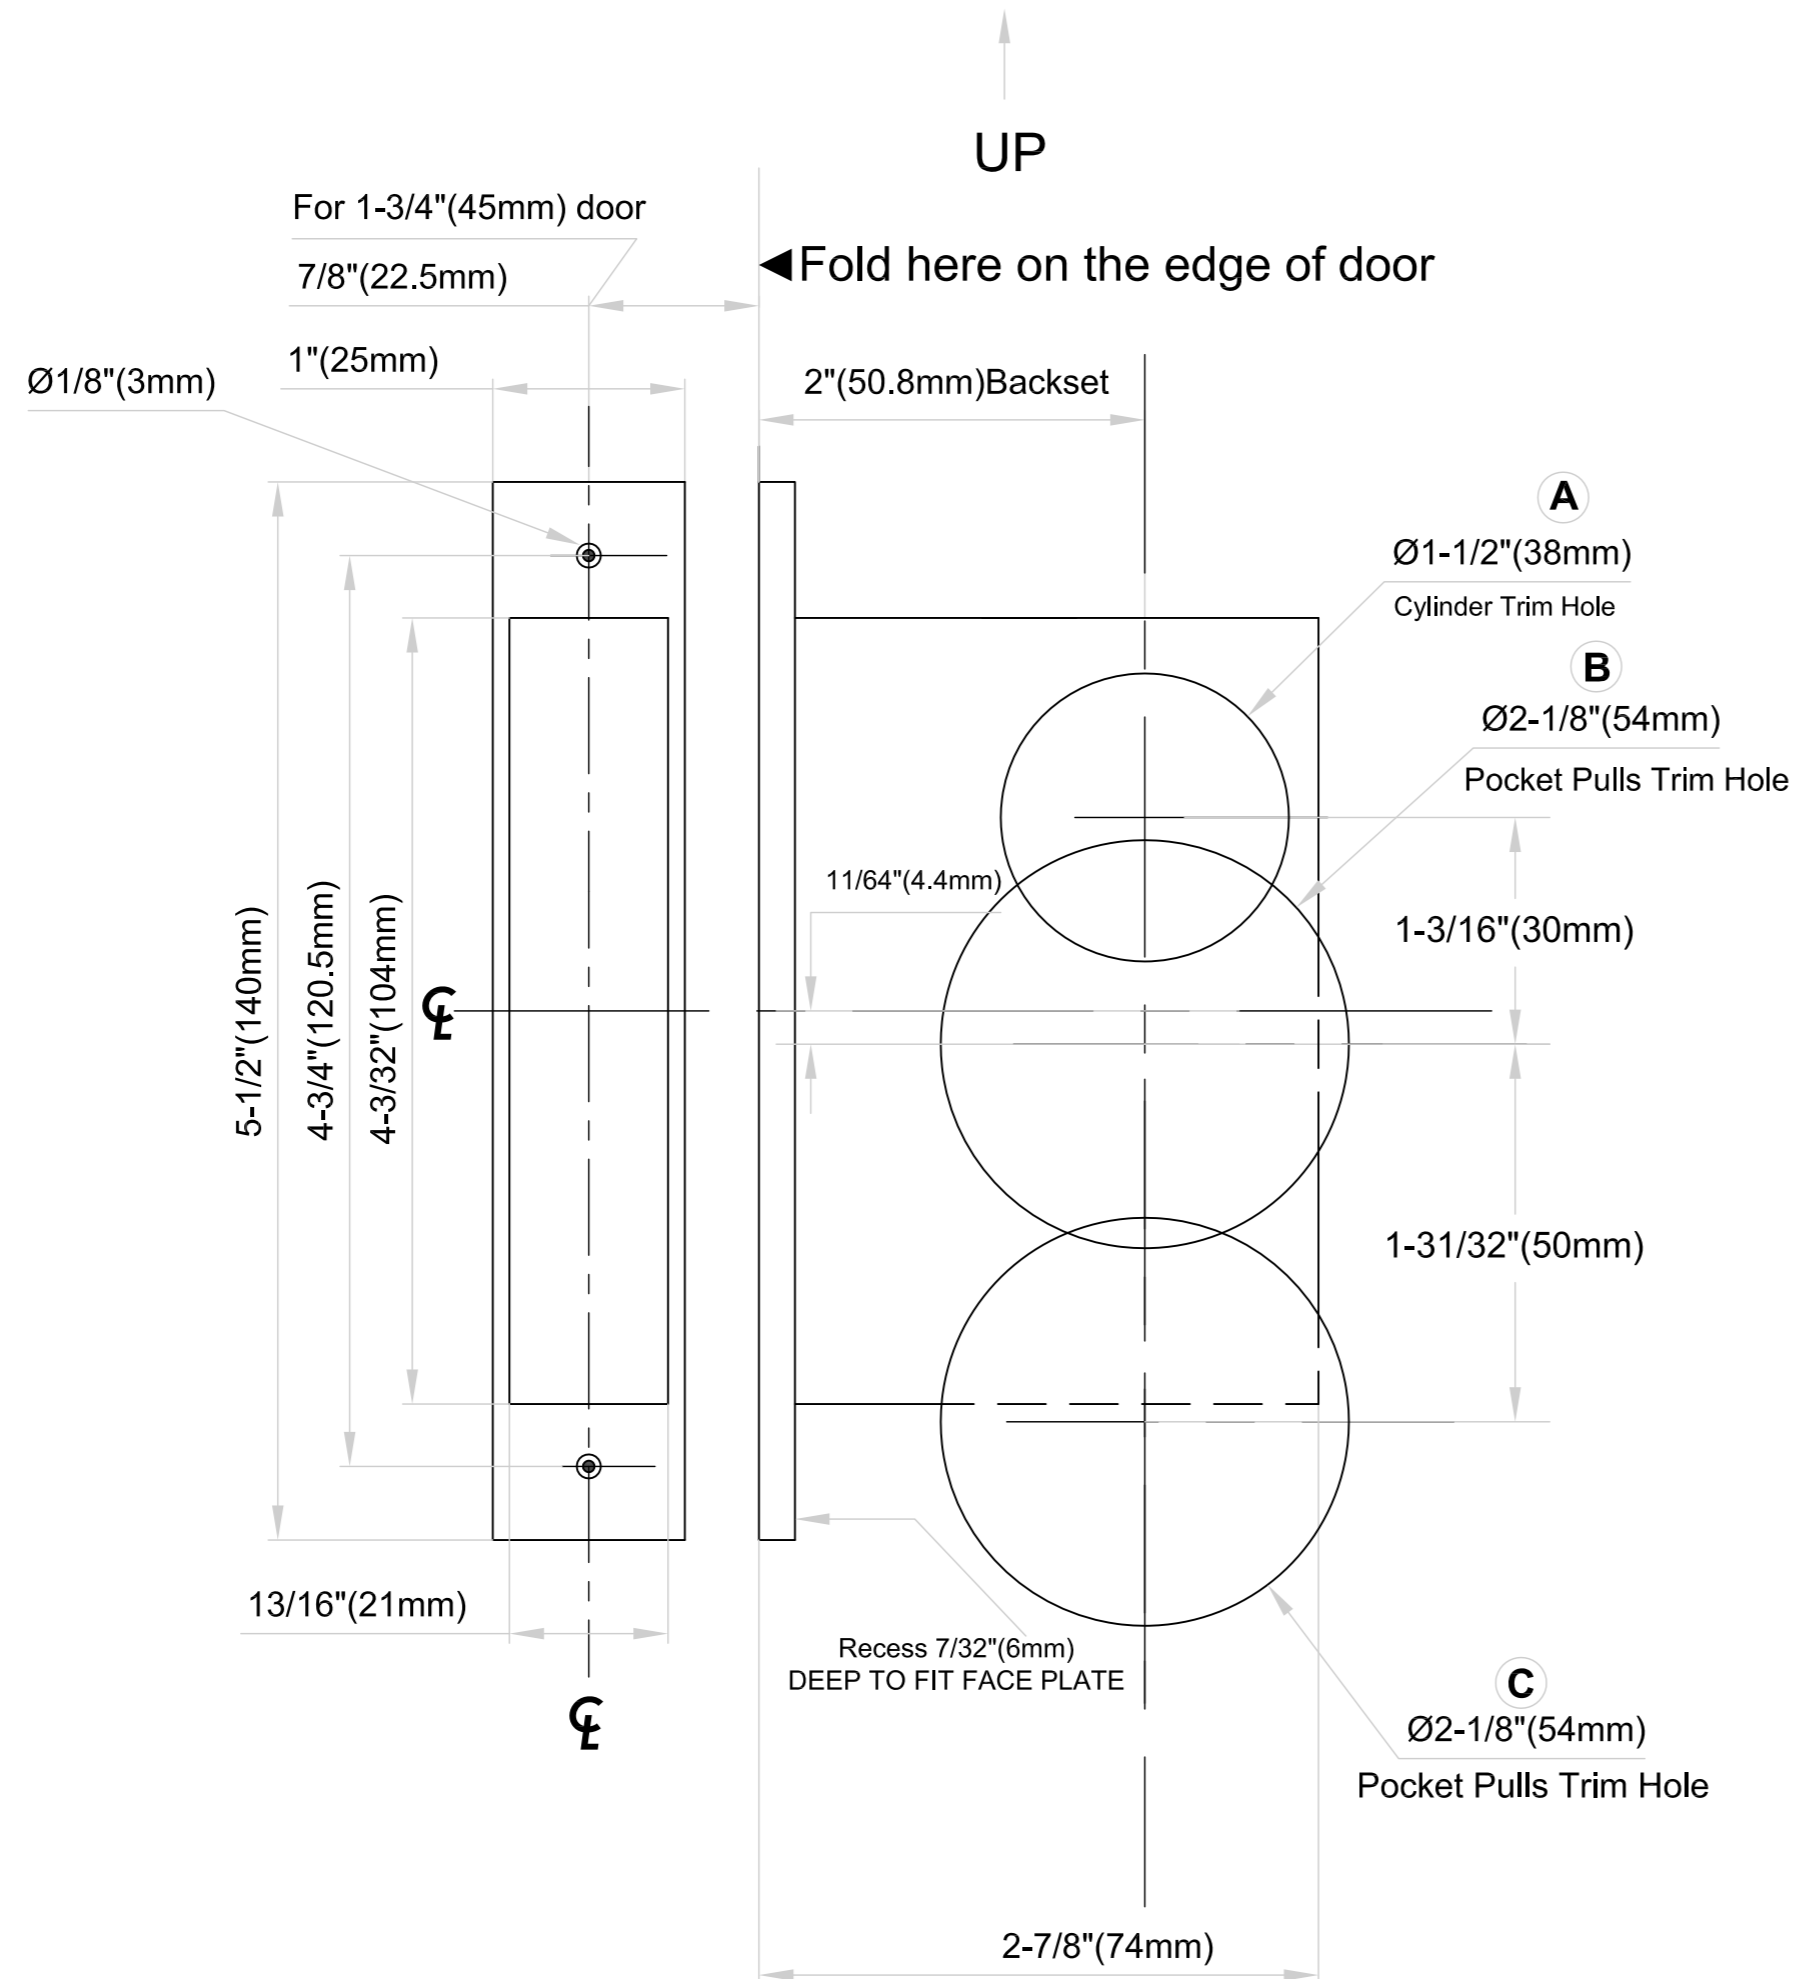

Match With Vertical Line Drawn On Door

FOR OPPOSITE HAND
PLEASE SEE REVERSE SIDE

Dimensions do not provide allowances for door silencers,
weather stripping, sound proofing or other additions to door or door frames.

Door preparation using template supplied.

Please read the Installation Instruction Carefully before drilling any holes on the door.
Choose the correct holes to drill for the corresponding functions.

Function	Item Ref.	Outside Holes			Inside Holes		
		A	B	C	A	B	C
PD5010	...XXX...		●			●	
PD5215	...XXX...		●			●	
PD5340	...XXX...		●			●	
PD5350	...XXX...	●					
PD5360	...XXX...		●			●	
DP	...XXX...		●			●	

**Note: FH22CF & 23CF only have function PD8010, PD8040, PD8060, DP
For FH22CF & 23CF DP function, the depth should be 11/32" (8.5mm)**


Template For PD5000 (2" Backset) Mortise Locks with FH22&23/FH22CF&23CF Flush Pulls for Pocket Doors

Case Size: 2-29/32" x 4-3/32" x 11/16" (74mm x 104mm x 17mm)

Backset: 2" (50.8mm)

Lock Front: 1" x 5-1/2" x 15/64" (25.4mm x 140mm x 6mm)

Cylinder to Thumb Turn: 1-3/16" (30mm)

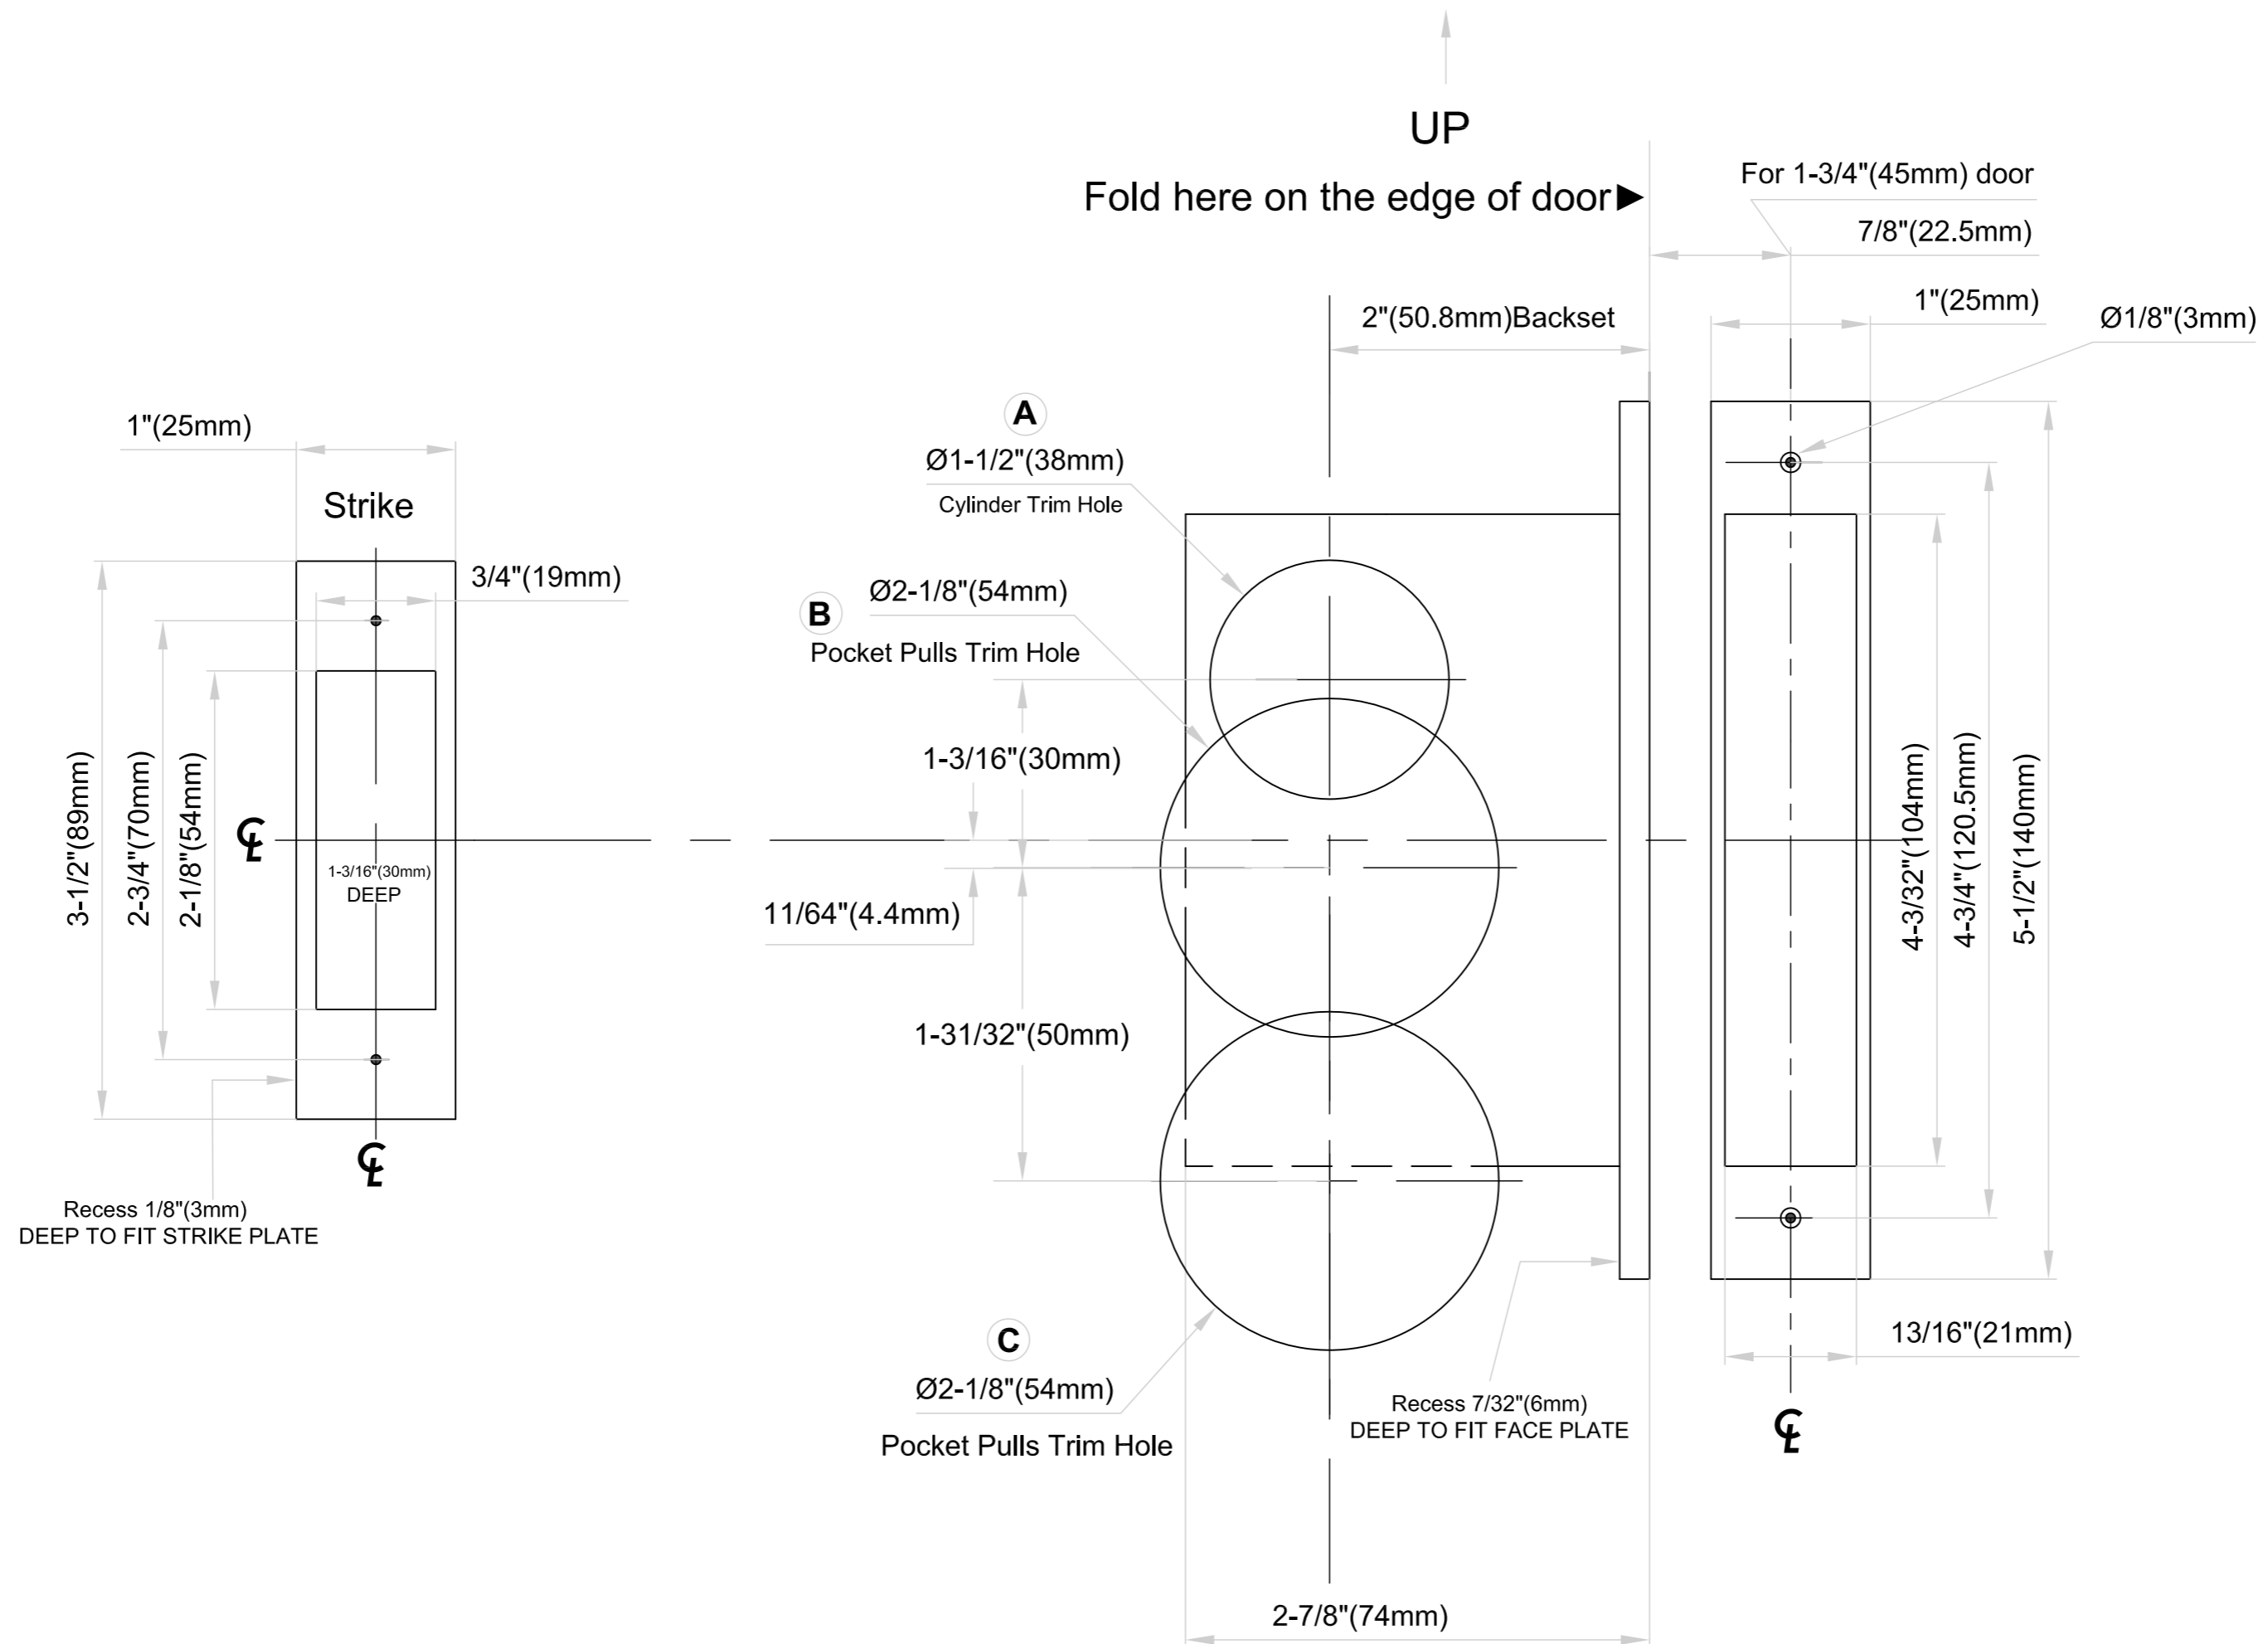

Match With Vertical Line Drawn On Door

FOR OPPOSITE HAND
PLEASE SEE REVERSE SIDE

Dimensions do not provide allowances for door silencers,
weather stripping, sound proofing or other additions to door or door frames.