

inox[®]
Engineered Beautifully™

Lock Front: 1" x 8" x 15/64"(25.4mm x 203mm x 6mm)

Cylinder to Thumb Turn: 1-3/16"(30mm)



◀ Fold here on the edge of door

For 1-3/4"(45mm) door

7/8"(22.5mm)

2-3/4"(70mm)Backset

Ø1/8"(Ø3mm)

1"(25.4mm)

Ø1-3/8"(Ø35mm)DIA
CYLINDER HOLE

Ø13/16"(21mm)DIA
THUMB TURN HOLE

1-3/16"(30mm)

5/8"(16mm),

5/8"(16mm)

Holes for #6 Machine screw
for hollow metal door only

1-1/8"(29mm)

Ø1"(Ø25mm)DIA
LEVER HOLE 

Ø7/16"(Ø11mm)DIA
BOLT-THRU HOLE

Recess 7/32"(6mm)
DEEP TO FIT FACE PLATE

3-21/32"(93mm)

Door preparation using template supplied:
Please read the Installation Instruction Carefully before drilling any holes on the door.
Choose the correct holes to drill for the corresponding functions.

Lever by Lever		Outside Holes				Inside Holes			
Function	Item Ref.	A	B	C	D	A	B	C	D
Entry	...PD9750...	●		●	●		●	●	●
Classroom	...PD9770...	●		●	●			●	●

Dimensions do not provide allowances for door silencers, weather stripping, sound proofing or other additions to door or door frames.

PM-TMPD97PT-38-234-J


Template For PD97PT (2-3/4" Backset) Mortise Locks with XGT/XGS Lever Trim for Emergency Egress lock

Case Size: 3-21/32" x 6-1/2" x 11/16" (93mm x 166mm x 17mm)

Backset: 2-3/4" (70mm)

Lock Front: 1" x 8" x 15/64" (25.4mm x 203mm x 6mm)

Cylinder to Thumb Turn: 1-3/16" (30mm)

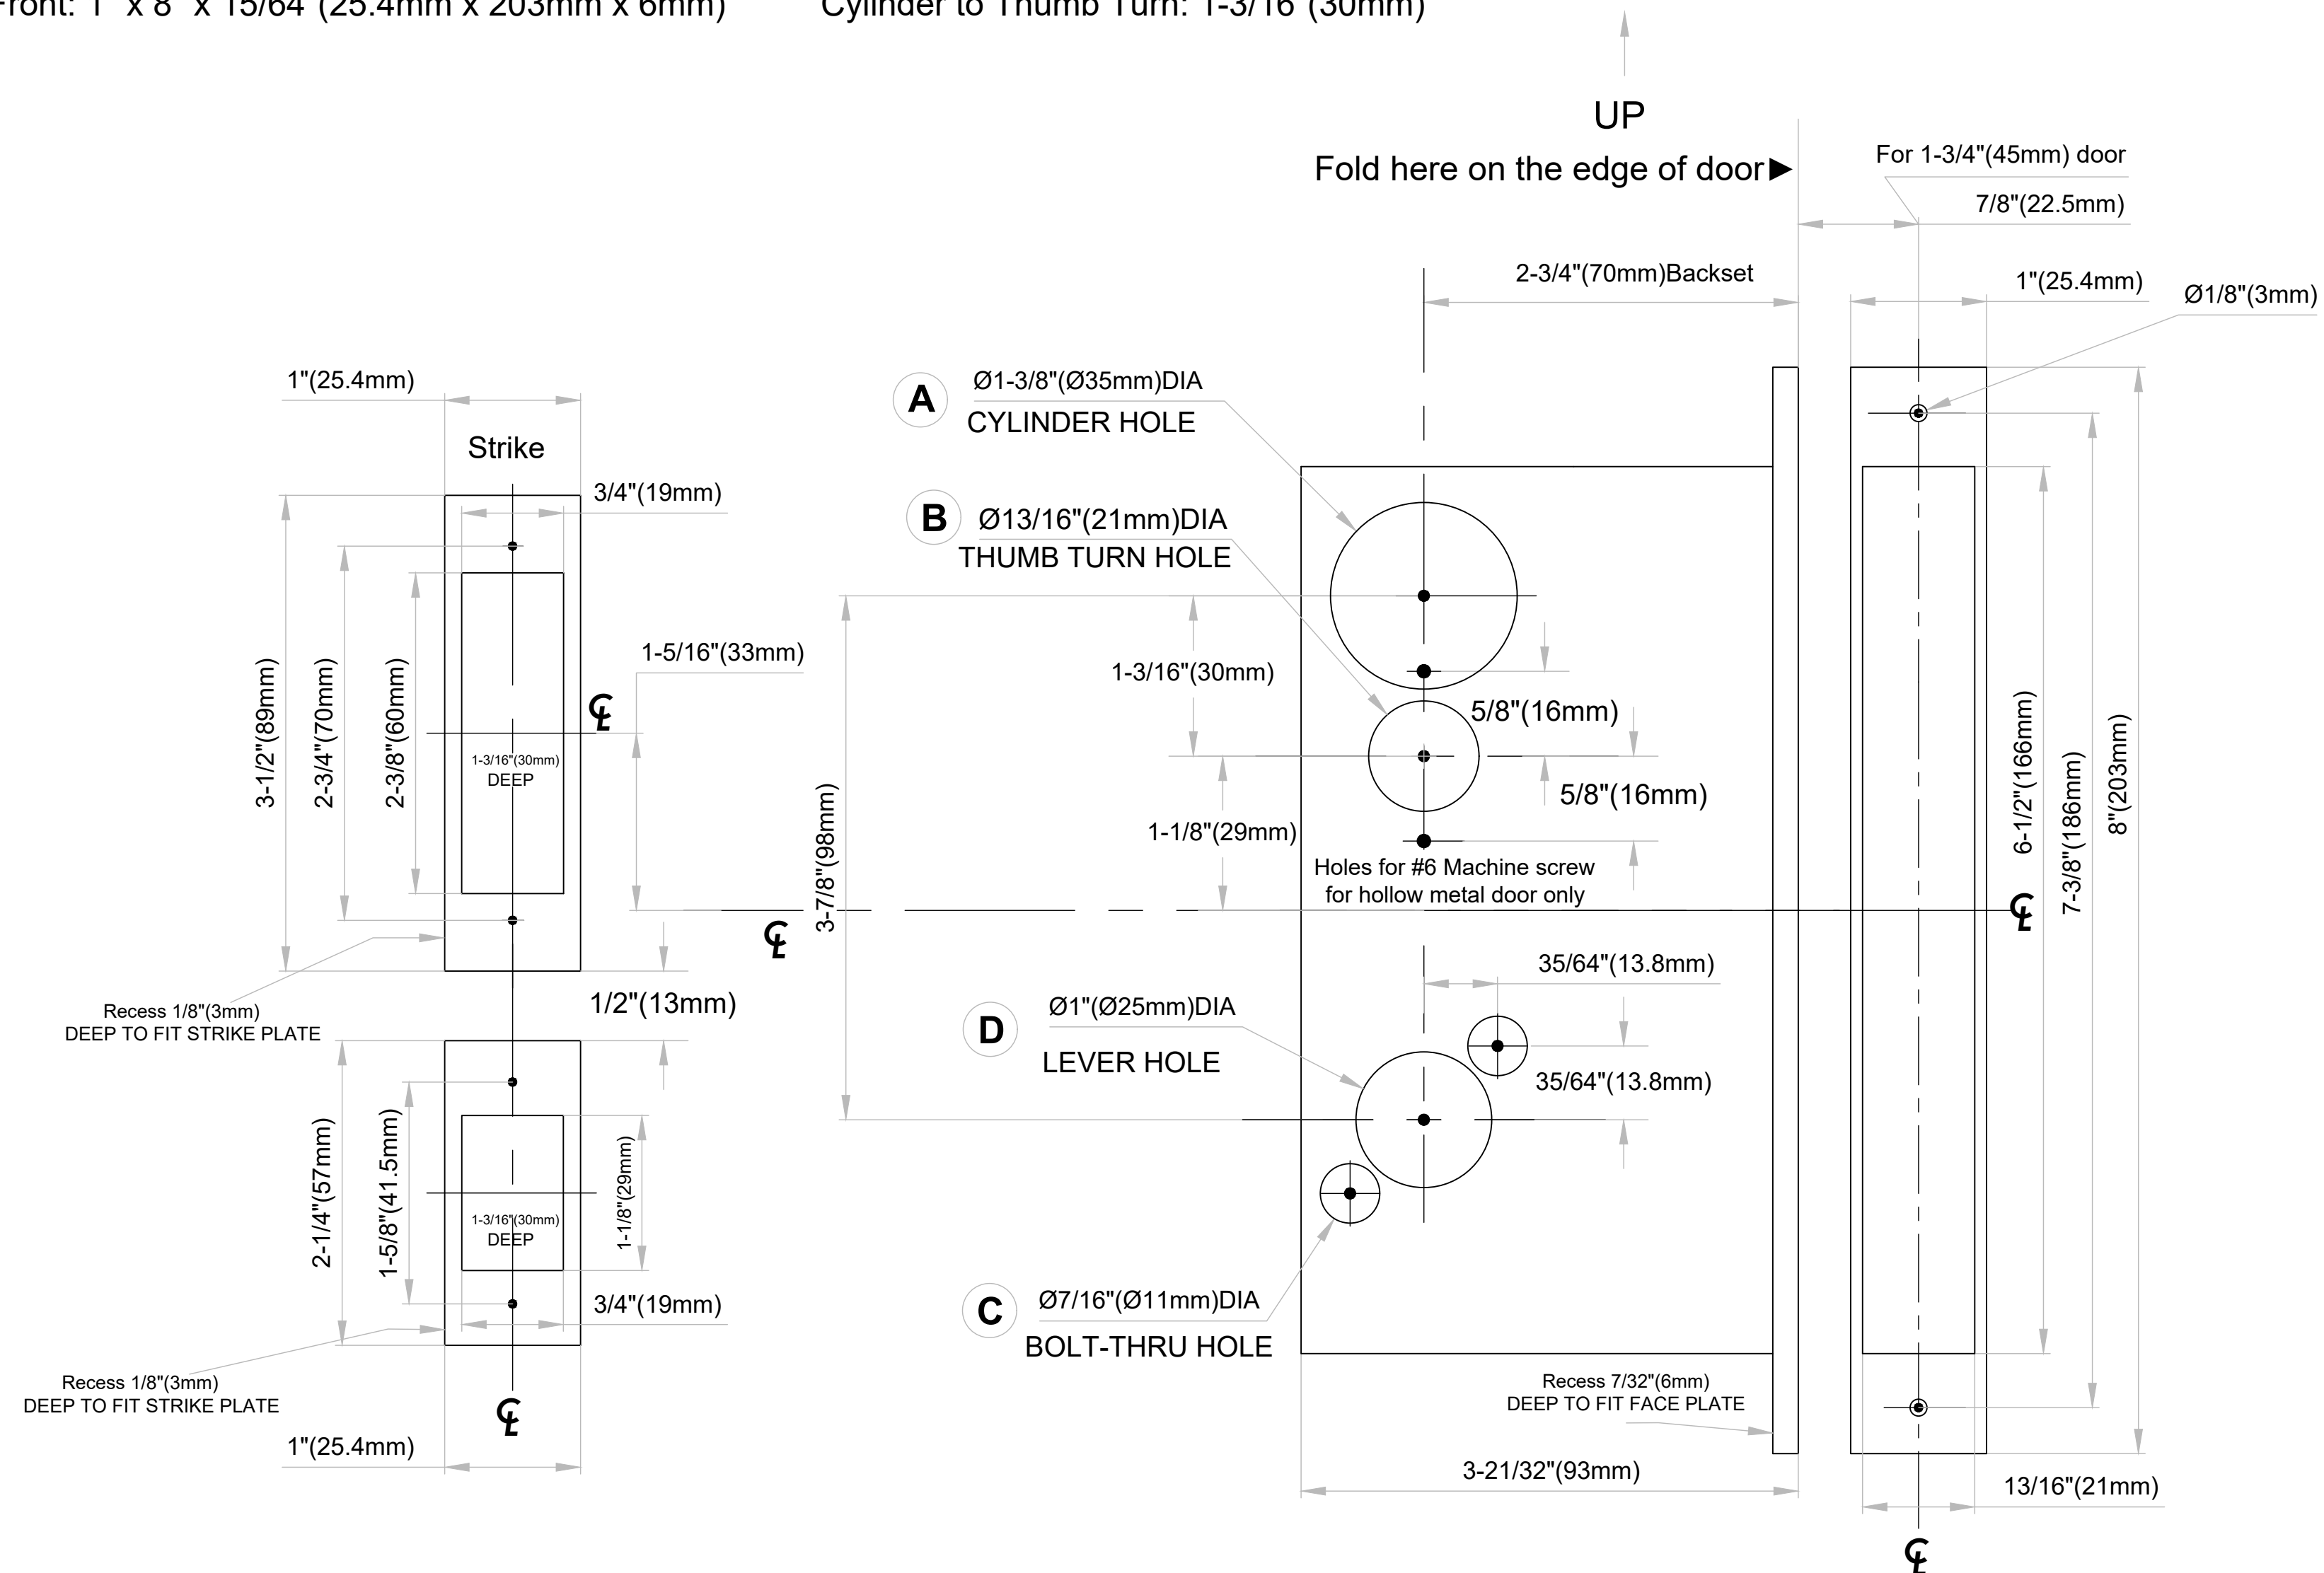

FOR OPPOSITE HAND
PLEASE SEE REVERSE SIDE

Dimensions do not provide allowances for door silencers,
weather stripping, sound proofing or other additions to door or door frames.

Match With Vertical Line Drawn On Door

PM-TMPD97PT-38-234-J