


# Template for XSF Outside Trim for MED Exit Devices

◀ Fold here on the edge of door

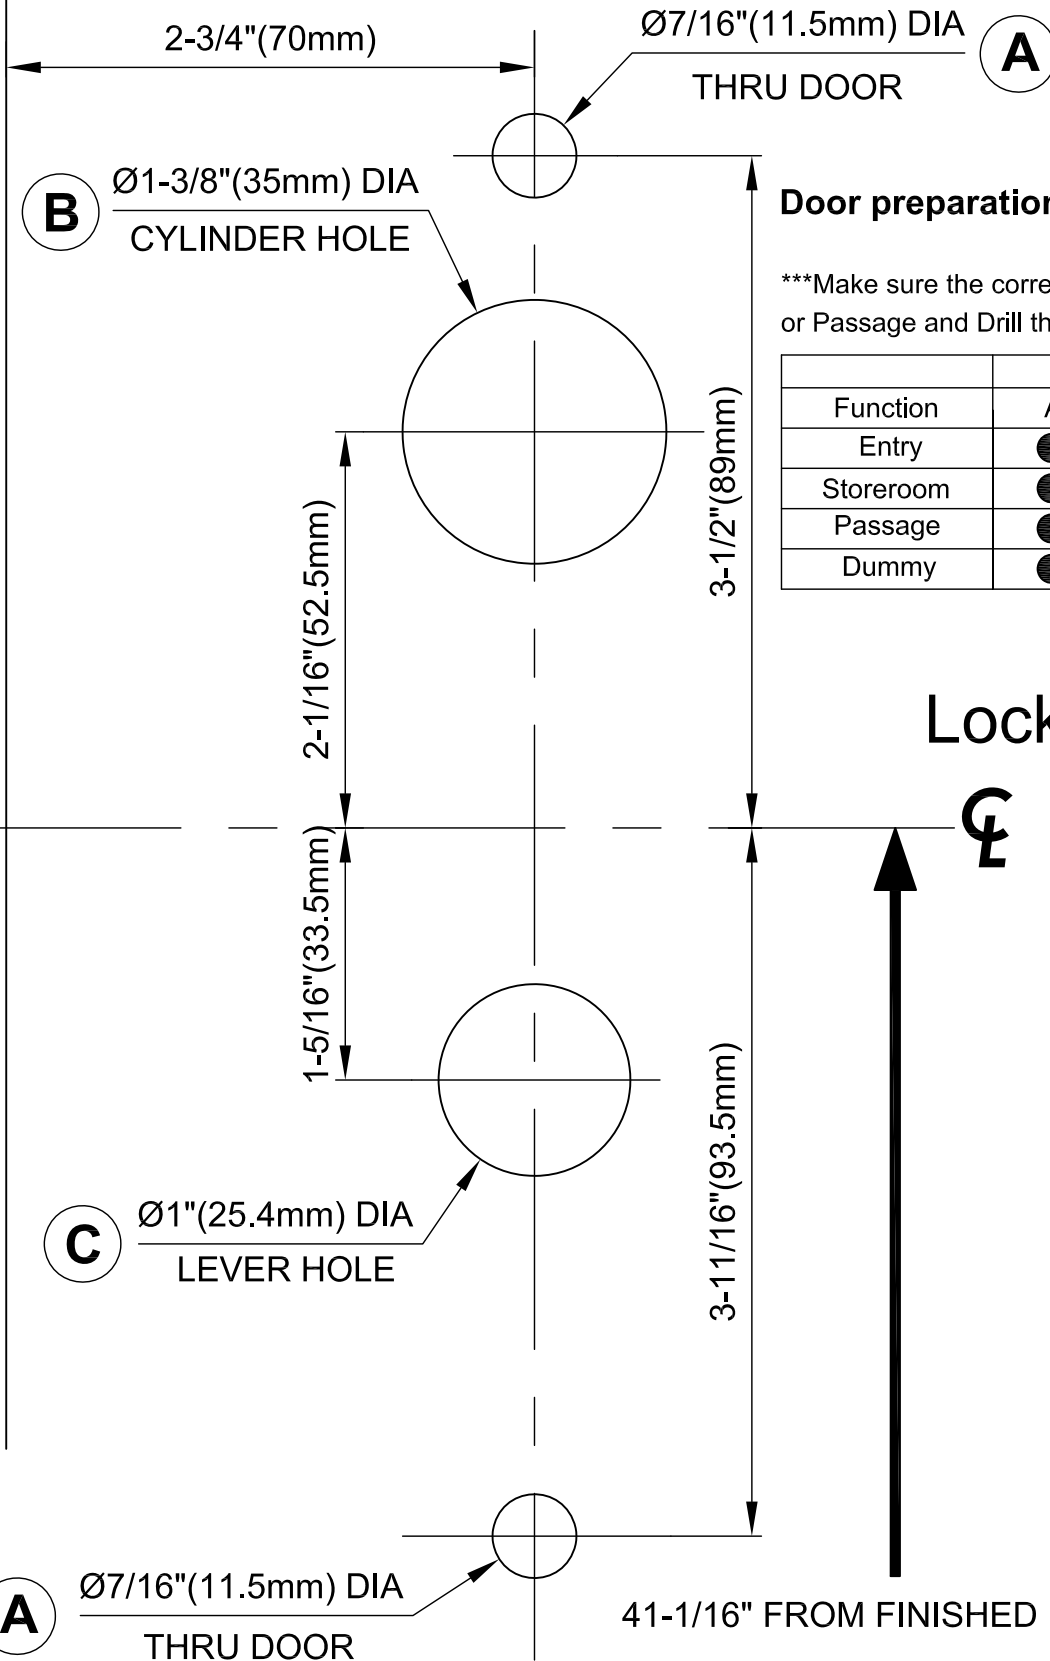

**Door preparation using template supplied.**

\*\*\*Make sure the correct lock function, Entry or Privacy or Passage and Drill the necessary holes only.

Function	Holes		
	A	B	C
Entry	●	●	●
Storeroom	●	●	●
Passage	●		●
Dummy	●		●

Dimensions do not provide allowances for door silencers, weather stripping, sound proofing or other additions to door or door frames.