



### Solar Development Kit with TI BLE Quick Start Guide

**Required Materials:** Solar Development Kit with TI BLE / Android Device / Small Flathead Screwdriver


**Step 1:** Connect the rechargeable Li-Polymer battery to the circuit board.

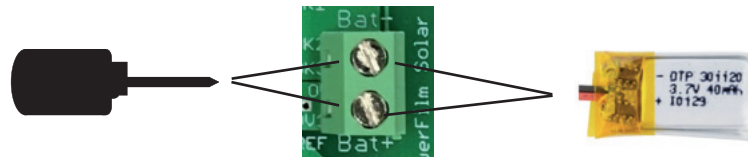

**Step 2:** Connect the LL200-2.4-75 Indoor Light Series solar panel or ONP1.2-37x54 Classic Application Series solar panel to the circuit board.

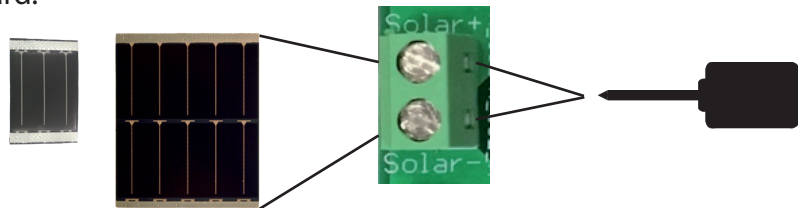

**Step 3:** Install the Simplelink SensorTag on your Android device from the Google Play Store.

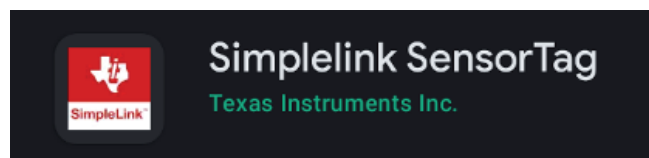

**Step 4:** Use the Data Monitor to scan and connect to the development kit.



**Step 5:** View live temperature and light level data from the development kit. Adjust and test connection and sensor settings as desired.

**See manual for more detailed instructions**