

genuine spare parts



X-HYBRID
MOBILE

4X150W LED
6X150W LED




PAGE 1: FLOODLIGHTS
PAGE 2: STEEL ROPES & PULLEYS
PAGE 3: MAST SECTIONS
PAGE 4: BASE STRUCTURE
PAGE 5: CANOPY
PAGE 6: TOW BAR, AXLE & WHEELS
PAGE 7: ENGINE
PAGE 8: CONTROL PANEL
PAGE 9: TRIME CONTACT LIST



TRIME


Lighting Tower Specialist

Review Date: 31/03/2022

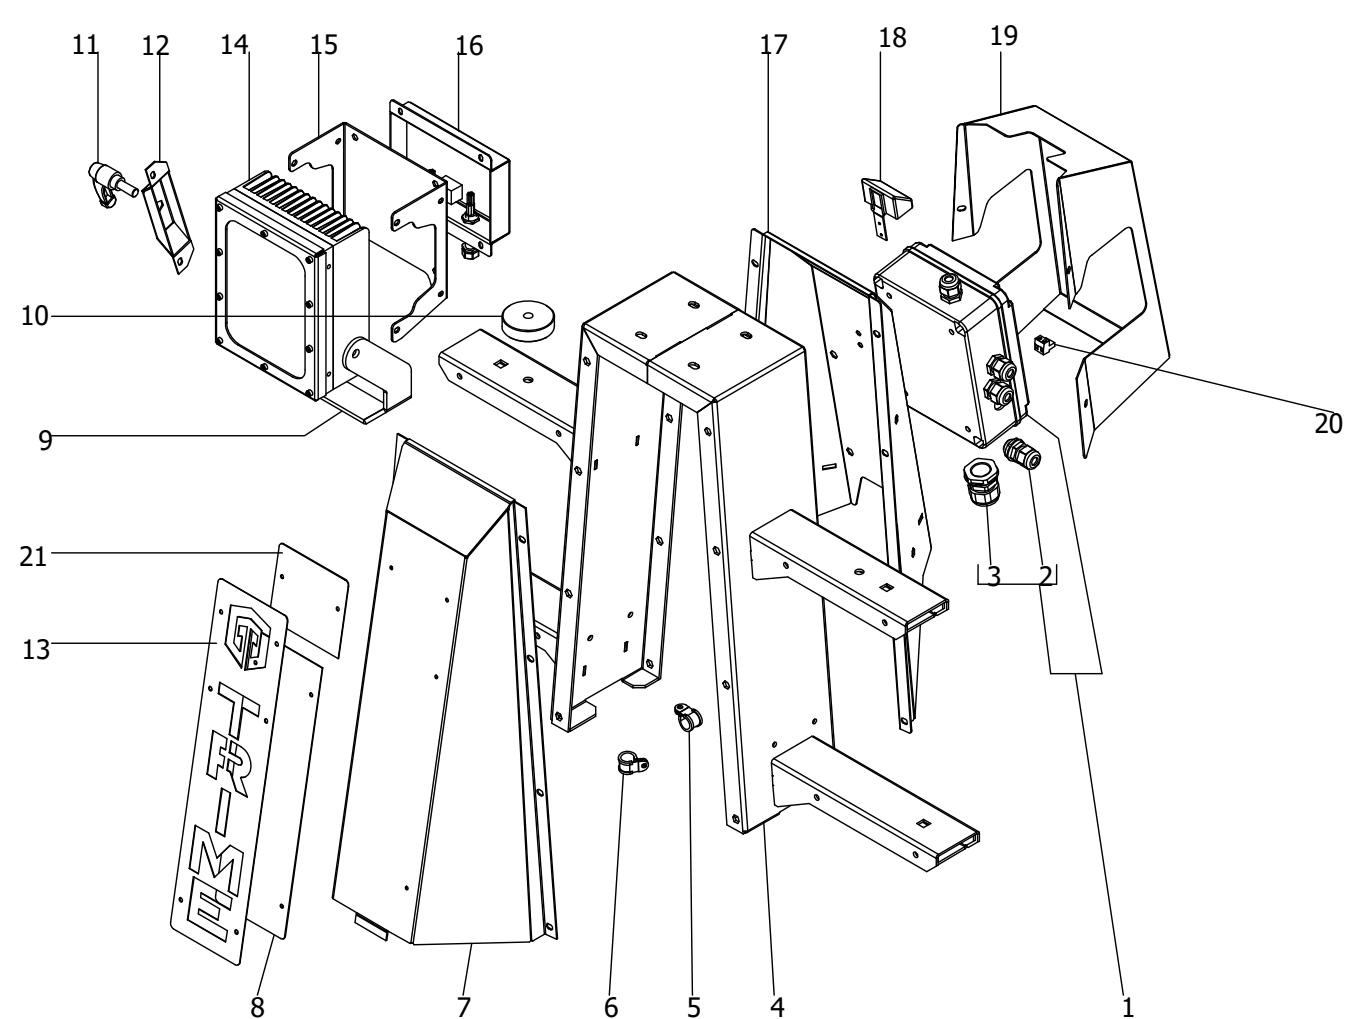


N.	CODE	DESCRIPTION
1	AS000_E006_001	JUNCTION BOX
2	AC000_E018_008	PG11 WIRE HOLDER
3	AC000_E018_002	PG21 WIRE HOLDER
4	LED06_C000_01	CENTRAL SUPPORT
5	AC000_E018_018	CABLE CLIP
6	AC000_M038_007	CLAMP WITH RUBBER
7	LED06_C000_012	FRONT COVER
8	PFM08_C000_071	WHITE PLATE
9	LED06_C000_09ZN	FLOODLIGHT SUPPORT
10	AS000_M023_001	SPACER
11	AC000_M000_007	HANDLE
12	LED06_C000_07	HANDLE SUPPORT
13	PFM08_C000_070	LOGO PLATE
14	AC000_E026_043	FLOODLIGHT
15	AC000_E026_034	POWER SUPPLY SUPPORT
16	AC000_E026_044	POWER SUPPLY
17	LED06_C000_04	REAR COVER
18	AC000_E016_005	LIGHT SENSOR
19	LED06_C000_08	JUNCTION BOX COVER
20	AC000_E006_002	ELECTRICAL CLAMP
21	PFM08_C000_072	RED PLATE

Part number	Part description	Additional information
AC000_E000_137	2Pole IP66 Socket	Connections for part number (16)
AC000_E000_136	2Pole IP66 Plug	

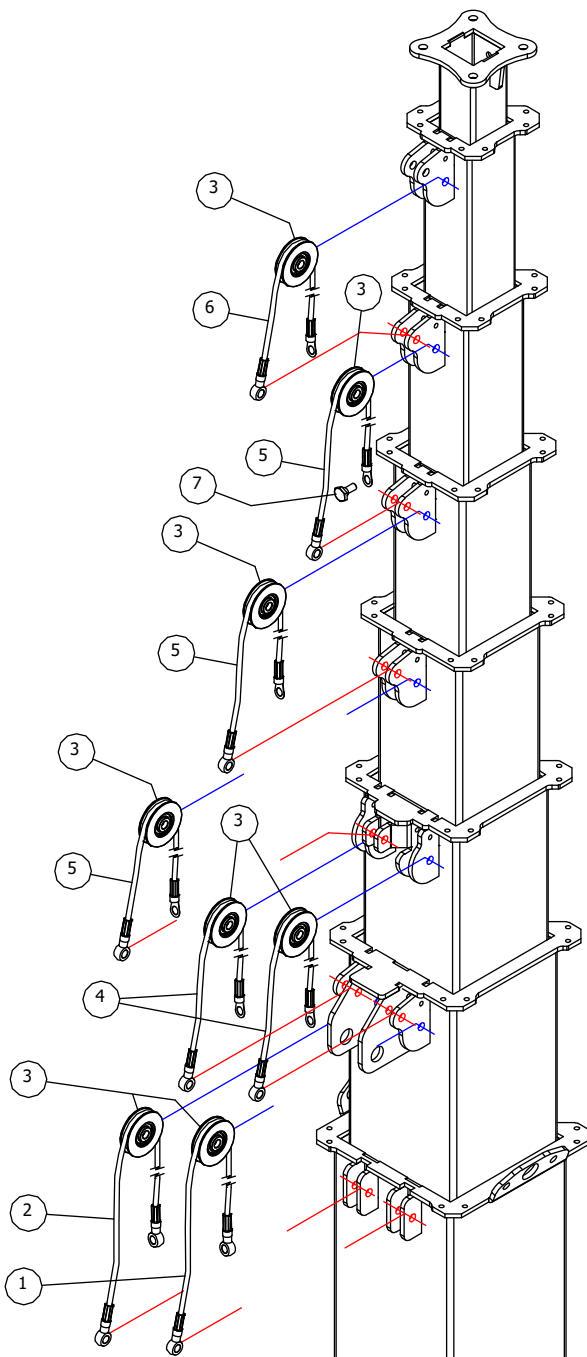


N.	CODE	DESCRIPTION
1	AC000_M021_012	STEEL ROPE L.1440 mm
2	AC000_M021_005	STEEL ROPE L.1460 mm
* 3	AC000_M021_002	PULLEY D.60
	AC000_M021_003	PULLEY D.62
	AC000_M021_008	PULLEY D.63
4	AC000_M021_007	STEEL ROPE L.1385 mm
5	AC000_M021_006	STEEL ROPE L.1415 mm
6	AC000_M021_004	STEEL ROPE L.1440 mm
7	AS000_M000_029	SCREW

★	PLEASE AT THE TIME OF THE ORDER MEASURE THE DIAMETER
---	---

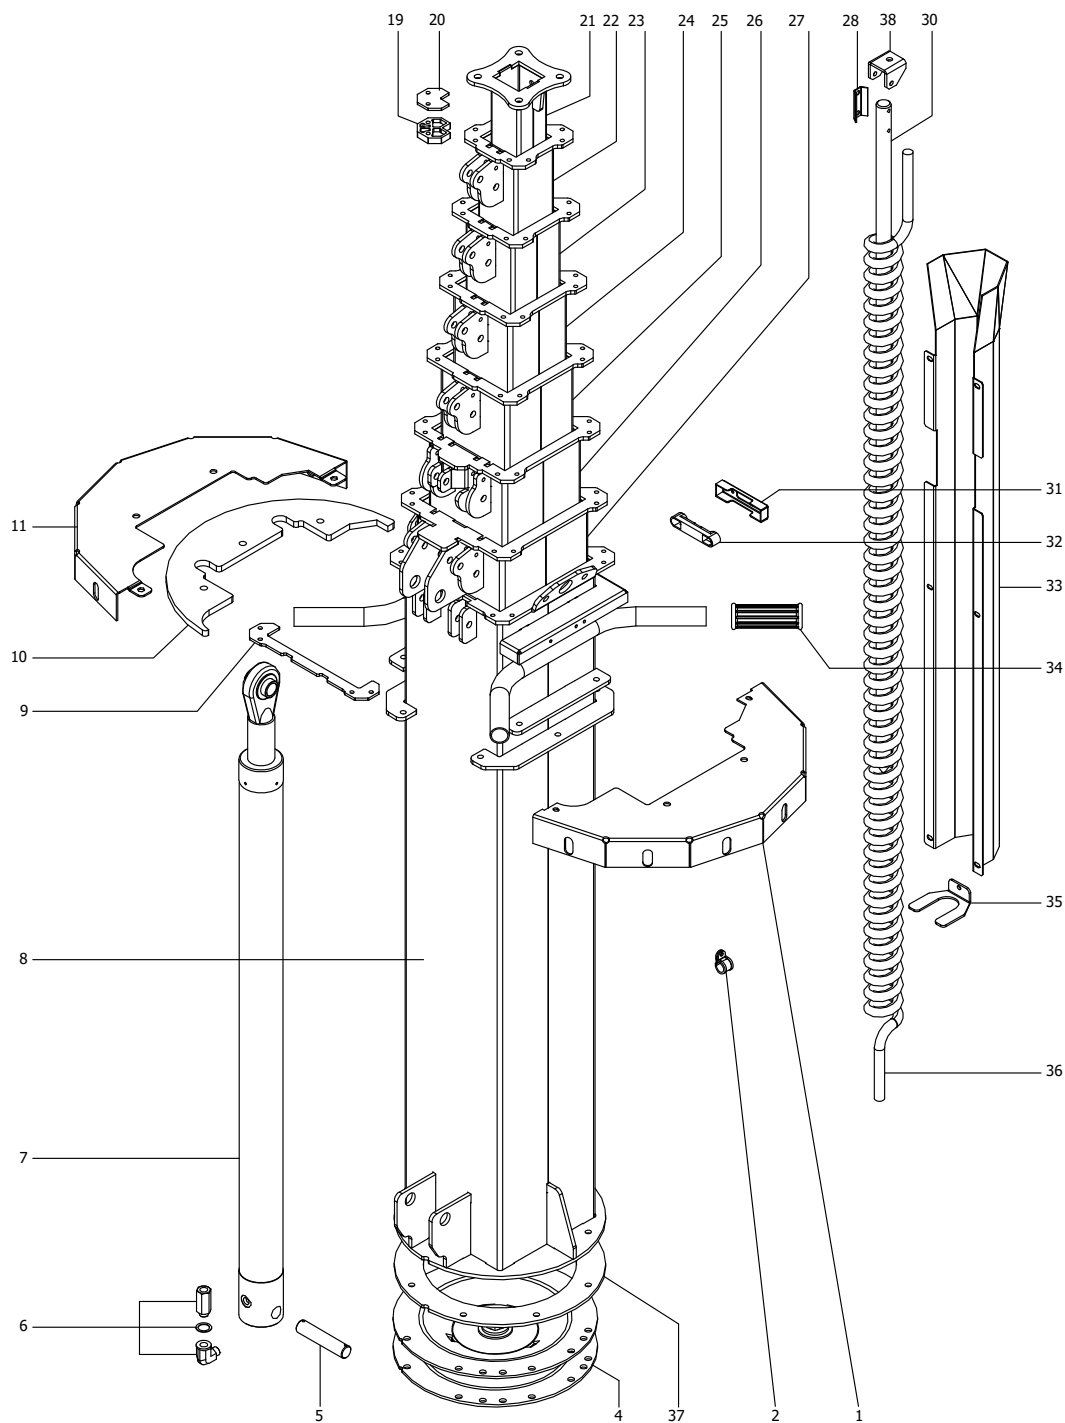


N.	CODE	DESCRIPTION
1	PFI08_C031_019ZN	MAST POSITIONING PLATE, LEFT
2	AC000_M038_007	CLAMP WITH RUBBER
4	PFM07_C031_070	MAST ROTATING SUPPORT
5	AS000_M023_026	HYDRAULIC PIPE PIN
6	AC000_G025_001	HYDRAULIC PIPE KIT
7	AS000_I025_001	HYDRAULIC PIPE
8	PFI08_C031_001ZN	1° SECTION MAST
9	PFI08_C031_024	SPACER
10	PFI08_C031_015	DRAG FLANGE
11	PFI08_C031_018ZN	MAST POSITIONING PLATE, RIGHT
19	AS000_M000_005	MAST ANGLE GUIDE
20	PFI08_C031_012ZN	MAST ANGLE GUIDE REINFORCEMENT
21	PFI08_C031_008ZN	8° SECTION MAST
22	PFI08_C031_007ZN	7° SECTION MAST
23	PFI08_C031_006ZN	6° SECTION MAST
24	PFI08_C031_005ZN	5° SECTION MAST
25	PFI08_C031_004ZN	4° SECTION MAST
26	PFI08_C031_003ZN	3° SECTION MAST
27	PFI08_C031_002ZN	2° SECTION MAST
28	PFM07_C000_019	CENTERING PIN CLAMP (OPTIONAL)
30	PFM07_C000_014	CENTERING PIN (OPTIONAL)
31	PFI08_C031_029	AIR BUBBLE LEVEL PROTECTION (OPTIONAL)
32	AC000_M016_002	AIR BUBBLE LEVEL
33	PFI08_C031_009ZN	COILED CABLE PROTECTION
34	AC000_P037_001	POMELLO
35	PFM08_C000_047	COILED CABLE LOCK
36	AC000_E006_109	COILED CABLE
37	XRENT_C031_087	MAST ROTATING SUPPORT FRAME
38	PFI08_C031_017	CENTERING PIN SUPPORT (OPTIONAL)

Part number	Part description	Additional information
AS-K4TAF1/P1	HYDRAULIC PRESSURE SWITCH	
X-ECOELECTROVALVE	COMPELTE HYDRAULIC ELECTROVALVE	INDIVIDUAL PARTS AVAILABLE

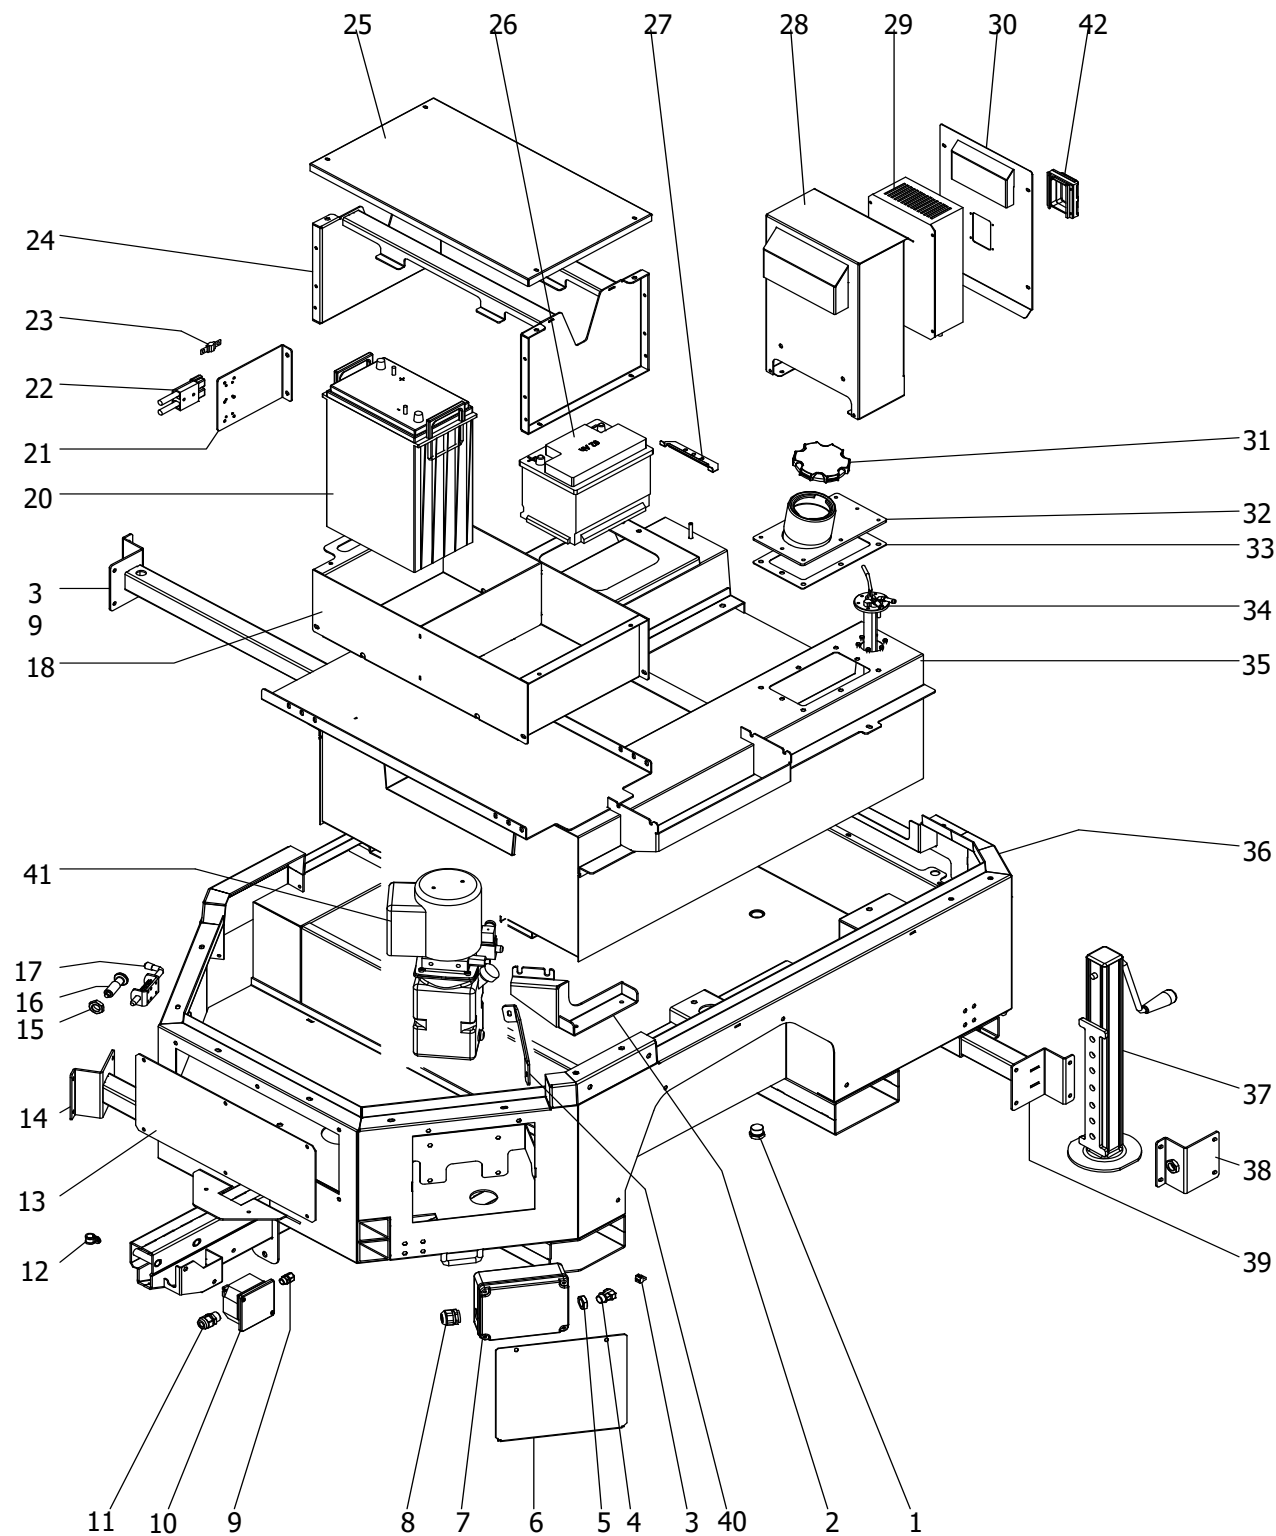

N.	CODE	DESCRIPTION
1	AC000_M000_081	DRAIN CAP
2	XHY_C000_131	HYDRAULIC UNIT SUPPORT
3	AC000_E006_002	CLAMP
4	AC000_E018_016	CONNECTOR PG16
5	AC000_E018_014	NUT PG16
6	XHY_C008_137	JUNCTION BOX COVER
7	AS000_E006_033	JUNCTION BOX
8	AC000_E018_002	CABLE GLAND PG21
9	AC000_E018_003	CABLE GLAND PG9
10	AC000_G006_001	JUNCTION BOX
11	AC000_E018_009	CABLE GLAND PG16
12	AC000_M038_007	CLAMP WITH RUBBER
13	XECOK2_C008_036	FRONTAL COVER
14	XHY_C000_101ZN	FRONTAL STABILIZER BEAM
15	AC000_M038_026	BOLT
16	AC000_M000_077	PIN LOCK WITH SPRING
17	AC000_M000_086	CLOSING LOCK PIN
18	XHY_C006_112	BATTERIES TANK
19		
20	AC000_E000_021	BATTERY 400AH
21	XHY_C006_114	BATTERIES CONNECTOR SUPPORT
22	AC000_E011_015	BATTERIES CONNECTOR
23	AC000_E012_056	40A FUSE
24	XHY_C006_113	BATTERIES LOCK
25	XHY_C006_115	BATTERIES COVER
26	AC000_E000_027	BATTERY 62AH
27	TF8K1_C000_0014	BATTERY LOCK
28	XHY_C004_116	BATTERY CHARGER BOX
29	AC000_E000_023A	BATTERY CHARGER
30	XHY_C004_117	BATTERY CHARGER COVER
31	AC000_M000_028	FUEL TANK CAP
32	XECOK2_C005_149	FUEL FILLER PLATE
33	XECOK_AS05_009	GASKET
34	AC000_E006_025	FUEL LEVEL SENSOR
35	XHY_C005_107	FUEL TANK
36	XHY_C004_100	MAIN BASE STRUCTURE
37	XECOK2_C003_200	STABILIZER
38	XE48_C000_014	STABILIZER PLATE
39	XHY_C000_102ZN	REAR STABILIZER BEAM
40	XHY_C000_257	REINFORCEMENT
41	AS000_I000_012	HYDRAULIC UNIT
42	AC000_E000_057	COVER


Part number	Part description	Additional information
AC000_M000_061	STABILISER CAP COVER	

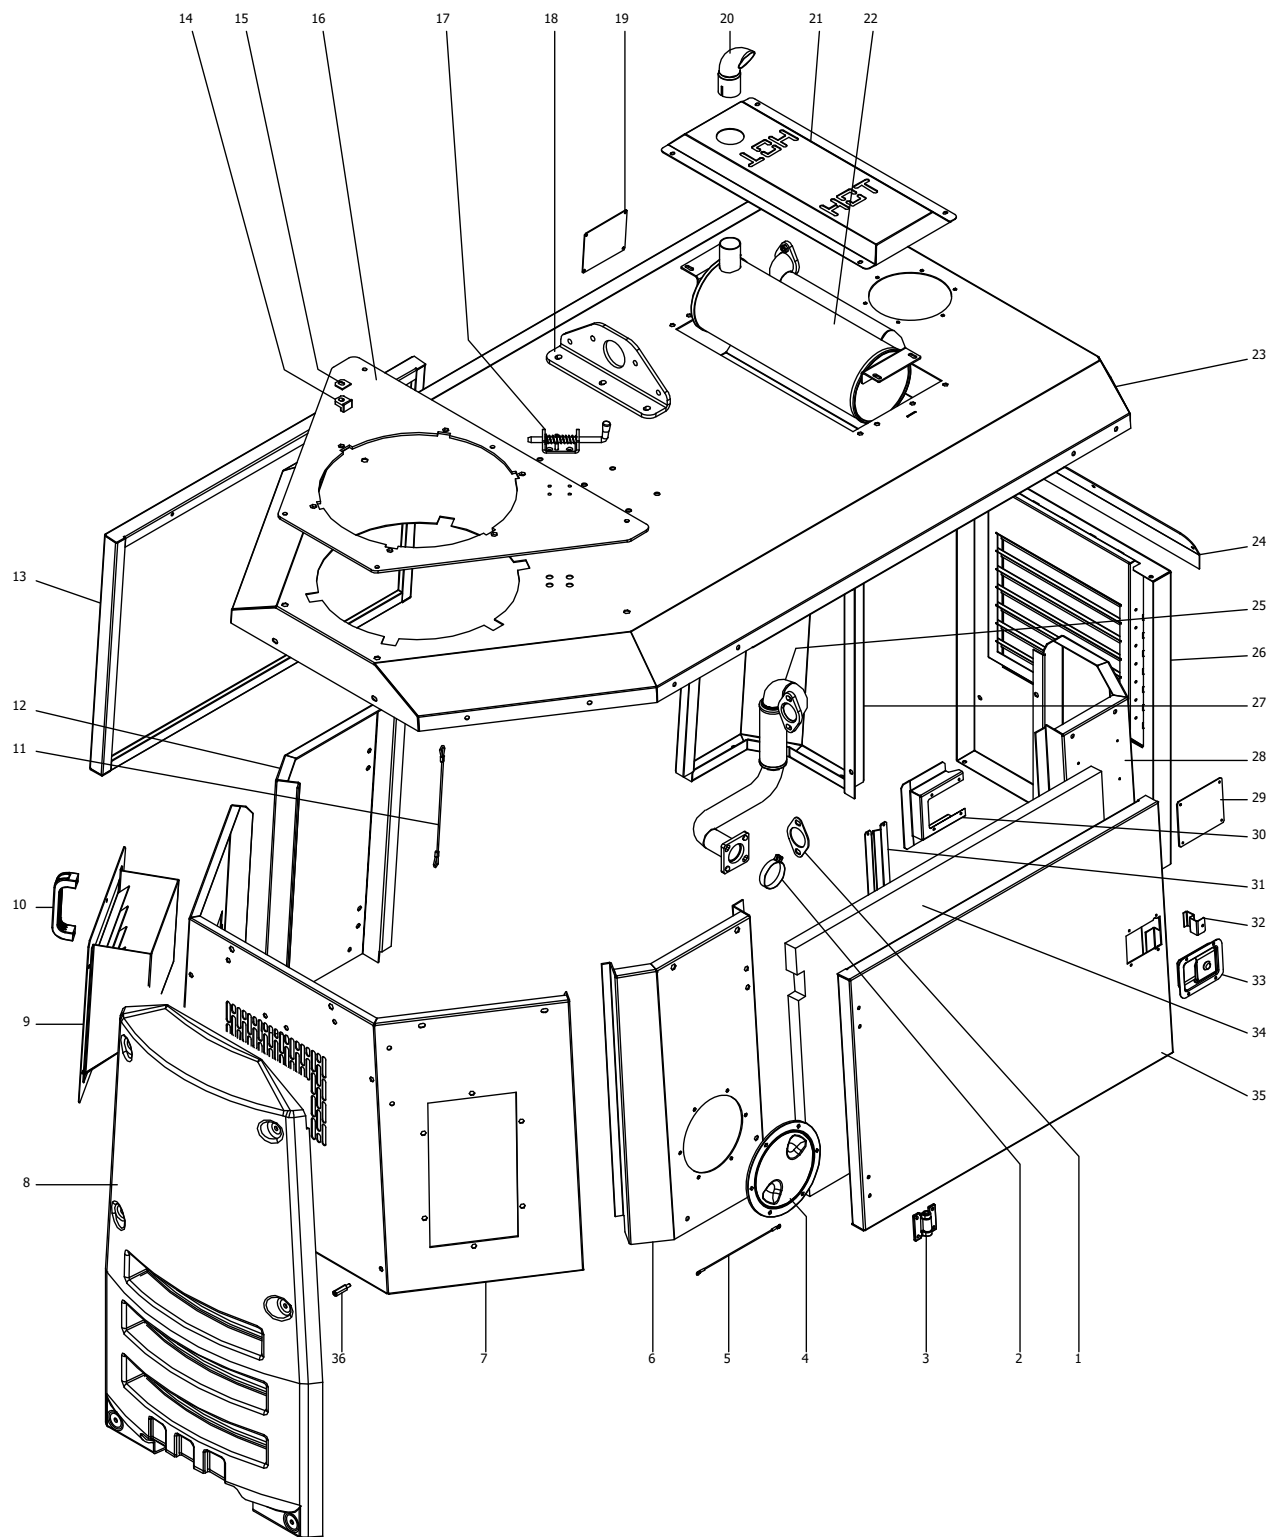


N.	CODE	DESCRIPTION
1	AC000_M001_007	MUFFLER EXTENSION GASKET
2	AC000_M038_009	CLAMP
3	AC000_M000_009	DOOR HINGE
4	AC000_M001_035	PLASTIC COVER
5	AS000_G031_083	PLASTIC COVER RETENTION ROPE
6	XHY_C007_126	FRONT NEAR SIDE PANEL
7	XHY_C007_123	FRONT PANEL
8	XHY_AS009_151	PLASTIC COVER
9	XRENT_C008_044	GRID
10	AC000_M000_005	HANDLE
11	XECOK2_M009_161	DOOR RETENTION ROPE
12	XHY_C007_127	FRONT OFFSIDE PANEL
13	XHY_C007_128	OFFSIDE DOOR
14	PFI08_C031_013	ROTATIONAL SLIDING PLATE
15	PFI08_C031_014ZN	ROTATIONAL SLIDING PLATE REINFORCEMENT
16	XHY_C000_130	MAST ROTATION GUIDE PLATE
17	AC000_M000_003	CLOSING LOCK PIN
18	XECOK2_C036_386ZN	LIFTING EYE
19	XHY_S010_169B	APPROBATION PLATE
20	AC000_M000_105	EXHAUST RAIN COVER
21	XECOK_C007_032	MUFFLER COVER
22	XECOK_C035_045	MUFFLER
23	XHY_C007_124	TOP CANOPY
24	XHY_C007_125	TOP CANOPY COVER PLATE
25	XECOK2_C035_046	MUFFLER EXTENSION
26	XHY_C008_122	REAR PANEL
27	XHY_C007_121	REAR OFFSIDE PANEL
28	XHY_C007_120	REAR NEAR SIDE PANEL
29	XHY_S010_142B	DATA PLATE
30	XECOK2_C008_118	DOOR LOCK FRAME (OPTIONAL)
31	XHY_C000_158	DOOR COVERING SUPPORT (OPTIONAL)
32	XRENT_C000_040	LOCK CONTRAST
33	AC000_M000_017	DOOR LOCK
34	XHY_AS009_157	DOOR COVERING (OPTIONAL)
35	XHY_C007_129	NEAR SIDE DOOR
36	AC000_M038_041	SPACER

Part number
AC000_M000_137
Part description
DOOR KEY
Additional information
CH503 DOOR KEY USED WITH ITEM




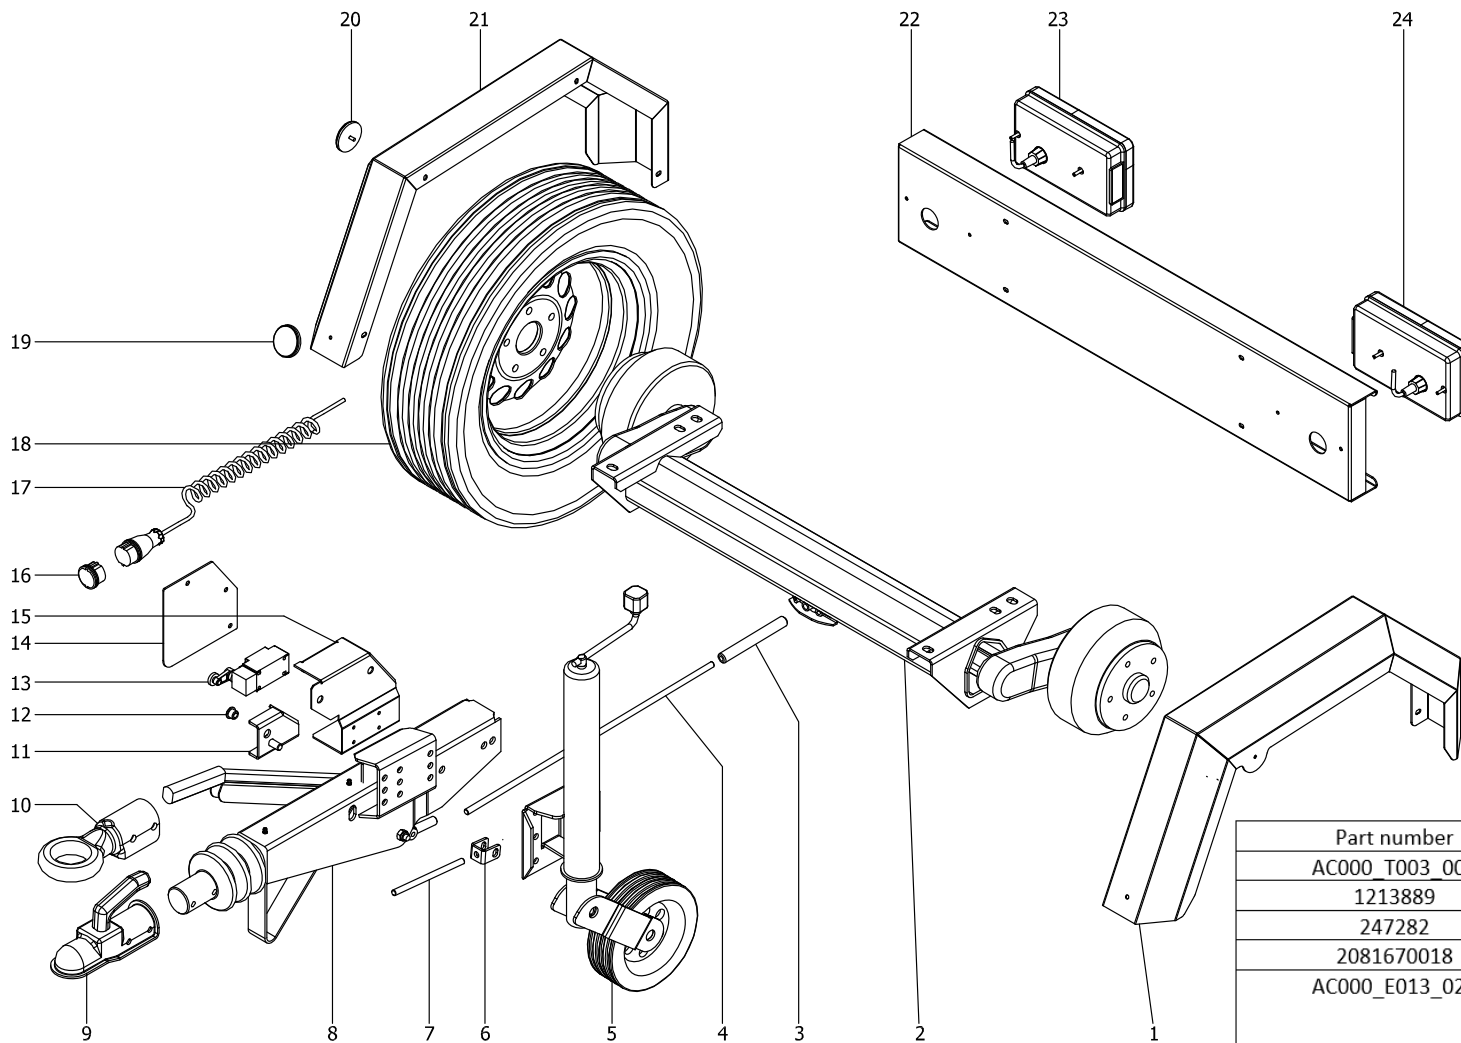

N.	CODE	DESCRIPTION
1	XHY_C004_108	NEAR SIDE MUDGUARD
2	AC000_T003_015	AXLE
3	AS000_M000_073	SLIDE PIN
4	AS000_M020_004ZN	REAR TIE ROD
5	AC000_T003_003	JOCKEY WHEEL
6	XECOK2_C005_186ZN	TIE RODS JUNCTION
7	XECOK2_C005_059_03ZN	FRONT TIE ROD
8	AC000_T003_004	RUDDER
9	AC000_T003_007	HOOKE BALL
10	AC000_T003_016	HOOKE D.50
11	XECOK2_C000_098	LIMIT SWITCHES PLATE
12	XECOK2_C001_101ZN	ADAPTATION BUSHING
13	SI000_G006_009	LIMIT SWITCHES
14	XECOK2_C000_100	COVER PLATE
15	XECOK2_C000_099	LIMIT SWITCHES SUPPORT
16	AC000_E000_062	ADAPTER
17	AC000_E013_001	CABLE WITH CONNECTOR
18	AC000_T003_001	WHEEL
19	AC000_T013_001	WHITE REFLECTOR
20	AC000_T013_002	ORANGE REFLECTOR
21	XHY_C004_109	OFFSIDE MUDGUARD
22	XHY_C000_105	LIGHTS HOLDER BAR
23	AC000_E013_007	OFFSIDE SIDE LIGHT
24	AC000_E013_008	NEAR SIDE SIDE LIGHT

Part number	Part description	Additional information
AC000_T003_001	Wheel	175R 13
1213889	Brake shoe kit	Includes retaining springs
247282	brake cable	
2081670018	Wheel bolts	
AC000_E013_027	Led nearside light cluster (IN PLACE OF ITEM 24)	
AC000_E013_026	Led offside light cluster (IN PLACE OF ITEM 23)	
AC000_E050_253	LED LIGHT CLUSTER CABLE	CABLE FOR 027 & 026



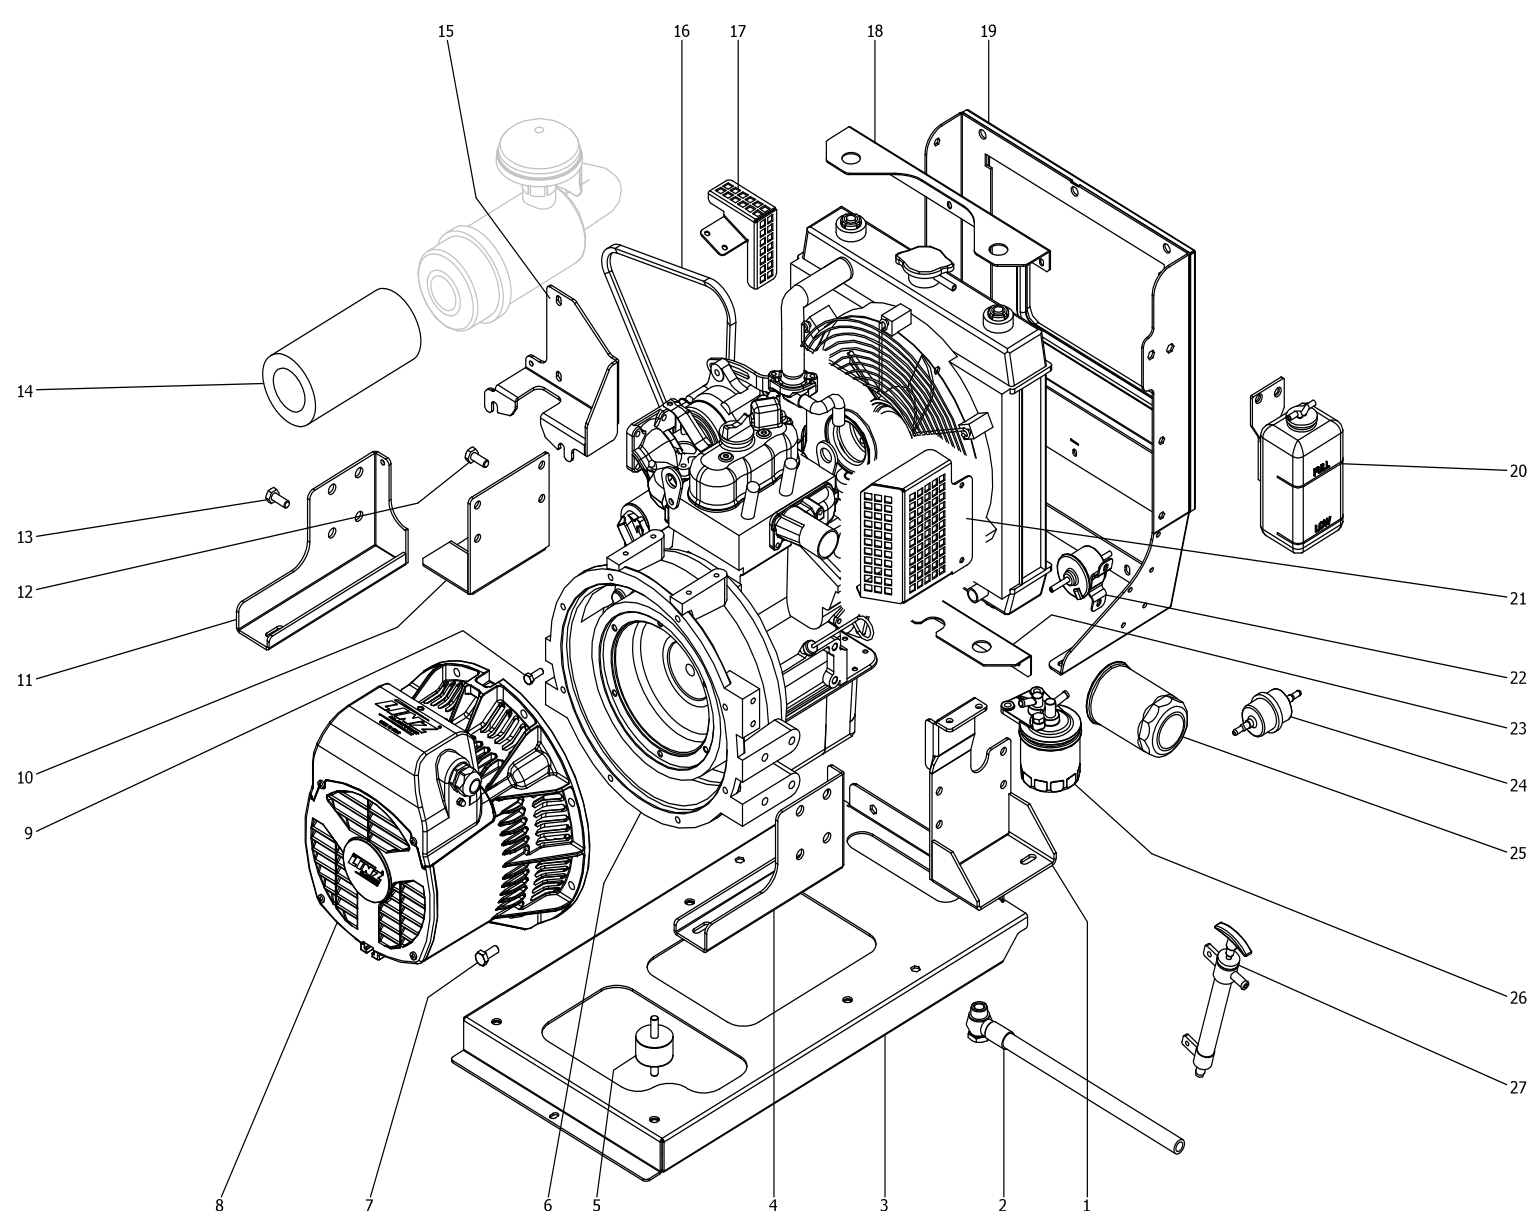


N.	CODE	DESCRIPTION
1	XECOK2_C001_006	ENGINE REAR NEARSIDE SUPPORT
2	AC000_G001_001	OIL DRAIN PIPE
3	XECOK2_C001_126	ENGINE / ALTERNATOR SUPPORT
4	XECOK2_C001_008	ENGINE FRONT NEARSIDE SUPPORT
5	AC000_M024_054	SCHOCK ABSORBER
6	AC000_M033_024	ENGINE Z482_STAGE V
7	AC000_M038_014	ALTERNATOR FIXING SCREW
8	AC000_E034_007	ALTERNATOR
9	AC000_M038_013	ENGINE FIXING SCREW
10	XECOK2_C001_005	ENGINE REAR OFFSIDE SUPPORT
11	XECOK2_C001_007	ENGINE FRONT OFFSIDE SUPPORT
12	AC000_M038_015	ENGINE REAR SUPPORTS SCREW
13	AC000_M038_047	ENGINE FRONT SUPPORTS SCREW
14		AIR FILTER
15	XECOK2_C001_458	AIR FILTER SUPPORT
16	K_1980572530	ENGINE BELT
17	B_BO_C001_120	BELT PROTECTION
18	XE48_C001_005	RADIATOR TOP SUPPORT
19	XECOK2_C001_224	RADIATOR FRAME
20	K_1553172402	RADIATOR TANK
21	B_BO_C001_121	FAN PROTECTION
22	K_R140151352	ELECTRIC PUMP
23	XECOK2_C001_236	RADIATOR INFERIOR SUPPORT
24		FUEL PRE_FILTER
25		OIL FILTER
26		FUEL FILTER
27	AS000_M000_060	OIL DRAIN MANUAL PUMP

Part number	Part description	Additional information
N/A	KUBOTA Z482 FILTER KIT	
X-ECOSERVKITZ482E	KUBOTA Z482E FILTER KIT	METAL AIR FILTER HOUSING
X-ECOSERVKITZ482S5	KUBOTA Z482E STAGE 5 FILTER KIT	PLASTIC AIR FILTER HOUSING
N/A	SERV KIT FOR X-ECO YANMAR 2TNV70	



FILTER KITS INCLUDES

- PRIMARY AIR FILTER
- OIL FILTER
- FUEL FILTER
- IN LINE FUEL FILTER

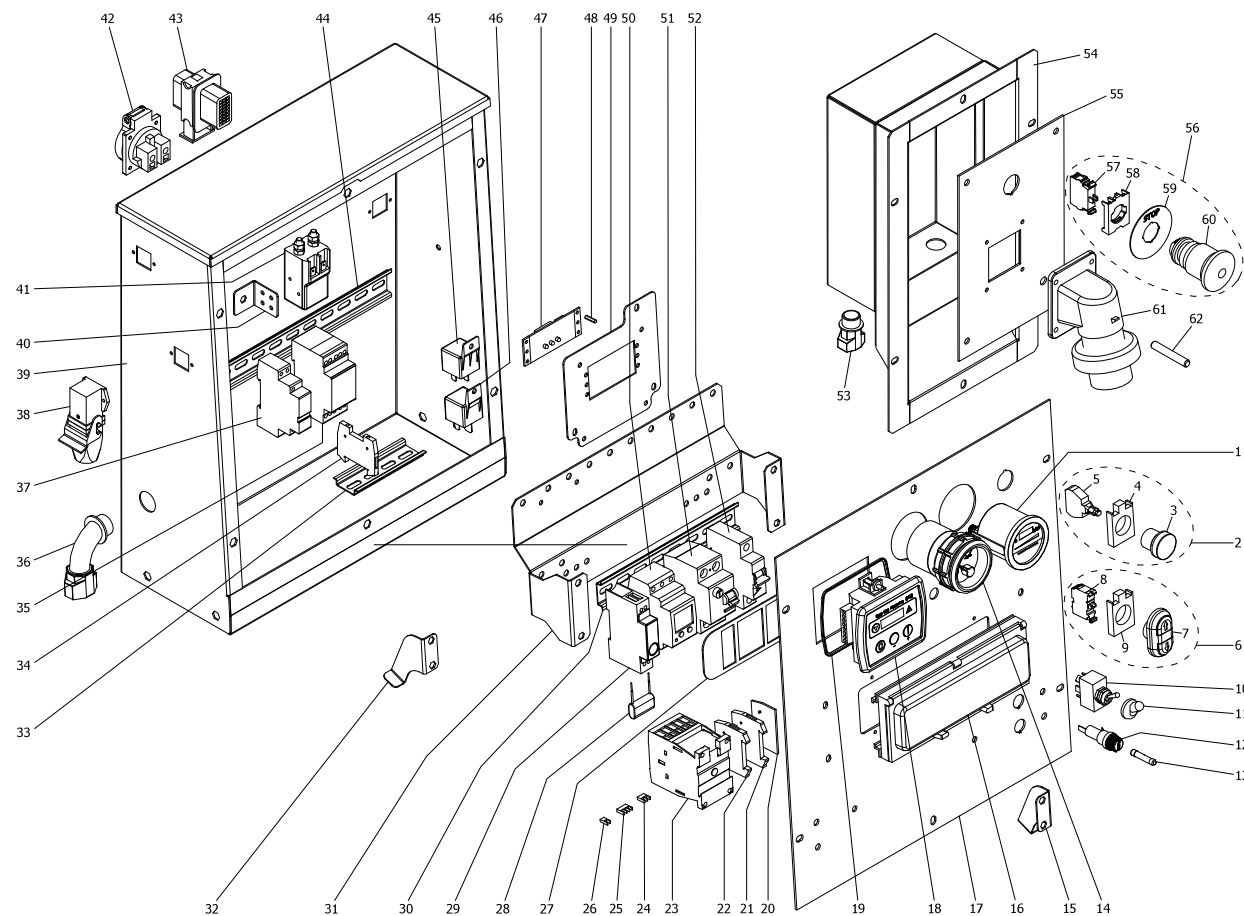

N.	CODE	DESCRIPTION
1	AC000_E006_076	AGM BATTERIES CHARGE INDICATOR
2	SI000_G006_005	ASSEMBLED GREEN LAMP
3	AC000_E006_045	GREEN LAMP
4	AC000_E006_043	GREEN LAMP SUPPORT
5	AC000_E006_046	GREEN LAMP CONTACT
6	SI000_G006_006	ASSEMBLED MAST BUTTONS
7	AC000_E006_044	MAST BUTTONS
8	AC000_E006_043	MAST BUTTONS SUPPORT
9	AC000_E006_042	MAST BUTTONS CONTACT
10	AC000_E000_016	2 POLES SWITCH
11	AC000_E000_019	SWITCH COVER
12	AC000_E012_030	FUSE HOLDER
13	AC000_E012_014	FUSE
14	AC000_E015_005	FUEL LEVEL GAUGE
15	XECOK2_C019_232	RIGHT LOCK PLATE
16	AC000_E000_020	CIRCUIT BREAKERS COVER
17	XHY_S010_168B	INSTRUMENTS SUPPORT
18	AC000_E014_001	CONTROL UNIT
19	AC000_E006_001	CONTROL UNIT GASKET
20	AC000_E006_024	CLAMP TERMINAL
21	AC000_E006_022	CLAMP
22	AC000_E006_021	CLAMP
23	AC000_E006_054	CONTACTOR SWITCH
24	AC000_E006_062	3 PIN BRIDGE
25	AC000_E006_063	4 PIN BRIDGE
26	AC000_E006_023	2 PIN BRIDGE
27	XHY_C006_163	CIRCUIT BREAKERS FRAME
28	AC000_E000_070	CAPACITOR
29	AC000_E016_005	LIGHT SENSOR RELAY
30	AC000_M038_037	BAR L.200
31	XHY_C006_162	CIRCUIT BREAKERS SUPPORT
32	XECOK2_C019_233	LEFT LOCK PLATE
33	AC000_M038_049	BAR L.100
34	AC000_E006_021	CLAMP
35	AC000_E006_049	CONTACTOR
36	AC000_E018_017	90° CONNECTOR
37	AC000_E006_047	CONTACTOR
38	AC000_E000_071	5 POLES CONNECTOR
39	XHY_C019_160	CONTROL PANEL BOX
40	XHY_C006_136	REMOTE CONTROL SWITCH SUPPORT
41	AC000_E006_097	REMOTE CONTROL SWITCH
42	AC000_E011_016	SOCKET
43	AC000_G006_003	ENGINE CONNECTOR
44	AC000_M038_036	BAR L.300
45	AC000_E000_040	12V 40A RELAY
46	AC000_E000_041	12V 70A RELAY

N.	CODE	DESCRIPTION
47	AC000_E006_111	VOLTMETRIC RELAY
48	AC000_M038_060	SPACER
49	XHY_C006_161	VOLTMETRIC RELAY SUPPORT
50	AC000_E006_060	TIMER
51	AC000_E012_028	RCBO 13A
52	AC000_E012_027	LAMP SWITCH
53	AC000_E018_019	CONNECTOR
54	XECOK2_C006_105	EXTERNAL CONTROL PANEL BOX
55	XHY_S010_140B	INSTRUMENTS SUPPORT
56	SI000_G006_010	ASSEMBLED STOP BUTTON
57	AC000_E006_052	STOP BUTTON CONTACT
58	AC000_E006_043	STOP BUTTON SUPPORT
59	AC000_E006_053	STOP BUTTON RATING PLATE
60	AC000_E006_051	STOP BUTTON
61	AC000_E011_010	INLET SOCKET 230V 16A
62	AC000_M038_035	EARTHING TERMINAL





SPARE PARTS TEAM



Norman Pipe
Operations/Spares Manager
tel. 01480 220 500
mob. 07495 670269
normanpipe@trimeuk.com



Marcus Wilson
Spares Part Sales
tel. 01480 220 500
marcuswilson@trimeuk.com



Wayne Brennan
Technical Support Manager
tel. 01480 220 500
mob. 07494 654373
waynebrennan@trimeuk.com



Sally Gunn
Accounts Administrator
tel. 01480 220 500
mob. 07494 654373
admin@trimeuk.com

SALES TEAM



Emma Cohen
Sales Assistant
tel. 01480 220 500
marketing@trimeuk.com



Mark Taylor
Sales Manger
tel. 01480 220 500
mob. 07539528017
marktaylor@trimeuk.com



Andrew Owen
Sales Manger
tel. 01480 220 500
mob. 07983871870
andrewowen@trimeuk.com



Paul Hay
Managing Director
tel. 01480 220 500
mob. 07836 522223
paulhay@trimeuk.com



Ray Caulfield
CEO
tel. 01480 220 500
mob. 07970140680
raycaulfield@trimeuk.com

