

## 354505 Decontamination Stations

## Dimensions:

20'-0" (L) x 8'-0" (W) x 8'-6" (H)

## **Problem Solved:**

This container was needed for field deployable decontamination.

## Description:

During transport, the cargo doors are shut to maintain the original container structure. When deployed, the cargo doors are opened to allow access. DropBox utilized a double ended cargo door container and provided recessed bulkheads for decontamination room access and utility access. The decontamination room included a common corridor with a full length trench drain, two showers, 250-gallon feed water tank and pump, and 250-gallon waste storage tank and pump. All surfaces and electrical devices were constructed of stainless steel. The utility space included a wall-mounted HVAC, tankless water heater, inlet power connection and cord holder, and panelboard.








At DropBox, Inc., we are Reinventing the Box™ with high quality, customizable, sustainable shipping container modifications and engineered enclosures that make us the design/build partner for customers around the world. With a proven track record for quality and customer service, DropBox, Inc. has planted its roots firmly throughout numerous industries and built longstanding relationships with customers through custom products that meet their company specific needs.



www.DropBoxInc.com sales@dropboxinc.com 740.532.7822



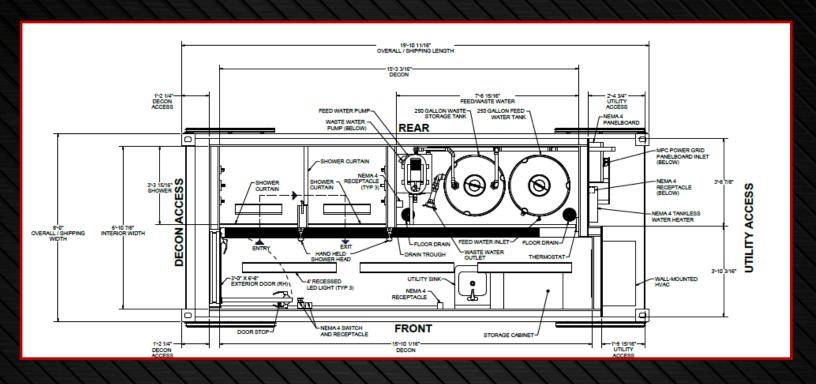



www.DropBoxInc.com sales@dropboxinc.com 740.532.7822